

[Manuals.plus](#) /

> [iPormis](#) /

> iPormis Full Size Lift-Up Storage Bed Frame User Manual

iPormis IPO484B3FBM

iPormis Full Size Lift-Up Storage Bed Frame User Manual

Model: IPO484B3FBM

Brand: iPormis

INTRODUCTION

This user manual provides comprehensive instructions for the assembly, operation, and maintenance of your iPormis Full Size Lift-Up Storage Bed Frame. Designed for comfort and practicality, this bed frame features a hydraulic lifting system for easy access to ample under-bed storage, a cozy wingback headboard, and a stable, noise-free structure. Please read this manual thoroughly before assembly and use to ensure proper setup and longevity of your product.

SAFETY INFORMATION

- Ensure all components are present and undamaged before beginning assembly. Do not proceed with assembly if any parts are missing or broken.
- Assembly should be performed by at least two adults to prevent injury.
- Keep small parts and packaging materials away from children and pets to avoid choking hazards.
- Tighten all screws and bolts securely, but do not overtighten. Periodically check and re-tighten fasteners to maintain stability.
- For optimal hydraulic system performance, always lower the bed frame with a mattress in place. Attempting to lower an empty frame may require significant force.
- Do not stand or jump on the bed frame.
- Ensure the bed frame is placed on a flat, level surface.
- The maximum weight recommendation for this bed frame is 1000 pounds. Do not exceed this limit.

PACKAGE CONTENTS

Please verify that all the following components are included in your package:

- 1 x Upholstered Lift-Up Bed Frame
- 1 x Wingback Headboard
- 12 x Wooden Slats
- 1 x Installation Manual (this document)
- Installation Tools & Accessories (hardware kit)



Image: Overview of all bed frame components included in the package.

SETUP AND ASSEMBLY

Assembly is required for this bed frame. Please follow the steps carefully. It is recommended to have two people for assembly.

Step 1: Prepare the Area and Unpack

Clear a spacious area for assembly. Lay out all components on a soft, clean surface to prevent scratches. Identify all parts using the included parts list (refer to the separate installation manual for detailed diagrams).

Step 2: Assemble the Frame Base

Connect the main frame sections using the provided bolts and tools. Ensure all connections are secure. The frame is designed with heavy-duty metal rods for stability.



Image: Detail of the stable frame structure with metal and wood components.

Step 3: Attach the Headboard

Secure the wingback headboard to the assembled frame. The headboard is upholstered in soft, skin-friendly linen fabric with foam padding for comfort.



Image: Detail of the comfortable fabric and foam padding on the headboard.

Step 4: Install Wooden Slats

Place the wooden slats across the frame. Ensure they are evenly spaced and secured according to the detailed installation manual. The slats feature an upgraded mute strip design and foam padding where they meet metal pipes to prevent creaks and squeaks.




1

Easy Assembly

2

Upgraded Mute
Strip Design

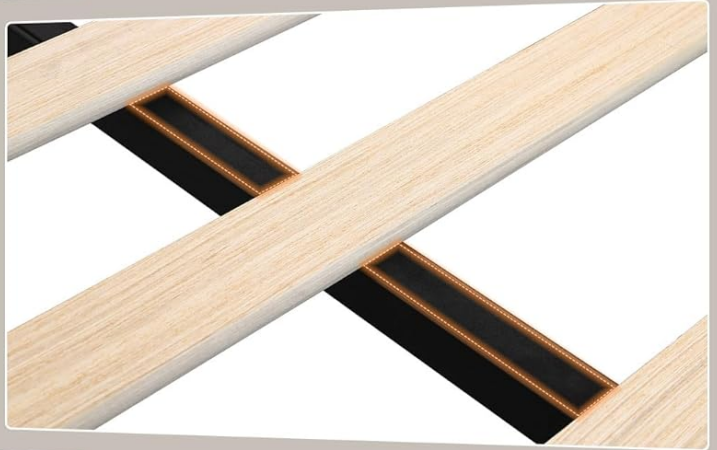

3

Stopping and
Anti-Falling Design



Image: Features highlighting easy assembly, mute strip design, and anti-falling mechanism.



Image: Detail of the upgraded mute strip design on the bed frame.



Image: Illustration of the 4-inch spacing between wooden slats.

Step 5: Install Hydraulic Lift Mechanism

Install the hydraulic lift mechanism as per the instructions in the separate manual. This system allows for effortless lifting of the mattress platform to access the storage space.



Hydraulic Lift
Mechanism

• • • Easy-Access Hidden Storage • • •

Easy Lifting



Image: Details of the hydraulic lift mechanism and the easy lifting strap.



Image: Detailed view of the hydraulic lift system.



Image: Connection point of the hydraulic lift mechanism.

Step 6: Final Checks

Once assembled, ensure all bolts are tightened and the frame is stable. Place your mattress on the bed frame. A mattress thickness of 8-12 inches is recommended for optimal performance and aesthetics.



Image: Recommended mattress thickness for the bed frame.

Accessing Under-Bed Storage

1. Ensure there are no obstructions on the bed or around the frame.
2. Locate the handle strap positioned at the foot of the bed.
3. Firmly grasp the handle strap and lift the mattress platform upwards. The hydraulic system will assist in lifting, making the process effortless.
4. Once fully lifted, the platform will remain securely in the open position, providing full access to the 12-inch deep storage space beneath.
5. To close, gently pull the platform downwards. The hydraulic system will control the descent, ensuring a smooth and quiet closing.



Image: Bed frame with mattress lifted, showcasing the under-bed storage.

Maximize Your Space with Out-of-Sight Storage

Large Capacity Under-bed Storage



4+
Luggage Cases



10+
Quilts



10+
Storage Boxes



20+
Shoes



Image: Illustration of the massive under-bed storage capacity.



Image: Demonstrating the easy lifting strap.

MAINTENANCE

- **Cleaning:** The upholstered parts of the bed frame should be dry cleaned only. For general cleaning, gently wipe with

a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.

- **Fastener Checks:** Periodically (e.g., every 3-6 months) check all bolts and screws to ensure they remain tight. Retighten if necessary to maintain the bed frame's stability and prevent squeaks.
- **Hydraulic System:** The hydraulic system is designed for long-term use. No specific maintenance is required for the hydraulic pistons themselves. Ensure the area around the pistons is kept clear of debris. Remember to always lower the frame with a mattress in place for optimal performance.
- **Slats:** Inspect wooden slats for any signs of damage or wear. Replace any broken slats immediately to ensure proper mattress support.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bed frame is squeaking.	Loose fasteners; slats rubbing against frame.	Check and tighten all bolts and screws. Ensure slats are properly seated and the mute strips are intact.
Hydraulic lift is difficult to lower.	Attempting to lower without a mattress; new hydraulic pistons.	Always lower the bed frame with a mattress on it. New hydraulic pistons may require a few cycles to loosen up.
Bed frame feels unstable.	Loose connections; uneven floor.	Re-check all assembly connections and tighten securely. Ensure the bed is on a flat, level surface.
Mattress slides on the frame.	Mattress not properly aligned; side wings not effective.	Ensure the mattress is centered on the frame. The wingback headboard's side wings are designed to help prevent sliding.

SPECIFICATIONS

Feature	Detail
Model Number	IPO484B3FBM
Size	Full
Color	Black
Product Dimensions (L x W x H)	78.5" x 56" x 42.5"
Material	Fabric, Wood, & Iron
Maximum Weight Recommendation	1000 Pounds
Box Spring Required	No
Assembly Required	Yes

Feature	Detail
Product Care Instructions	Dry Clean Only
Special Features	Fluted Wingback Headboard, Hydraulic System, Lift Up Storage, No Box Spring Needed, Squeak Resistant



Image: Summary of product specifications.

WARRANTY AND SUPPORT

For any questions, concerns, or warranty claims regarding your iPormis bed frame, please contact iPormis customer support. Refer to the contact information provided on the product packaging or the official iPormis website. Please have your model number (IPO484B3FBM) and purchase date ready when contacting support. For more information about iPormis products, visit the [iPormis Store on Amazon](#).

