

[Manuals.plus](#) /

› [HOWE](#) /

› HOWE California King Size Bed Frame with Corduroy Wingback Headboard, Black - Instruction Manual

HOWE BHB012

HOWE California King Size Bed Frame

MODEL: BHB012 - INSTRUCTION MANUAL

Introduction

Thank you for choosing the HOWE California King Size Bed Frame with Corduroy Wingback Headboard. This manual provides essential information for the safe assembly, operation, and maintenance of your new bed frame. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Image: The HOWE California King Size Bed Frame in Black, featuring a corduroy wingback headboard.

Safety Information

- **Weight Capacity:** Do not exceed a total weight of 1000 pounds on the bed frame.
- **Assembly Caution:** Be cautious while assembling to avoid injury.
- **Leg Handling:** Handle the solid wood legs carefully to avoid sharp edges.
- **Adult Assembly:** Two adults are recommended for assembly to ensure safety and ease of setup.
- **Proper Alignment:** Align all parts before fully tightening screws for a smoother and more secure setup.

Package Contents

Before assembly, please ensure all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Upholstered Headboard (50.8" Tall Wingback)
- Solid Wood Slats
- Center Support System
- Solid Wood Legs
- Hardware Pack (screws, bolts, tools)
- Installation Manual (this document)

Setup and Assembly

Assembly is estimated to take approximately 1.5 hours with two adults. Follow the included step-by-step instructions carefully. It is crucial to align all parts correctly before fully tightening any screws to prevent misalignment.



Image: Close-up of the bed frame's internal structure, highlighting EVA foam for noise reduction and quick-install wooden slats.

Key Assembly Tips:

- **Unpack Carefully:** Lay out all components on a soft, clean surface to prevent scratches.
- **Identify Parts:** Match all parts with the provided parts list in the hardware pack.
- **Hand-Tighten First:** Initially hand-tighten all screws and bolts. Once all components are in place and aligned, then fully tighten for a secure fit.
- **Slat Installation:** The solid wood slats are designed for quick installation and feature a hook-and-loop fastener (Velcro) design for secure placement.

Operating Instructions

This bed frame is designed to support a California King size mattress directly, eliminating the need for a box spring. Place your mattress evenly on the installed wooden slats. Ensure the mattress fits within the frame dimensions for optimal support and appearance.



Image: A person comfortably leaning against the padded wingback headboard, demonstrating its ergonomic design.

Headboard Comfort:

The 50.8-inch tall wingback headboard features premium corduroy upholstery and high-density foam padding, providing comfortable back support for reading, watching TV, or relaxing.

Maintenance

Regular maintenance will help prolong the life and appearance of your bed frame.

- **Cleaning Upholstery:** For general cleaning of the corduroy fabric, use a soft brush or vacuum with an upholstery attachment to remove dust and debris. For spills, blot immediately with a clean, dry cloth. Avoid harsh chemicals.
- **Under-Bed Clearance:** The 4.5-inch under-bed clearance allows for easy cleaning underneath the frame, including the use of robot vacuums.
- **Periodical Check:** Periodically check all screws and bolts to ensure they remain tight. Re-tighten if necessary.

IMMERSE IN SOFT CORDUROY



CLOUD
SOFTNESS



SKIN-FRIENDLY



TIMELESS
& ADAPTABLE

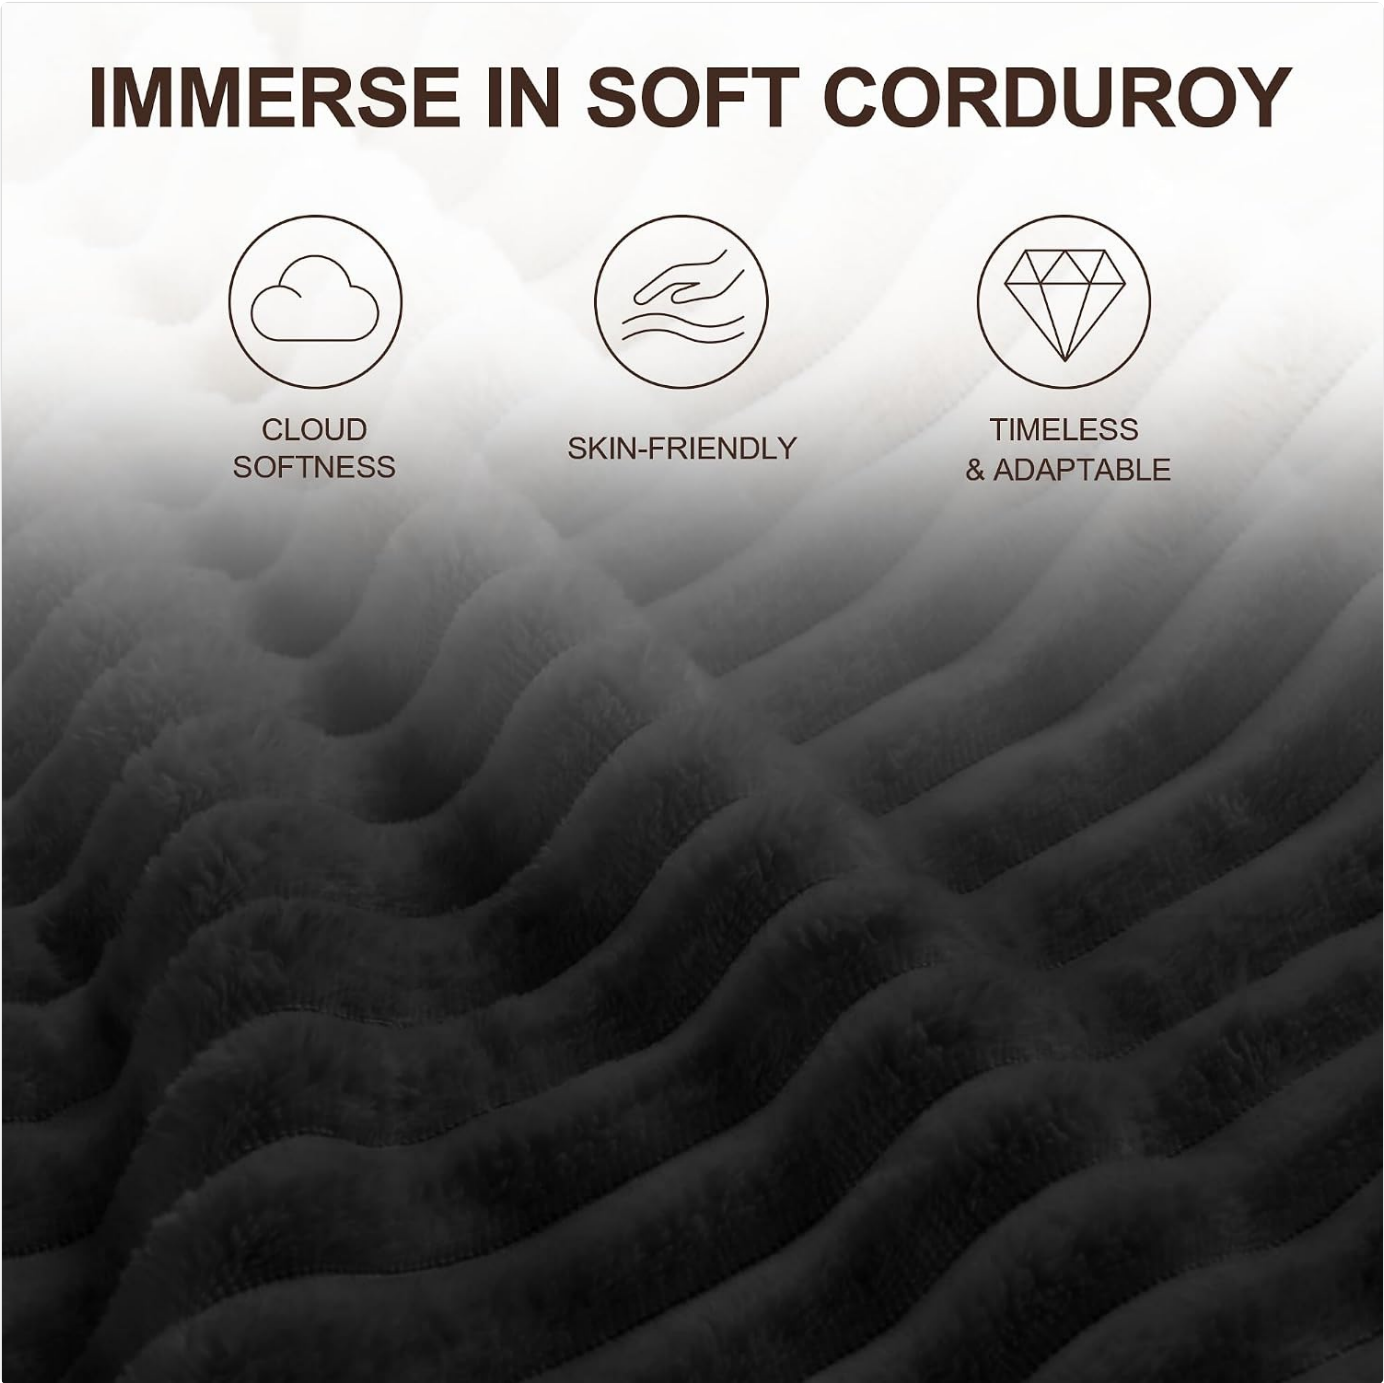


Image: A robot vacuum cleaning beneath the bed frame, showcasing the 4.5-inch under-bed clearance and solid wood legs.

Troubleshooting

- **Squeaking Noises:** If you experience squeaking, ensure all bolts are fully tightened. The EVA foam strips on the slats are designed to reduce slat-to-frame friction noise when properly assembled. Check that these strips are correctly positioned.
- **Unstable Frame:** Verify that all connections are secure and that the bed frame is on a level surface. Re-check assembly steps if instability persists.
- **Headboard Wobble:** Ensure the headboard is securely attached to the bed frame and all connecting hardware is tightened.

Specifications



Image: A detailed diagram illustrating the dimensions of the California King bed frame.

Feature	Detail
Model Number	BHB012
Size	California King
Color	Black
Material	Engineered Wood, Fabric (Headboard)

Product Dimensions (L x W x H)	90.6" x 80" x 50.8"
Headboard Height	50.8"
Under-Bed Clearance	4.5"
Recommended Mattress Thickness	10"-13"
Weight Capacity	1000 lbs
Box Spring Required	No
Assembly Time (Approx.)	1.5 Hours (2 adults)

Warranty Information

Specific warranty details for this HOWE product are not provided in the available information. Please refer to your purchase documentation or contact the retailer for warranty terms and conditions.

Customer Support

For any questions, assistance with assembly, or to report missing/damaged parts, please contact the retailer or manufacturer directly. Contact information is typically found on your purchase receipt or the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

