

[Manuals.plus](#) /

› [KOMFOTT](#) /

› KOMFOTT Twin Size Upholstered Bed Frame Instruction Manual

## KOMFOTT 11283-HU-KT

# KOMFOTT Twin Size Upholstered Bed Frame

Model: 11283-HU-KT

### IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before assembly and use. Keep this manual for future reference.

- This bed frame has a maximum weight capacity of **330 lbs**. Do not exceed this weight limit to prevent injury or damage.
- Always use a suitable mattress with the bed frame. Avoid placing heavy objects on the bed that could compromise its structural integrity.
- Never use this product without proper and complete assembly. Ensure all components are securely fastened according to the assembly instructions.
- Regularly check all bolts and screws to ensure they remain tight. Retighten as necessary.
- Keep small parts away from children during assembly to prevent choking hazards.
- Use the bed frame on a flat, level surface.

### PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- 1 x KOMFOTT Twin Size Upholstered Bed Frame (All frame components, headboard, slats, and hardware)
- 1 x User Manual

### SETUP AND ASSEMBLY

The KOMFOTT Twin Size Upholstered Bed Frame is designed for easy assembly. Follow the detailed instructions provided in the included user manual for step-by-step guidance. Ensure you have adequate


space and the necessary tools (usually an Allen wrench, often included) before starting.

## Assembly Overview

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Attach the side rails to the headboard and footboard using the provided hardware.
3. Install the center support beam and support legs, if applicable.
4. Place the LVL slats onto the bed frame, ensuring they are evenly spaced and secured.
5. Tighten all connections firmly, but do not overtighten.



**Figure 1: Sturdy Construction.** This image illustrates the robust frame and support legs, highlighting the bed's enduring and deformation-resistant design. It shows the frame without a mattress, indicating the structural components.

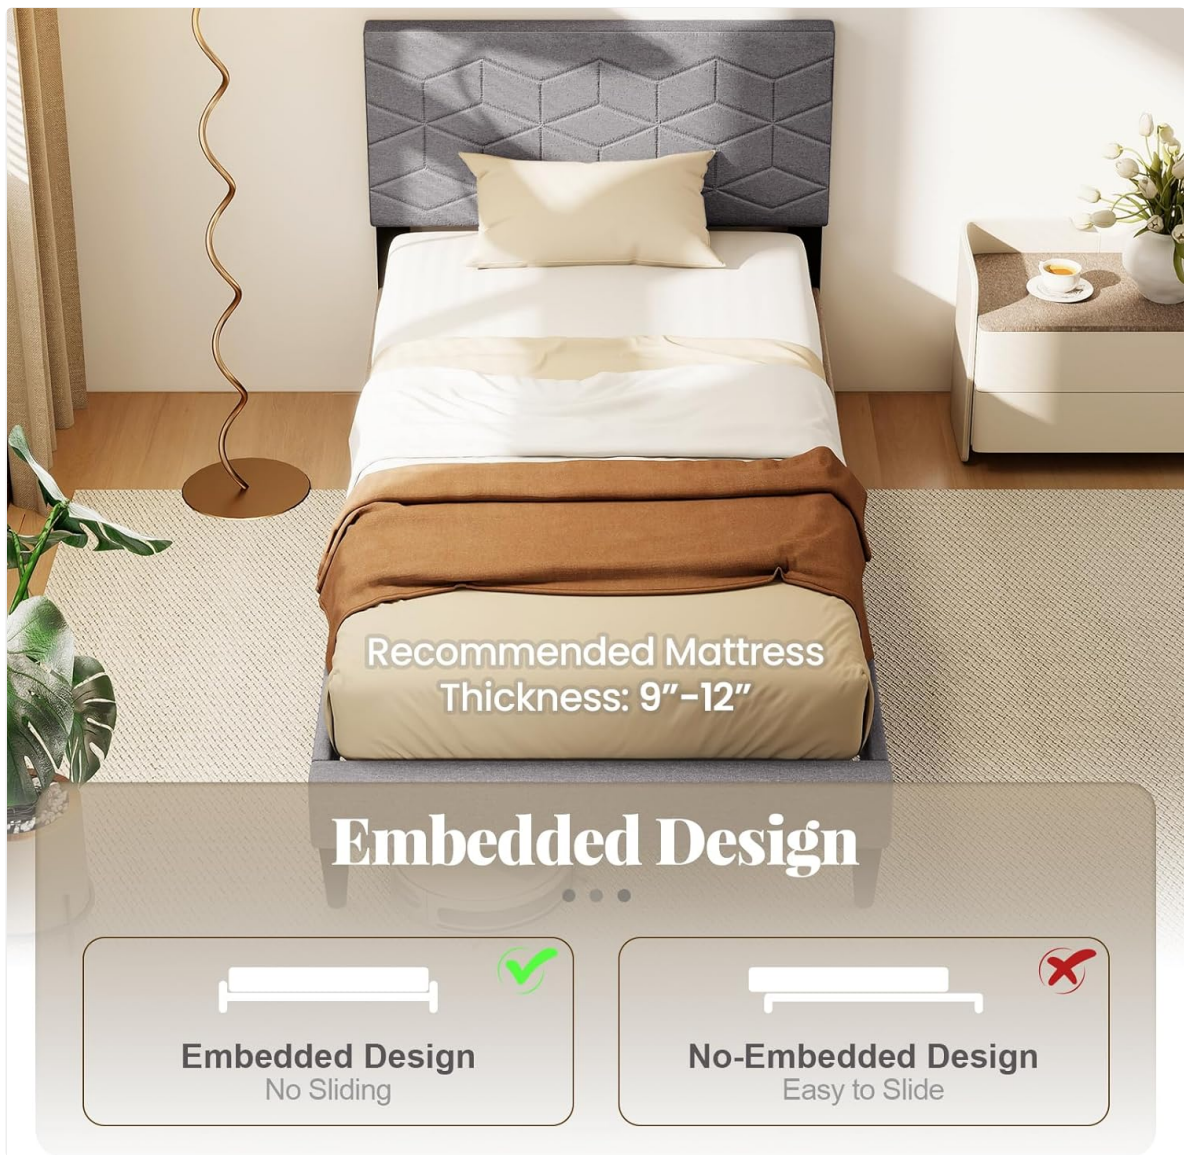

**Figure 2: Slats Installation.** This image displays the bed frame with its heavy-duty LVL slats properly installed, ready to support a mattress. It emphasizes the slat system that eliminates the need for a box spring.

## OPERATING INSTRUCTIONS

Once assembled, the KOMFOTT Twin Size Upholstered Bed Frame is ready for use. It is designed to provide a stable and comfortable sleeping surface without the need for a box spring.

### Mattress Placement

- Place your mattress directly onto the installed LVL slats. The bed frame features an embedded design to prevent the mattress from sliding, ensuring it stays securely in place.
- The bed frame is optimized for mattresses between **9" and 12" thick** for optimal support and aesthetic fit.



**Figure 3: Embedded Design.** This image visually explains the embedded design feature, which securely holds the mattress in place and prevents it from sliding off the frame, a common issue with non-embedded designs.

### **Under-Bed Storage**

The bed frame offers a **6-inch clearance** from the ground, providing ample space for under-bed storage. This clearance also facilitates easy cleaning, including access for robot vacuums.

# Upholstered Headboard

Transform your sleeping space into a haven of luxury and softness



Breathable Linen Fabric



Soft Sponge



Skin-friendly



wear-resistant



**Figure 4: Ample Storage Space.** This image highlights the 6-inch clearance beneath the bed frame, demonstrating its utility for storage and ease of cleaning, even with a robot vacuum.

## MAINTENANCE

Proper maintenance will extend the life and appearance of your bed frame.

- **Cleaning the Upholstered Headboard:** The headboard is upholstered in breathable linen fabric. For general cleaning, gently vacuum with an upholstery attachment. For spills, blot immediately with a clean, dry cloth. For stubborn stains, consult a professional upholstery cleaner or use a mild fabric cleaner suitable for linen, testing on an inconspicuous area first.
- **Frame Cleaning:** Wipe down the frame and legs with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Hardware Check:** Periodically check all bolts and screws for tightness. Retighten as needed to maintain stability and prevent squeaking.
- **Foot Pads:** Ensure the non-slip foot pads are intact and in place to protect your flooring and keep the bed stable.

## Sturdy Construction



**Figure 5: Upholstered Headboard Details.** This image provides a close-up view of the headboard's breathable linen fabric and soft sponge padding, illustrating its skin-friendly and wear-resistant qualities, which are important for maintenance.

## TROUBLESHOOTING

If you encounter any issues with your bed frame, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Bed frame is wobbly or unstable.	Loose bolts or screws. Uneven floor.	Check and tighten all assembly hardware. Ensure the bed is on a flat, level surface. Adjust foot pads if necessary.
Squeaking noises.	Loose connections. Slats not properly seated.	Retighten all bolts and screws. Ensure all LVL slats are correctly positioned and secured in their designated slots.

Problem	Possible Cause	Solution
Mattress slides on the frame.	Mattress not properly seated within the embedded design.	Ensure the mattress is fully placed within the frame's embedded design. The design is intended to prevent sliding.
Missing parts during assembly.	Packaging error.	Contact KOMFOTT customer support with your purchase details and a list of missing parts.

## SPECIFICATIONS

Feature	Detail
Model Number	11283-HU-KT
Size	Twin
Color	Grey
Material	MDF, Engineered Wood, LVL Slats, Plastic, Foam, Linen Fabric
Overall Dimensions (L x W x H)	80" x 43" x 38"
Bed Surface Dimensions (L x W)	76" x 39"
Recommended Mattress Thickness	9" - 12"
Foot Board Height	12"
Raised Height from Ground	6"
Weight Capacity	330 lbs
Net Weight	44 lbs
Assembly Required	Yes

# Twin Size



**Figure 6: Product Dimensions.** This diagram provides a clear visual representation of the bed frame's key measurements, including overall length (80"), width (43"), headboard height (38"), bed surface width (39"), and under-bed clearance (6").

## WARRANTY INFORMATION

This KOMFOTT bed frame comes with a **Limited Warranty**. Please refer to the specific terms and conditions provided with your purchase documentation for details regarding coverage, duration, and claims process. Keep your proof of purchase for warranty validation.

## CUSTOMER SUPPORT

For any questions, concerns, or assistance with your KOMFOTT Twin Size Upholstered Bed Frame, please contact KOMFOTT customer support. Have your model number (11283-HU-KT) and purchase information ready when you call or email.

You can often find contact information on the KOMFOTT official website or through the retailer where you purchased the product.

