

Bobve MH1032

Bobve Farmhouse Queen Murphy Bed MH1032 Instruction Manual

Model: MH1032

1. IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before assembly and use of the Bobve Farmhouse Queen Murphy Bed. Failure to follow these instructions may result in injury or product damage.

- Always use caution when lifting and lowering the bed.
- Do not exceed the maximum weight recommendation of 800 pounds (including mattress).
- Be careful around sharp edges during assembly and use.
- Follow the assembly instructions carefully to ensure stability and prevent collapse.
- Ensure the bed frame is weighted at least 66 pounds when in use to prevent it from rebounding upwards unexpectedly.
- This product is designed for adult use.

2. PRODUCT OVERVIEW

The Bobve Farmhouse Queen Murphy Bed is a space-saving furniture solution designed for multi-purpose rooms such as guest rooms, home offices, or apartments. It features a wall-mounted design with a hydraulic rod system for smooth operation and a comfortable sleeping experience.

Key Features:

- **Space-Saving Design:** Folds vertically against the wall to maximize floor space.
- **Hydraulic Rod System:** Ensures smooth and controlled lifting and lowering of the bed.
- **Upholstered Headboard:** Features silky fine velvet fabric for comfort.
- **Solid Wood Bed Board Support:** Enhances bearing capacity and durability.
- **Flexible Slats:** Designed to contour to the body for improved comfort.
- **Wall-Mounted:** Secures to wall studs for stability.



Image 2.1: The Bobve Farmhouse Queen Murphy Bed in its deployed position within a room setting.

3. COMPONENTS LIST

Before beginning assembly, please ensure all components listed below are present and undamaged. If any parts are missing or damaged, contact customer support.

- Main Bed Frame Assembly
- Hydraulic Rods (pre-installed or separate)
- Wood Slats for Mattress Support
- Upholstered Headboard
- Wall Mounting Hardware (screws, anchors for wooden walls)
- Assembly Tools (basic wrenches, Allen keys)
- Instruction Manual (this document)
- Fixed Straps for Mattress Stability
- Stowable Bed Legs



Image 3.1: Front view of the bed frame components, including the upholstered headboard and wooden slats.

4. SETUP AND ASSEMBLY

Assembly of the Bobve Farmhouse Queen Murphy Bed requires careful attention to detail. It is strongly

recommended that **two or more people** coordinate the assembly process.

4.1 Pre-Assembly Checklist:

- Verify all components are present using the Components List (Section 3).
- Ensure you have adequate space for assembly.
- Identify the location for installation. The bed must be mounted to wooden wall studs. The included wall mounting accessories are specifically for wooden walls.
- Gather any additional tools that may be required (e.g., stud finder, drill, level, measuring tape).

4.2 Assembly Steps:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Assemble Main Frame:** Follow the detailed diagrams in the included printed installation manual to assemble the main bed frame structure. Pay close attention to the orientation of each piece.
3. **Install Hydraulic Rods:** Attach the hydraulic tension rods as instructed. These rods are crucial for the smooth operation of the bed.
4. **Attach Headboard and Slats:** Secure the upholstered headboard and install the wooden slats onto the bed frame. Ensure slats are evenly spaced and firmly attached.
5. **Wall Mounting:**
 - Locate wooden wall studs using a stud finder. Mark their positions accurately.
 - Position the assembled Murphy bed frame against the wall at the desired location.
 - Using the provided wall mounting hardware, securely fasten the bed frame to the wooden wall studs. Ensure all connections are tight and stable to prevent tipping.
6. **Attach Stowable Legs:** Install the stowable bed legs according to the instructions.
7. **Final Checks:** Double-check all screws and connections to ensure they are tight and secure. Test the folding mechanism carefully before placing a mattress.

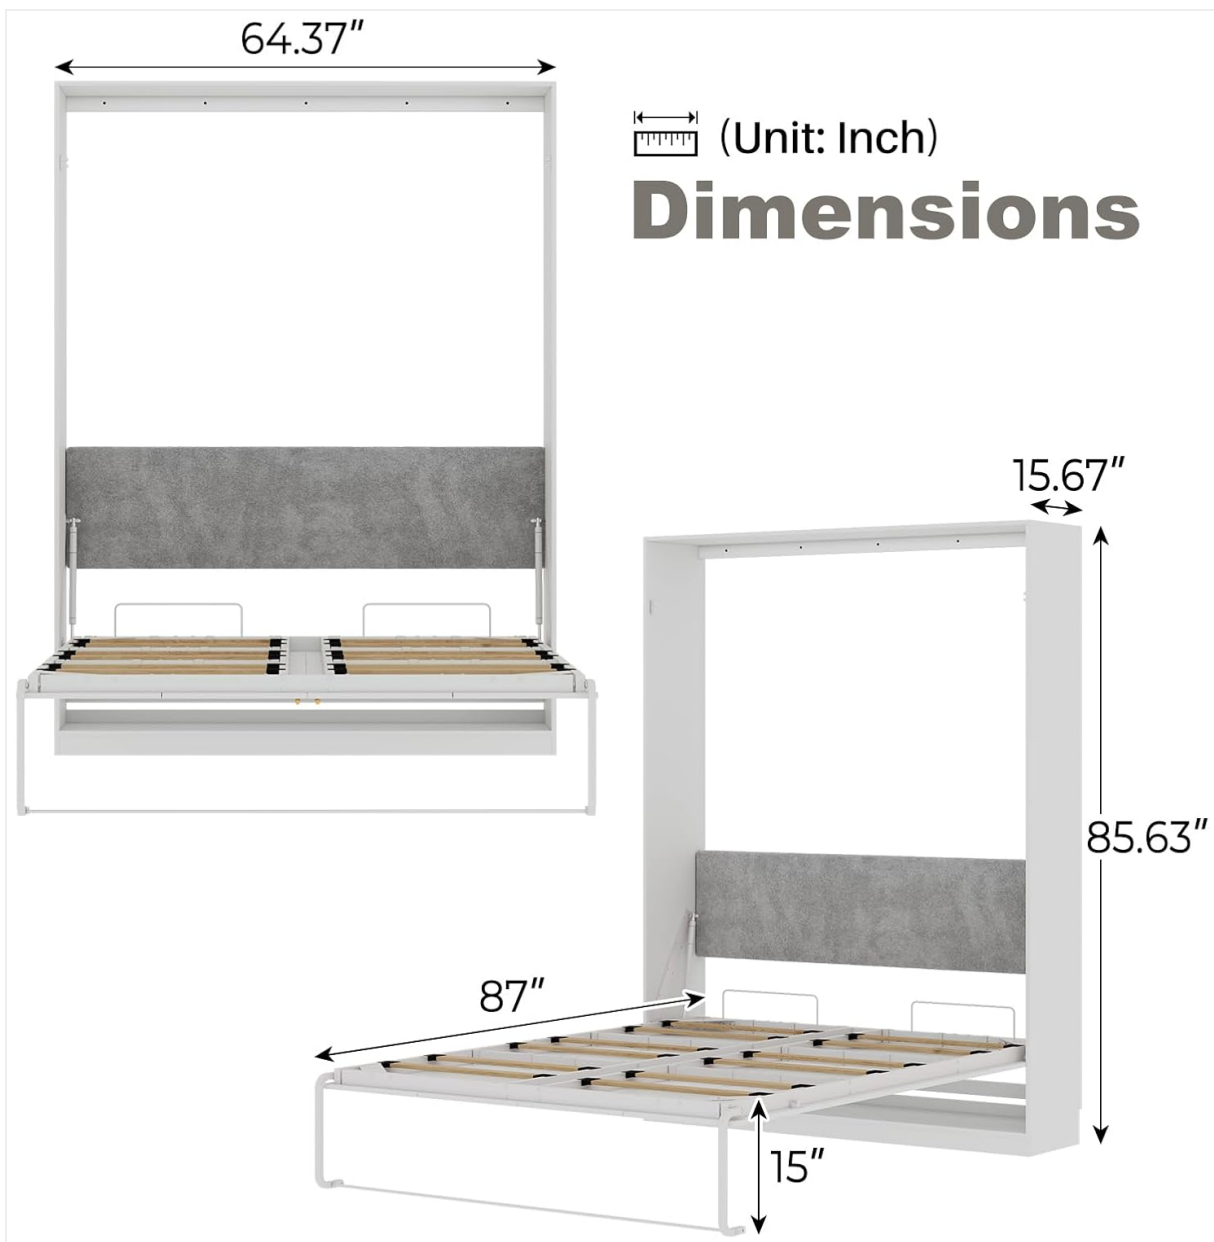


Image 4.1: Dimensional diagram of the Murphy bed, illustrating its compact folded form and extended sleeping position.



Image 4.2: Detailed features including hydraulic rods, mattress thickness recommendation, stowable legs, and wall mounting screws.

5. OPERATING INSTRUCTIONS

The Bobve Murphy Bed is designed for easy conversion between its folded and deployed states.

5.1 Deploying the Bed:

1. **Clear Area:** Ensure the area in front of the Murphy bed is clear of obstructions before lowering.
2. **Unlock (if applicable):** If your model includes a locking mechanism, disengage it.
3. **Gently Lower:** Grasp the bed frame handles (if present) or the front panel and gently pull the bed downwards. The hydraulic rods will assist in a controlled descent.
4. **Extend Legs:** Once the bed is partially lowered, extend the stowable legs to support the bed frame. Ensure they are fully locked into position.
5. **Full Deployment:** Continue to lower the bed until it is fully horizontal and supported by its legs.
6. **Weight Requirement:** For safe use, ensure a mattress is placed on the bed frame. The bed frame requires at least 66 pounds of weight to remain stable in the deployed position.



Image 5.1: The Murphy bed in its fully deployed state with a mattress.

5.2 Folding the Bed:

1. **Remove Bedding:** Remove all bedding, pillows, and mattress if they interfere with the folding mechanism. Ensure the mattress is secured with the fixed straps if designed to remain on the bed during folding.
2. **Retract Legs:** Retract the stowable legs and secure them in their folded position.
3. **Lift Gently:** Grasp the bed frame handles or the front edge of the bed and gently lift upwards. The hydraulic rods will assist in lifting the bed smoothly.
4. **Secure:** Continue lifting until the bed is fully vertical and flush against the wall. Engage any locking mechanisms if available.



Image 5.2: The Murphy bed being folded into its upright, space-saving position.

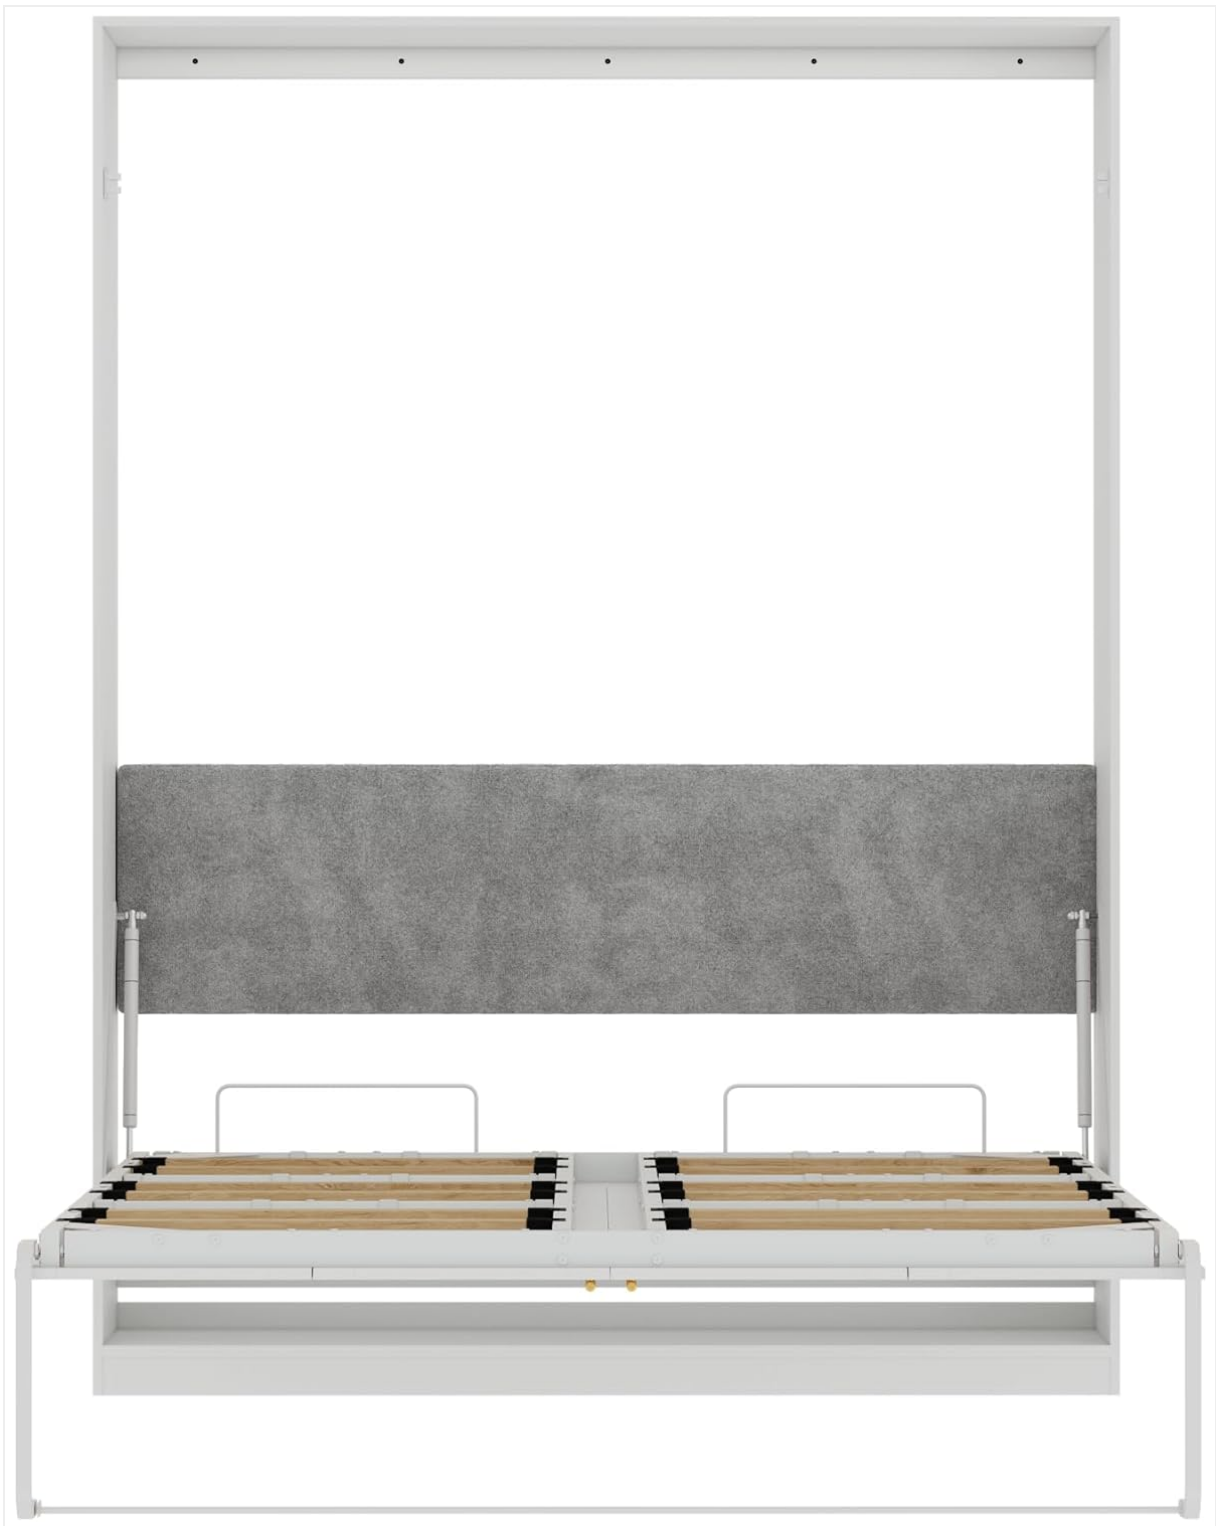


Image 5.3: The Murphy bed fully folded, presenting a clean cabinet-like appearance.

6. MAINTENANCE

Regular maintenance will help prolong the life and functionality of your Bobve Murphy Bed.

- **Cleaning:** Wipe the exterior surfaces with a dry cloth. For the upholstered headboard, use a soft, dry brush or a vacuum cleaner with an upholstery attachment to remove dust. Avoid harsh chemicals or abrasive cleaners.
- **Hardware Check:** Periodically check all screws, bolts, and wall mounting hardware to ensure they remain tight. Retighten if necessary.
- **Hydraulic Rods:** Inspect the hydraulic rods for any signs of wear or damage. If the bed becomes difficult to lift or lower smoothly, contact customer support. Do not attempt to repair hydraulic rods

yourself.

- **Slats:** Ensure all wooden slats are intact and properly seated in their holders. Replace any broken slats promptly.

7. TROUBLESHOOTING

If you encounter issues with your Bobve Murphy Bed, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Bed is difficult to lift or lower.	Hydraulic rods may be stiff or damaged; obstructions in the mechanism.	Ensure no obstructions. If rods are stiff, apply a small amount of silicone lubricant (avoid oil-based lubricants). If damaged, contact customer support for replacement.
Bed rebounds upwards when deployed.	Insufficient weight on the bed frame.	Ensure a mattress is placed on the bed frame. The bed frame requires at least 66 pounds of weight to remain stable in the deployed position.
Bed feels unstable or wobbly.	Loose wall mounting hardware; improper installation; damaged components.	Check and retighten all wall mounting screws and frame connections. Verify the bed is securely fastened to wooden wall studs. If components are damaged, contact customer support.
Decorative front panels are misaligned.	Improper installation of panels.	Review the assembly instructions for the front panels. Adjust their positioning and re-secure them as needed.

If the problem persists after attempting these solutions, please contact Bobve customer support for further assistance.

8. SPECIFICATIONS

Feature	Detail
Model Number	MH1032
Brand	Bobve
Size	Queen (U.S. Standard)
Product Dimensions (L x W x H)	85.63" x 64.37" x 15.67"
Item Weight	120 Pounds
Maximum Weight Capacity	800 Pounds (including mattress)
Recommended Mattress Thickness	8-10 inches

Feature	Detail
Color	White
Upholstery Fabric Type	Velvet (Headboard)
Exterior Finish Type	Laminated Walnut (White color variant)
Assembly Required	Yes (2+ people recommended)
Wall Mounting	Requires mounting to wooden wall studs. Hardware included for wooden walls only.

9. WARRANTY AND SUPPORT

The Bobve Farmhouse Queen Murphy Bed comes with a **Limited Warranty**. For specific details regarding warranty coverage, terms, and conditions, please refer to the warranty documentation included with your purchase or contact Bobve customer support.

For technical assistance, missing parts, or warranty claims, please contact Bobve customer support through the retailer where the product was purchased or visit the official Bobve website for contact information.