



[Manuals.plus](#) /

› [MCombo](#) /

› MCombo PR646M1 56-inch Zero Wall Power Recliner Loveseat User Manual

## MCombo 6160-PR646

# MCombo PR646M1 56-inch Zero Wall Power Recliner Loveseat

User Manual

## INTRODUCTION

Thank you for choosing the MCombo PR646M1 Zero Wall Power Recliner Loveseat. This manual provides essential information for the safe assembly, operation, and maintenance of your new loveseat. Please read it thoroughly before use and retain it for future reference.



Image: The MCombo PR646M1 56-inch Zero Wall Power Recliner Loveseat in beige.

## SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- Keep children and pets away from the reclining mechanism.
- Ensure no obstructions are present around the loveseat when reclining.
- Do not stand on the footrest or armrests.
- Avoid placing heavy objects on the loveseat when it is reclined.
- Disconnect power before cleaning or performing maintenance.
- Maximum weight capacity: 700 pounds (350 pounds per seat).

## PARTS LIST

Before assembly, verify that all parts are present and undamaged. The loveseat is delivered in 3 boxes.

- Left Base
- Right Base
- Left Armrest
- Right Armrest
- Left Backrest
- Right Backrest
- Power Adapter
- Instruction Manual
- Assembly Tools (included)

**Ideal Height : 5'3"-5'9" Max Capacity : 350 lbs**



TV



Reclined

Image: Dimensions of the MCombo PR646M1 Loveseat, showing overall width, depth, and height, as well as seat and backrest measurements.

## ASSEMBLY INSTRUCTIONS

Assembly is tool-free and can be completed by one person, though two people may find it easier. Follow these steps:

1. **Prepare the Bases:** Place the left and right bases on a flat, stable surface. Ensure the metal brackets on each armrest are correctly aligned with both corresponding brackets on the base. It is crucial to engage both brackets to ensure stability and prevent the armrest from detaching.
2. **Attach Armrests:** Carefully slide the left and right armrests onto their respective bases, ensuring they click securely into place.
3. **Install Backrests:** Slide the left and right backrests onto the metal posts at the rear of the bases. Pull up on the backrests to confirm they are locked in place.
4. **Connect Wires:** Locate the wiring for the power recline and USB/Type-C ports. Connect all wires tightly. Ensure no wires are positioned where they could be pinched or damaged by the frame during operation.
5. **Power Connection:** Connect the power adapter to the loveseat's power input and then plug it into a wall outlet. Turn on the power switch, usually located near the power input.

Your browser does not support the video tag.

Video: An official MCombo assembly guide demonstrating the step-by-step process for setting up a Power Reclining Sofa, including attaching bases, armrests, backrests, and connecting wires. While the video title mentions PR464M1, the assembly steps are generally applicable to the PR646M1 model.

## OPERATING INSTRUCTIONS

Your MCombo loveseat features dual power recline and convenient charging ports.

### Reclining Function

- Each seat has an independent control panel located on the side of the armrest.
- Press and hold the recline button to extend the footrest and recline the backrest.
- Release the button at your desired position. The loveseat offers infinite reclining positions up to 140 degrees.
- To return to the upright position, press and hold the opposite button until the loveseat is fully closed.



Image: Close-up of the control panel on the MCombo PR646M1 Loveseat, featuring buttons for recline and integrated USB and Type-C charging ports.

### **USB & Type-C Charging Ports**

- Each control panel includes dual USB and Type-C charging ports.
- Simply plug your device's charging cable into the appropriate port to charge.

### **Zero-Wall Feature**

This loveseat is designed to be placed directly against a wall. As you recline, the seats glide forward, ensuring the backrest never touches the wall, maximizing space in smaller rooms or RVs.

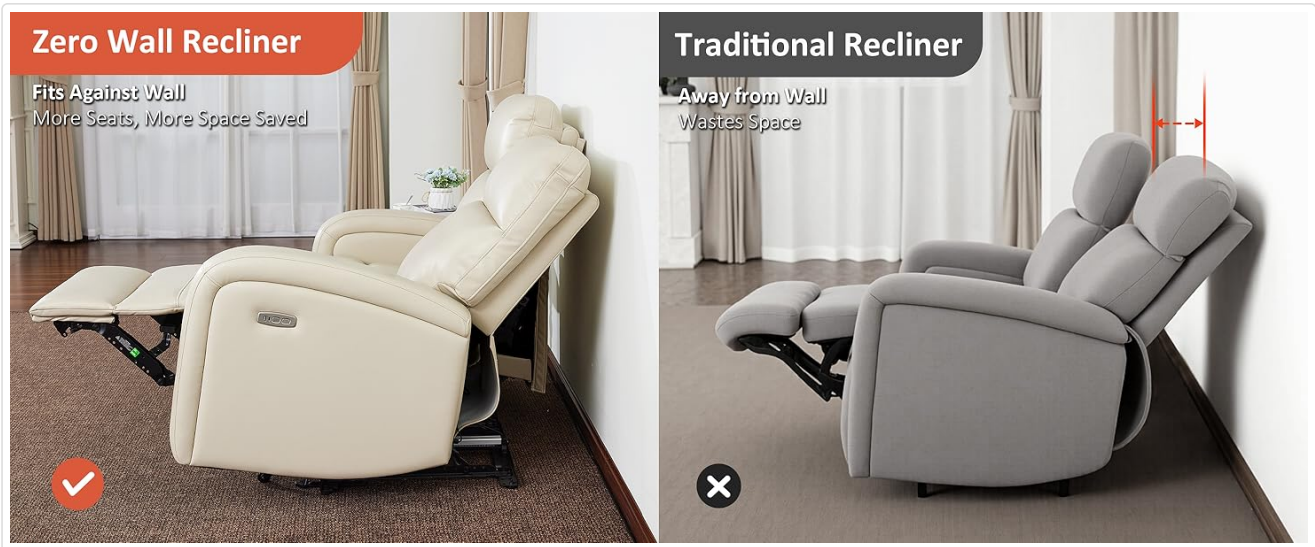


Image: A visual comparison highlighting the space-saving "Zero Wall" feature of the MCombo recliner, showing it can be placed directly against a wall unlike traditional recliners.

Your browser does not support the video tag.

Video: An official MCombo video demonstrating the "Zero Wall" feature and power recline functionality of the PR646 loveseat, showing how it reclines without needing wall clearance.

## CARE AND MAINTENANCE

Proper care will extend the life and appearance of your loveseat.

- **Cleaning:** Spot clean with a damp cloth. Avoid harsh chemicals or abrasive cleaners, as they may damage the faux leather upholstery.
- **Spills:** Blot spills immediately with a clean, dry cloth. Do not rub.
- **General Care:** Regularly dust the surface. Keep the loveseat away from direct sunlight and heat sources to prevent fading and material degradation.
- **Mechanism:** Periodically check all connections and moving parts to ensure they are secure. Do not lubricate the reclining mechanism unless specifically instructed by MCombo support.

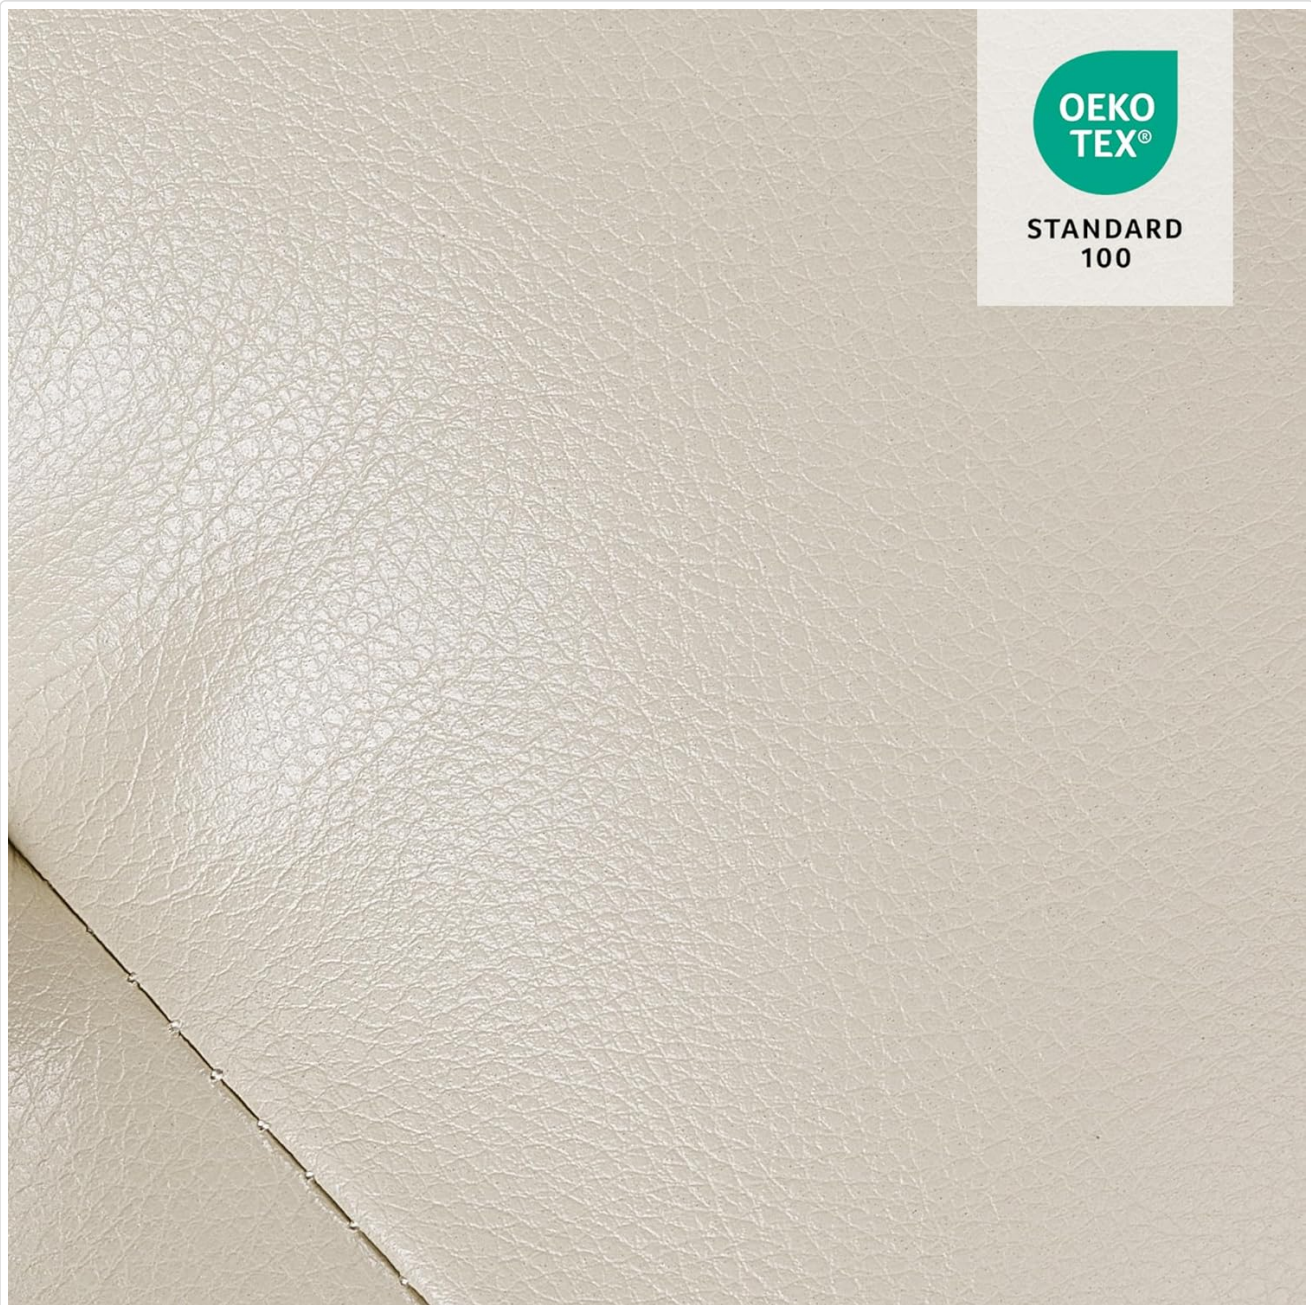


Image: A hand pressing into the cushion of the MCombo PR646M1 Loveseat, illustrating the medium-firmness of the seating.

## TROUBLESHOOTING

If you encounter issues with your loveseat, refer to the following common solutions:

- **Armrest feels loose or detaches:** Ensure both metal brackets on each armrest are fully mounted onto the base. If only one bracket is engaged, it can lead to instability.
- **Backrest is not secure:** Verify that the backrest inserts are fully locked into the base. Gently pull up on the backrest to confirm it is firmly in place.
- **Reclining function or charging ports not working:**
  - a. Check that all electrical wires are connected tightly.
  - b. Ensure the power adapter is securely plugged into both the loveseat and a working wall outlet.
  - c. Confirm the power switch (usually near the power input) is in the "ON" position.
  - d. Inspect all wires to ensure they are not pinched or pressed by the frame, which can cause damage and prevent operation.

- **General instability:** Double-check that all assembly screws are tightened.


## SPECIFICATIONS

Feature	Detail
Brand	MCombo
Model Number	6160-PR646
Product Dimensions (D x W x H)	29.1"D x 56"W x 41.3"H
Item Weight	204 Pounds
Weight Limit	700 Pounds
Seating Capacity	2
Color	Beige
Upholstery Fabric Type	Faux Leather
Frame Material Type	Wood
Seat Fill Material	Foam
Seat Back Fill Material	Cotton
Item Firmness Description	Medium Firm
Reclining Position Count	Infinite reclining positions
Additional Features	Easy to Assemble, Ergonomic, Recliner, Space Saving, USB Charging Ports
Product Care Instructions	Spot Clean with Damp Cloth

## Certifications

This product is manufactured with attention to quality and sustainability:

- **OEKO-TEX certified fabrics:** Free from harmful substances.
- **CertiPUR-US certified foam:** Low VOC emissions.
- **FSC-Certified wood frame:** Sourced from sustainably managed forests.

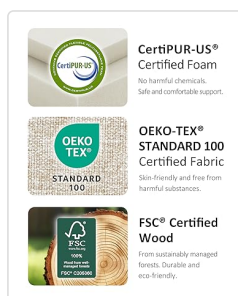

CertiPUR-US Certified Foam



Fast Shipping



Free Returns



Quick Response

OEKO-TEX Certified Fabric



FSC Certified Wood

## WARRANTY AND SUPPORT

### Warranty Information

Your MCombo PR646M1 Loveseat is backed by a **2-year limited warranty**. This warranty covers free replacements for:

- Reclining Mechanisms
- Electrical Systems
- Upholstery & Cushions
- Wood/Metal Frame Structures

Please retain your proof of purchase for warranty claims.

### Customer Support

For any questions, assistance, or warranty claims, please contact MCombo customer support. You can visit the official MCombo store for more information and contact details:

[Visit the MCombo Store on Amazon](#)