

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bellemave](#) /

› [Bellemave Heavy Duty Full Size Loft Bed Instruction Manual](#)

Bellemave Heavy Duty Loft Bed

Bellemave Heavy Duty Full Size Loft Bed Instruction Manual

Model: Heavy Duty Loft Bed

IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before assembling and using this product. Failure to follow these instructions may result in serious injury.

- Always follow the assembly instructions carefully to prevent instability.
- Be cautious when handling the heavy-duty steel frame to avoid injury.
- Supervise children when they are using the ladder to ensure their safety.
- Ensure all connections are tight before use. Periodically check and re-tighten as necessary.
- Do not allow more than one person on the upper bunk.
- Use only mattresses that meet the recommended dimensions and thickness to ensure proper guardrail height.
- This loft bed is designed for a full-size mattress.
- Do not use substitute parts. Contact Bellemave for replacement parts.
- Keep these instructions for future reference.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Bellemave
Model Number	Heavy Duty Loft Bed
Size	Full
Product Dimensions	77.6"L x 56.7"W x 64.6"H
Material	Steel (Powder Coated Finish)
Color	Black

Special Features	Guardrails, Built-in Ladders, Noise-Free Design, No Box Spring Needed, Space Saving
Included Components	Guardrails, Ladders, Slats (19pcs + 1 center support bar)
Under-bed Clearance	51 inches
Assembly Required	Yes
Weight Capacity	350 lbs

UNIT:INCH

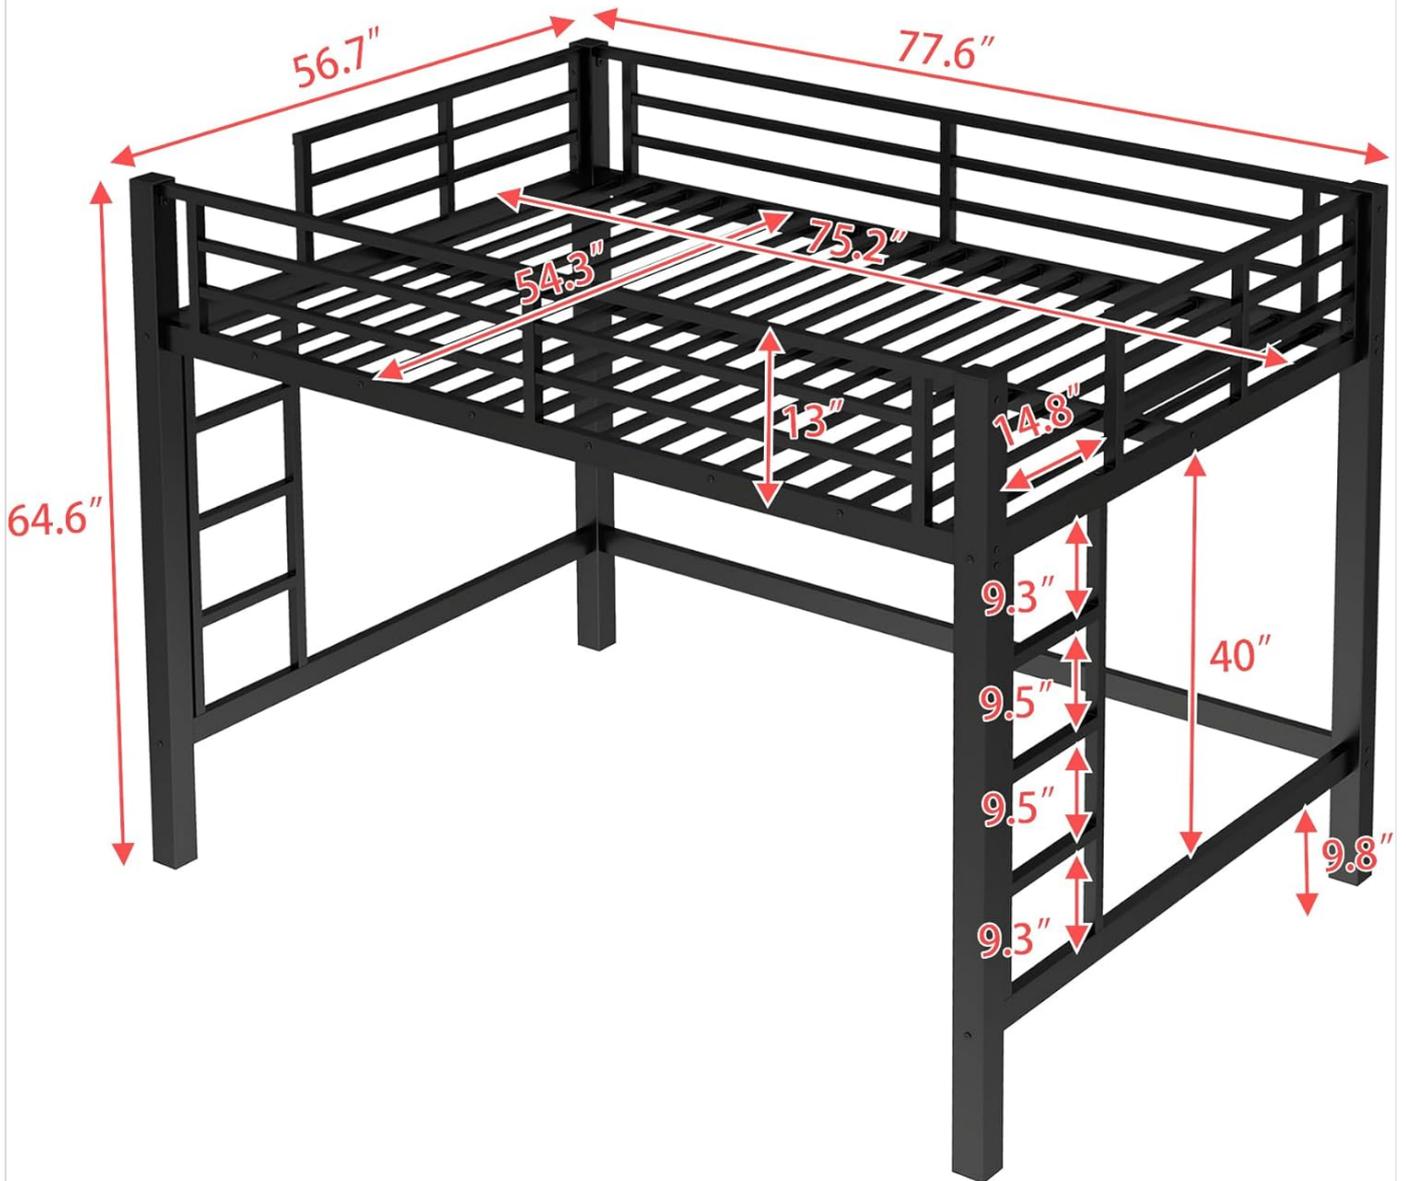


Figure 1: Detailed dimensions of the Bellemave Full Size Loft Bed. The bed measures 77.6 inches in length, 56.7 inches in width, and 64.6 inches in height. The under-bed clearance is 51 inches.

PACKAGE CONTENTS

Before beginning assembly, ensure all parts are present and undamaged. This product ships in 2 boxes. Refer to the assembly diagram for part identification.

Your browser does not support the video tag.

Video 1: An overview of the Bellemave Full Loft Bed assembly instructions, showing the bed parts view and part list. This video provides a visual guide to identify all components before starting assembly.

ASSEMBLY INSTRUCTIONS (SETUP)

Follow these steps carefully for proper assembly. It is recommended to have two people for assembly.

1. Step 1: Assemble the Side Frames.

Attach the ladder sections (parts 7, 8, 9) to the main vertical posts (parts 1, 2) using screws D. Repeat this step for both side frames.

Your browser does not support the video tag.

Video 2: Visual guide for Step 1 of assembly, showing how to connect the ladder sections to the vertical posts. This segment illustrates the initial framing of the loft bed.

2. Step 2: Connect the Side Frames.

Connect the two assembled side frames using the long support bar (part 10) and the top bed frame sections (part 6). Secure with screws D and C, and part F. Ensure the frame is stable.



Figure 2: Illustration of connecting the two side frames with the main support bar and top bed frame sections. This image

demonstrates the structural connection of the bed's main components.

3. Step 3: Install Bed Slats Supports.

Attach the slat support bars (part 3) to the inside of the bed frame using screws E. These bars will hold the mattress slats.

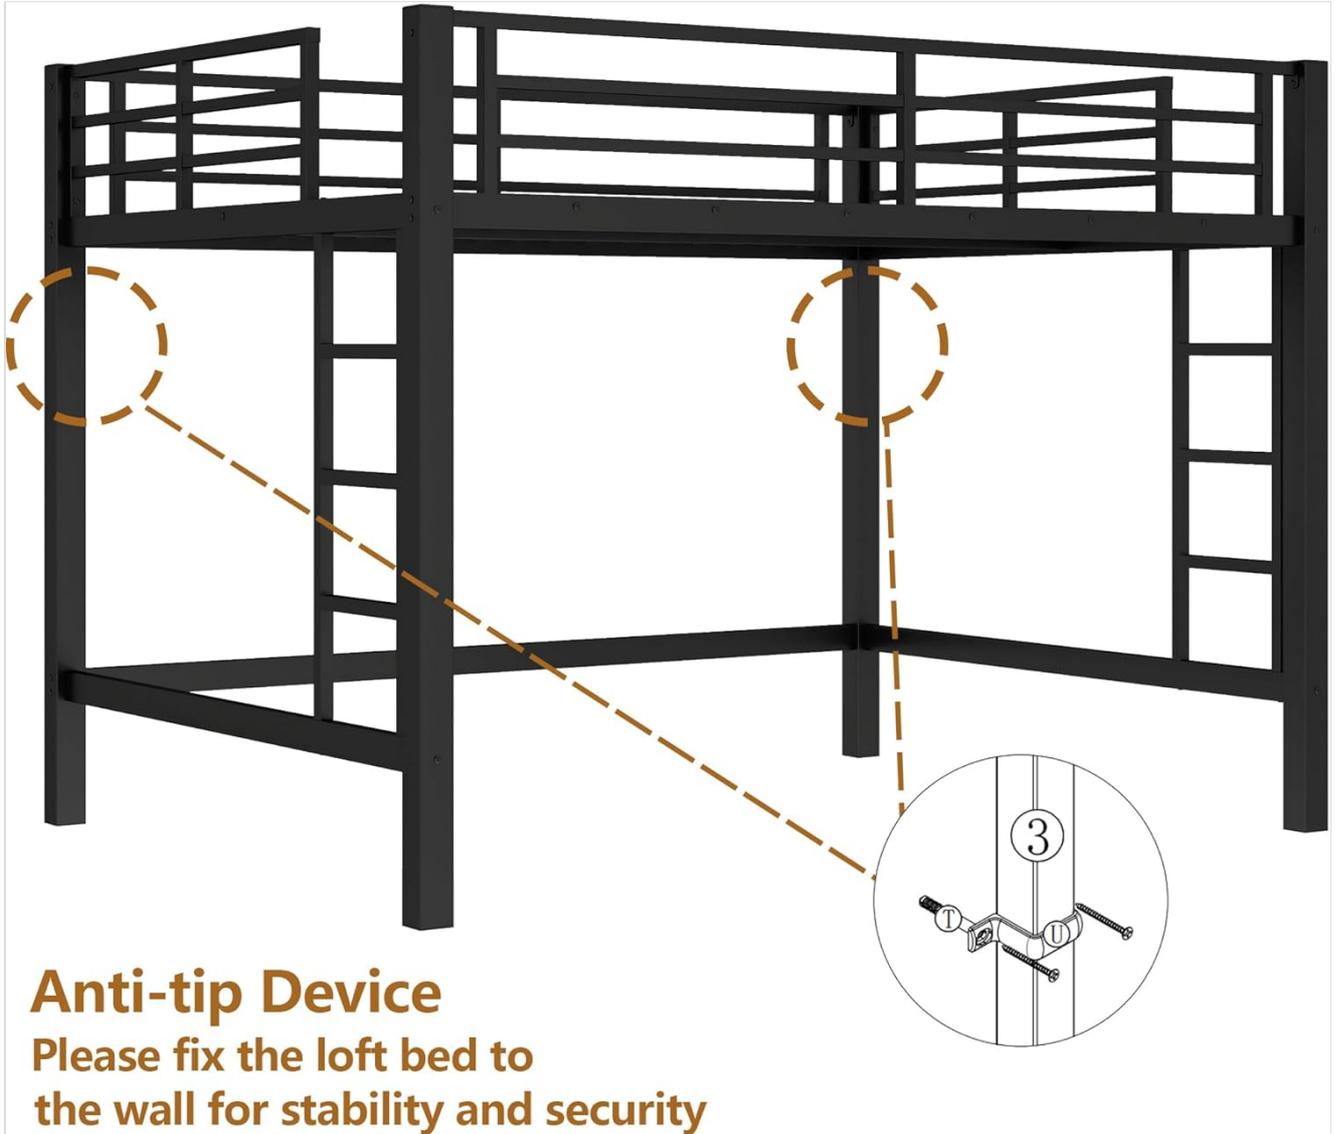


Figure 3: Diagram showing the installation of the bed slat support bars onto the inner frame. This step is crucial for supporting the mattress.

4. Step 4: Place Bed Slats.

Lay the 19 steel slats (part 4) across the installed support bars. Ensure they are evenly spaced and securely seated. Add the center support bar.



Figure 4: Illustration of placing the steel slats onto the support bars, forming the mattress base. This image shows the completed slat assembly.

5. Step 5: Final Tightening and Anti-Tip Device.

Once all parts are assembled, tighten all screws using the provided tool L. If the bed feels wobbly, use the reinforcement parts "U" and "T" as shown in the diagram. Install the anti-tip device (part K) to the wall for added stability and security. This is a critical safety step.

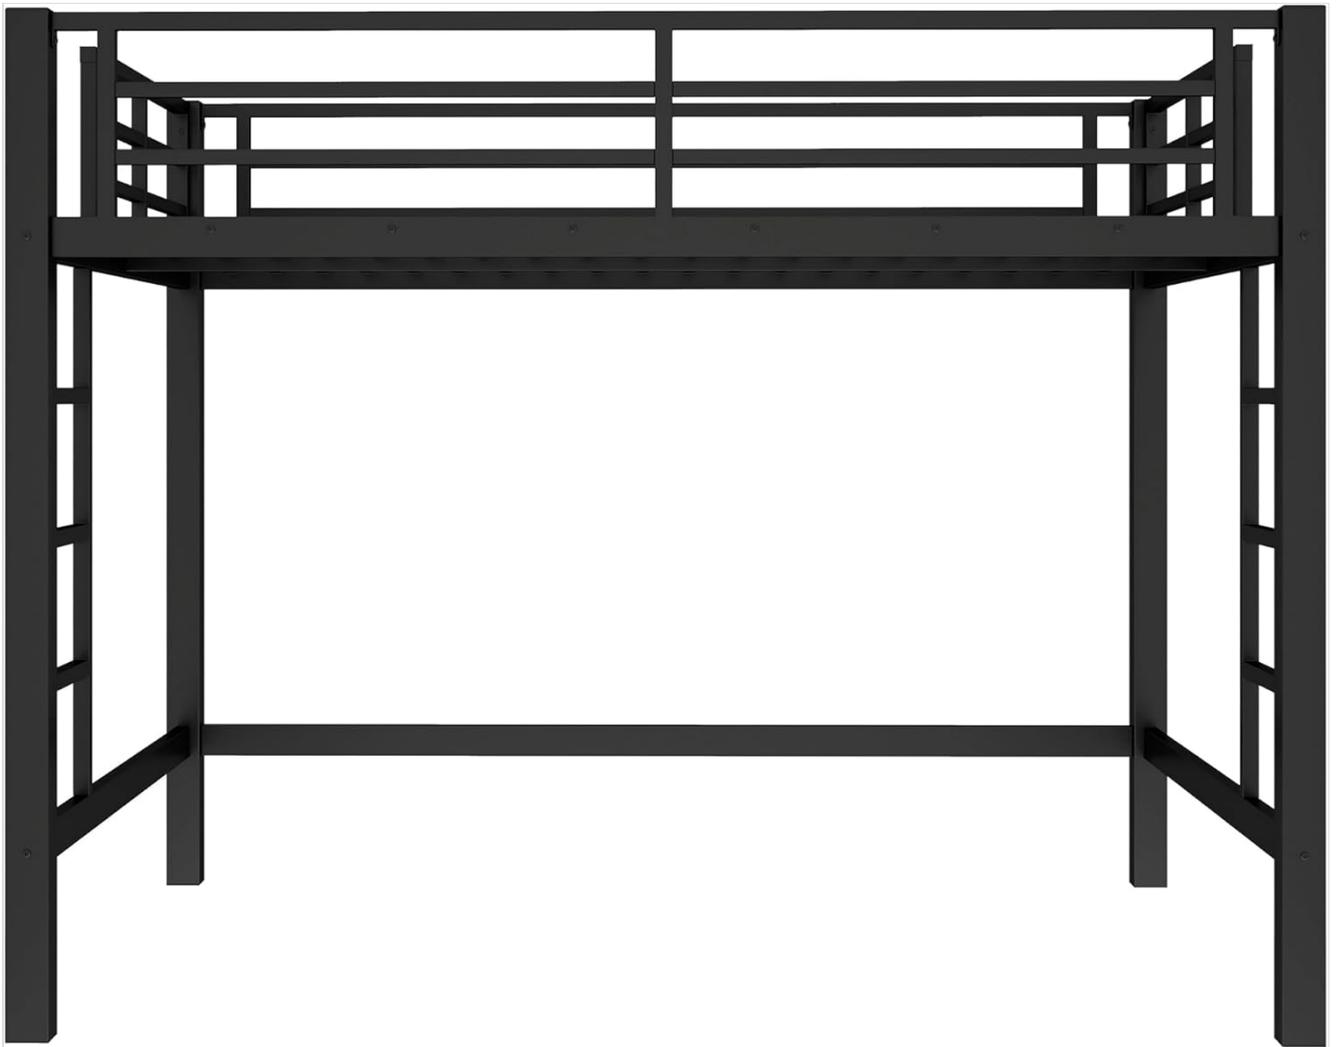


Figure 5: Diagram illustrating the installation of the anti-tip device to secure the loft bed to the wall. This step is essential for preventing accidental tipping.

Important: Please tighten all screws before use. Periodically check and re-tighten all fasteners to ensure continued stability and safety.

OPERATING INSTRUCTIONS

The Bellemave Loft Bed is designed for safe and efficient use, maximizing your room space.

- **Accessing the Bed:** Use the built-in ladders on either side to safely climb to and descend from the loft bed. Always face the ladder when climbing or descending.
- **Under-bed Space:** The 51-inch under-bed clearance provides ample space for a desk, seating area, or storage. Arrange this area according to your needs.
- **Mattress Use:** Place a full-size mattress directly on the steel slats. No box spring is required. Ensure the mattress fits snugly within the guardrails.
- **Weight Limit:** Adhere to the maximum weight capacity of 350 lbs for the upper bunk.



Figure 6: The Bellemave Full Size Loft Bed integrated into a room, showcasing the spacious under-bed area used for a seating arrangement. This image demonstrates the practical application of the loft bed's design.

MAINTENANCE

Regular maintenance ensures the longevity and safety of your Bellemave Loft Bed.

- **Cleaning:** Wipe down the metal frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the powder-coated finish.
- **Fastener Check:** Periodically (e.g., monthly or quarterly) inspect all screws, bolts, and connections. Re-tighten any loose fasteners to maintain structural integrity and prevent wobbling.
- **Guardrail Inspection:** Ensure guardrails are always securely attached and free from damage.
- **Slat Condition:** Check the steel slats for any signs of bending or damage. Replace any damaged slats immediately.
- **Noise Reduction:** The bed features noise-reducing rubber stoppers. Ensure these are in place and functioning correctly to prevent noise from moving slats.



Figure 7: Close-up view highlighting the noise-reducing rubber stoppers and the full-length guardrails of the Bellemave Loft Bed. These features contribute to the bed's stability and safety.

TROUBLESHOOTING

Refer to this section for common issues and their solutions.

- **Bed is Wobbly:**

Check all screws and bolts. Tighten any that are loose. Ensure the anti-tip device is properly installed and secured to the wall. Use reinforcement parts "U" and "T" if not already installed.

- **Squeaking Noises:**

Inspect the rubber stoppers on the slats to ensure they are correctly positioned. Re-tighten all frame connections. Apply a small amount of lubricant (e.g., silicone spray) to metal-on-metal contact points if necessary, avoiding contact with the mattress.

- **Difficulty Assembling Parts:**

Review the assembly instructions and diagrams carefully. Ensure you are using the correct parts for each step. Do not force parts together; if they don't fit, re-check the orientation or part number. Contact customer support if you

suspect a defective part.

WARRANTY AND SUPPORT

For any questions, missing parts, or concerns regarding your Bellemave Loft Bed, please contact our customer support team.

- **Customer Support Email:** service@bellemave.com
- **Warranty Information:** Please retain your proof of purchase for warranty claims. Specific warranty details may vary; contact customer support for more information.
- **Returns:** This product may be eligible for 90-day free returns. Refer to your purchase platform's return policy for details.

