

iPormis I870101288C2

iPormis Queen Size Upholstered Platform Bed Frame Instruction Manual

Model: I870101288C2

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient assembly, operation, and maintenance of your new iPormis Queen Size Upholstered Platform Bed Frame. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

SAFETY INFORMATION

- Do not load more than 800 pounds on the bed frame.
- Assembly requires two people for safety and ease of installation.
- Be careful around wide legs to prevent tripping hazards.
- Ensure all bolts are securely tightened before use. Periodically check and re-tighten all connections.
- Keep small parts away from children during assembly.

PRODUCT COMPONENTS

Verify all parts are present before beginning assembly. A detailed parts list with corresponding labels is typically included in the physical manual. The installation video below also provides a visual overview of the components.

Your browser does not support the video tag.

Video: This installation video begins with an exploded view of all bed frame components and hardware, followed by step-by-step assembly.

ASSEMBLY INSTRUCTIONS

Assembly is designed to be straightforward and typically takes two people approximately 30 minutes. Follow these steps carefully, referring to the video and images for visual guidance.

Step 1: Prepare the Headboard and Side Rails

Attach the headboard posts to the headboard. Then, connect the side rails to the headboard posts using the provided hardware. Ensure all connections are firm.

Step 2: Install Center Support Beam and Legs


Assemble the center support beam and attach it to the side rails. Securely fasten all support legs to the frame. This provides crucial stability for the bed.



Image: The bed frame's internal metal support structure and reinforced side panel, designed for durability and to prevent sagging.


Step 3: Place Wood Slats

Unroll the wood slats and place them across the frame. The slats are equipped with Velcro fasteners for easy installation and to prevent shifting. Ensure each slat is properly seated and secured.

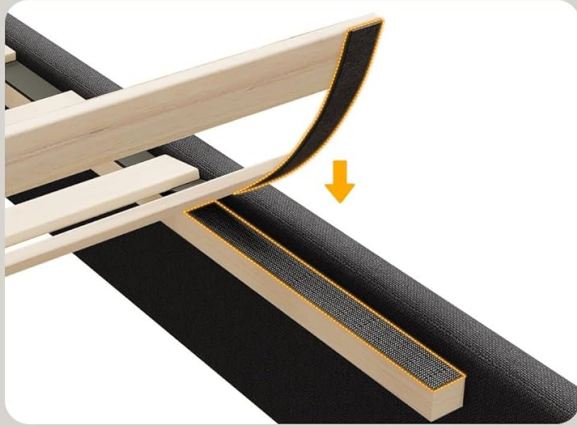

Velcro Makes
Assembly Effortless

Eliminates Squeaks
For Peaceful Sleep

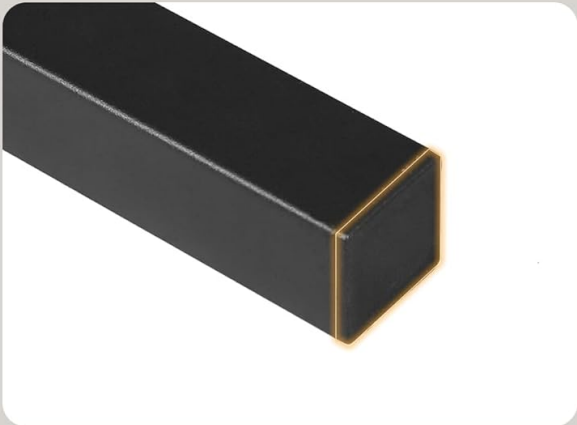


Avoids Floor Scratches,
Enhances Stability

Image: Detail showing the wood slats with Velcro for secure attachment and noise-reducing strips for a silent sleep environment. Non-slip pads on the feet are also visible.

OPERATING INSTRUCTIONS

Once assembled, place your mattress directly onto the wood slats. No box spring is required. The bed frame is designed to support a maximum weight of 800 pounds. The low-profile design provides ample clearance for robot vacuums, facilitating easy cleaning underneath the bed.

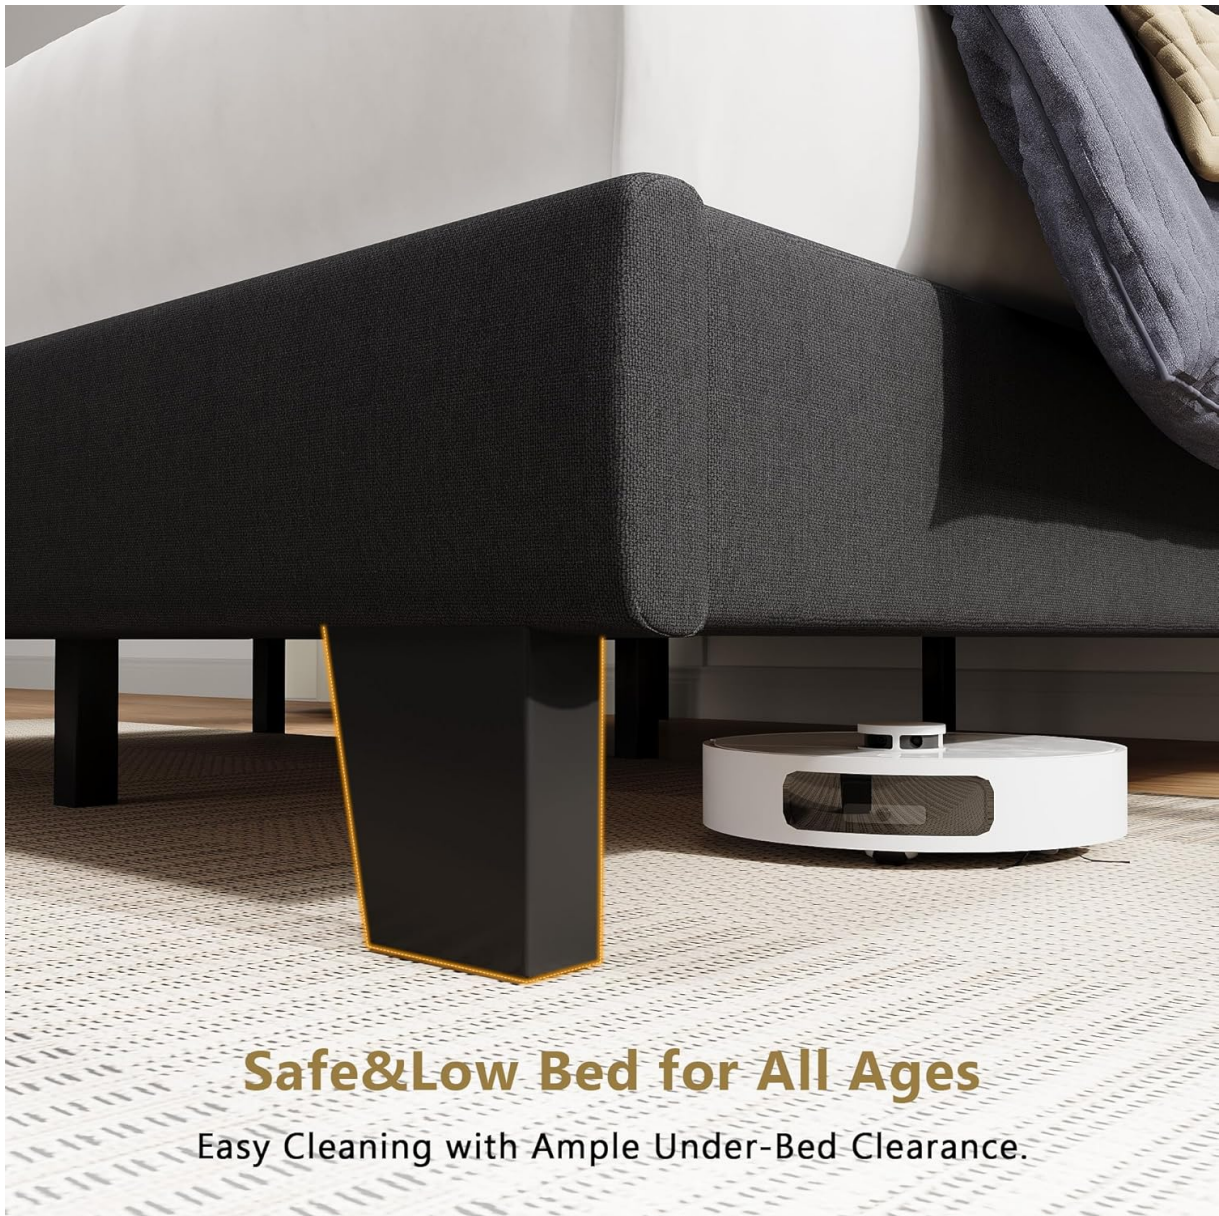

Safe&Low Bed for All Ages

Easy Cleaning with Ample Under-Bed Clearance.

Image: The low-profile design of the bed frame, demonstrating sufficient clearance for a robot vacuum to clean underneath.

MAINTENANCE

- **Cleaning:** The upholstered linen headboard and frame can be spot cleaned with a damp cloth and mild detergent. Avoid harsh chemicals.
- **Tightening:** Periodically check all bolts and connections to ensure they remain tight. Re-tighten as necessary to maintain stability and prevent noise.
- **Slats:** Ensure the wood slats are properly seated and the Velcro fasteners are secure to prevent mattress sagging.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Bed frame is wobbly.	Loose bolts or uneven floor.	Check and tighten all assembly bolts. Ensure the bed is on a level surface.

Issue	Possible Cause	Solution
Squeaking noises.	Loose connections or slats rubbing.	Re-tighten all bolts. Ensure slats are properly seated and the noise-reducing strips are intact.
Mattress sagging.	Slats not properly installed or damaged.	Verify all slats are correctly positioned and secured by Velcro. Inspect for any damaged slats.

SPECIFICATIONS

Brand: iPormis
Model Number: I870101288C2
Size: Queen
Material: Wood and Linen Fabric
Product Dimensions (L x W x H): 81.5" x 62" x 40"
Weight Capacity: 800 Pounds
Assembly Required: Yes (Approx. 30 minutes, 2 people)
Box Spring Needed: No

Product Dimensions



Image: Diagram illustrating the dimensions of the iPormis Queen Size Bed Frame, including length, width,

and height.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact iPormis customer service directly. Contact details are typically found on the product packaging or the official iPormis website.