



Manuals.plus /

› KOMFOTT /

› KOMFOTT Murphy Bed Cabinet with Mattress - User Manual for Model B0G49JTH66

## KOMFOTT B0G49JTH66

# KOMFOTT Murphy Bed Cabinet with Mattress

Model: B0G49JTH66

User Manual

## 1. INTRODUCTION

---

Thank you for choosing the KOMFOTT Murphy Bed Cabinet. This innovative and space-saving furniture piece is designed to provide a comfortable sleeping solution while optimizing your living area. It seamlessly converts from a compact cabinet or console table into a functional bed, making it ideal for guest rooms, offices, or small apartments. This manual provides essential information for safe assembly, operation, maintenance, and troubleshooting to ensure optimal use of your product.

## 2. SAFETY INFORMATION

---

Please read and understand all safety instructions before assembling or operating the Murphy Bed Cabinet. Failure to follow these instructions may result in injury or product damage.

- **Assembly:** This product requires assembly. Ensure all parts are present and undamaged before beginning. Follow the included assembly guide carefully.
- **Weight Capacity:** Do not exceed the maximum bed load capacity of **485 lbs**. The cabinet top has a load capacity of **22 lbs**.
- **Level Surface:** Always operate the bed on a flat, stable, and level surface to prevent tipping or instability.
- **Children and Pets:** Keep children and pets away from the bed during folding and unfolding operations to prevent pinching or injury.
- **Secure Fasteners:** Regularly check all bolts, screws, and connections to ensure they remain tight and secure. Loose fasteners can compromise stability.
- **Moving the Cabinet:** Use the integrated handles and wheels for movement. Ensure the wheels are unlocked before moving and locked when stationary.
- **Mattress Stopper:** Ensure the mattress stopper is properly engaged to prevent the mattress from sliding during use.

## 3. SETUP AND INITIAL ASSEMBLY

---

The KOMFOTT Murphy Bed Cabinet requires assembly. Please refer to the separate, detailed assembly instructions included in your product packaging for step-by-step guidance. Ensure you have all necessary tools and components before starting.

### 3.1 Unpacking and Component Check

- Carefully unpack all components and place them on a clean, soft surface to prevent scratches.
- Verify that all parts listed in the assembly manual are present.
- Inspect all parts for any shipping damage. Contact customer service immediately if any parts are damaged or missing.

### 3.2 Assembly Process

Follow the provided assembly manual for detailed instructions on constructing the cabinet and bed frame. Pay close attention to diagrams and fastener types.



*Image 3.1: The KOMFOTT Murphy Bed Cabinet unfolded, ready for use.*

### 3.3 Dimensions Overview

Understanding the dimensions is crucial for proper placement and use.

# Dimensions

Load Capacity of Bed: **485 lbs**



Image 3.2: Detailed dimensions of the Murphy Bed Cabinet, folded and unfolded.

## 4. OPERATING INSTRUCTIONS

The KOMFOTT Murphy Bed Cabinet offers flexible conversion between a cabinet/console table and a bed. Follow these steps for safe and efficient operation.

### 4.1 Converting from Cabinet to Bed

1. **Position the Cabinet:** Ensure the cabinet is on a level surface and the two lockable wheels are engaged to prevent movement.
2. **Clear the Top:** Remove any items from the cabinet top.
3. **Open Cabinet Doors:** If applicable, open the cabinet doors to access the folded bed frame.
4. **Unfold the Bed Frame:** Carefully pull the bed frame out from the cabinet using the integrated handles. The bed frame will extend outwards.
5. **Extend Legs:** Extend the support legs of the bed frame until they are fully locked into position.
6. **Adjust Mattress:** Ensure the included 4-inch mattress is properly positioned on the bed frame, with the mattress stopper preventing it from sliding.

### 4.2 Converting from Bed to Cabinet

To fold the bed back into a cabinet, specific steps involving the crossbars are required.

1. **Clear the Bed:** Remove all bedding, pillows, and the mattress from the bed frame.
2. **Retract Legs:** Fold the support legs of the bed frame inwards.
3. **Remove Crossbars:** *Crucially, you must loosen the leg nuts and remove the crossbars that connect the bed surface and legs.* This step is necessary to allow the bed frame to fold compactly.
4. **Fold Bed Surface:** Carefully fold the bed surface and legs inward towards the cabinet.
5. **Secure in Cabinet:** Push the folded bed frame fully into the cabinet. Ensure it is securely stored.
6. **Close Cabinet Doors:** Close any cabinet doors.



Image 4.1: The convertible and folding design of the Murphy Bed Cabinet.

### 4.3 Using the Wheels and Handles

The cabinet is equipped with 4 universal wheels, two of which are lockable, and 2 pulling handles for convenient mobility.

- **Moving:** To move the cabinet, ensure the bed is fully folded and secured inside. Unlock the two lockable wheels. Use the handles to guide the cabinet to its desired location.
- **Stationary Use:** Once in position, engage the locks on the two lockable wheels to prevent accidental movement.

## Convenient Mobility

### Dual Handles

Make it simple for you to manage the bed




Image 4.2: Details of the dual handles and universal wheels for easy movement.

## 5. MAINTENANCE

Regular maintenance helps prolong the life and functionality of your KOMFOTT Murphy Bed Cabinet.

- **Mattress Cover:** The 4-inch mattress comes with a removable and washable cover. Refer to the care label on the mattress cover for specific washing instructions.
- **Cabinet Cleaning:** Wipe the engineered wood surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Metal Frame:** Clean the metal frame with a damp cloth. Dry thoroughly to prevent rust.
- **Fastener Check:** Periodically check all bolts, screws, and connections for tightness. Retighten as necessary to maintain structural integrity.
- **Wheel Maintenance:** Keep the wheels free of debris. If they become stiff, a small amount of silicone lubricant can be applied to the axles.

# 4" Thick Mattress Included

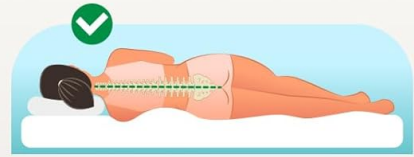

Proper Firmness & Optimal Comfort

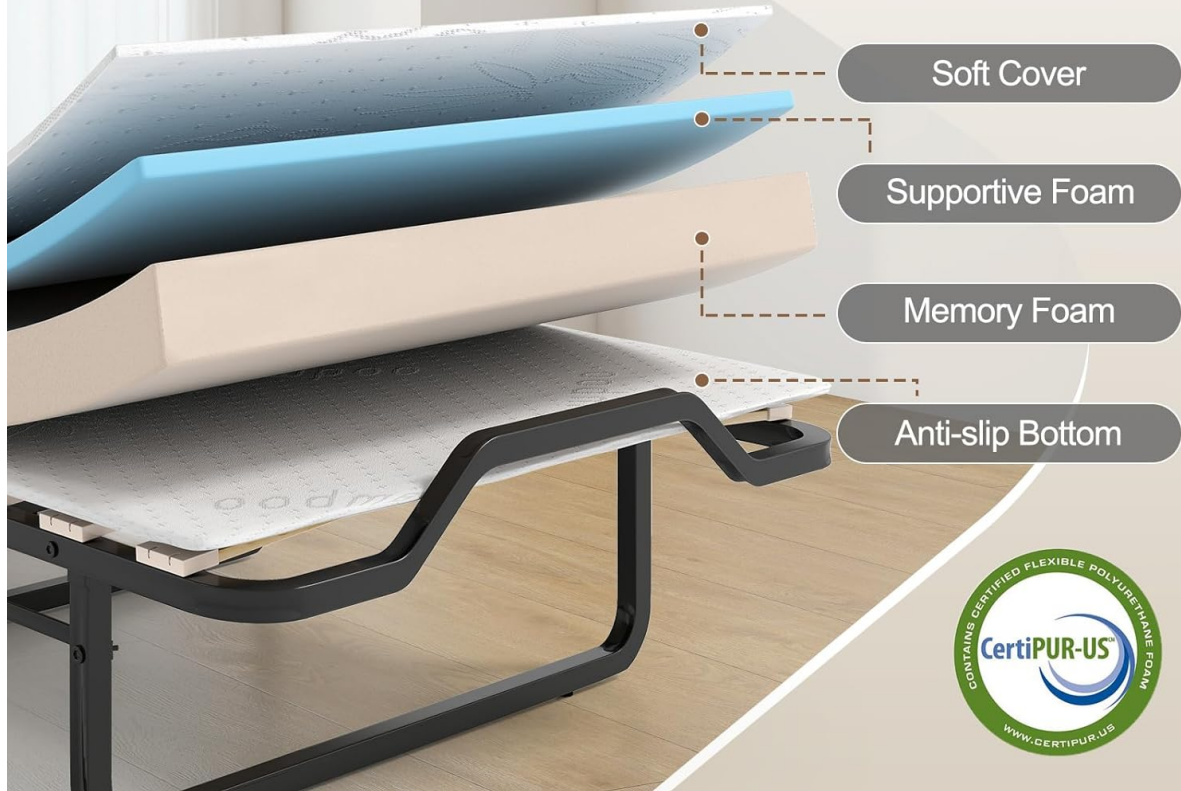


Image 5.1: Layers of the included 4-inch mattress for comfort and support.



## Reinforced Metal Structure



**Mattress Stopper**  
Keep your mattress in place



**15 Birch Wood Slats**  
Ensure a stable platform



**Anti-Slip Foot Pads**  
Avoid scratching the floor

*Image 5.2: Features of the reinforced metal structure, including mattress stopper and birch wood slats.*

## 6. TROUBLESHOOTING

If you encounter issues with your Murphy Bed Cabinet, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Bed does not fold/unfold smoothly.	Crossbars not removed; obstructions; loose fasteners.	Ensure crossbars are removed as per operating instructions. Check for any items obstructing the folding mechanism. Verify all fasteners are tight.
Cabinet wheels are difficult to move or lock.	Wheels are locked; debris in wheels; worn mechanism.	Ensure lockable wheels are disengaged for movement. Clean any debris from the wheels. If mechanism is worn, contact customer service.
Bed feels unstable when unfolded.	Not on a level surface; legs not fully extended; loose fasteners.	Move the bed to a level surface. Ensure all support legs are fully extended and locked. Check and tighten all assembly fasteners.
Mattress slides off the bed frame.	Mattress stopper not engaged.	Ensure the mattress stopper at the foot of the bed frame is properly engaged to hold the mattress in place.

If you experience a problem not listed here, or if the suggested solutions do not resolve the issue, please contact KOMFOTT customer service for assistance.

## 7. SPECIFICATIONS

---

Detailed specifications for the KOMFOTT Murphy Bed Cabinet, Model B0G49JTH66.

**Model:** B0G49JTH66

**Color:** White

**Material:** Metal, Engineered Wood, Foam

**Unfolded Dimensions (L x W x H):** 86.5" x 34" x 41.5"

**Folded Dimensions (L x W x H):** 34" x 17.5" x 41.5"

**Cabinet Top Size (L x W):** 34" x 17.5"

**Cabinet Interior Space (L x H):** 33" x 30.5"

**Bed Surface Size (L x W):** 74" x 31.5"

**Mattress Thickness:** 4"

**Under-Bed Clearance Height:** 9.5"

**Bed Load Capacity:** 485 lbs

**Cabinet Top Load Capacity:** 22 lbs

**Net Weight:** 89.5 lbs

**Assembly Required:** Yes

**Special Feature:** Foldable, Lockable Wheels

## User-Friendly Details



Image 7.1: User-friendly design details including anti-bumping features.

## 8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your product at the time of purchase. Warranty terms and conditions may vary.

### 8.1 Customer Support

If you have any questions, require assistance with assembly, or need to report a missing or damaged part, please contact KOMFOTT customer service. Contact details are typically provided in your product packaging or on the official KOMFOTT website.

Please have your model number (B0G49JTH66) and purchase date ready when contacting support.