

Real Relax CP1015-H256-1230

Real Relax 10x15FT Heavy Duty Metal Carport

Model: CP1015-H256-1230

Brand: Real Relax

IMPORTANT SAFETY INFORMATION

Read and understand all instructions before assembly and use. Failure to follow these instructions may result in serious injury or property damage.

- **Installation Safety:** Use only stable ladders or scaffolding during assembly. Ensure a second adult assists and stabilizes the ladder.
- **Ground Requirements:** Install the carport on a flat and solid surface. Building a wooden or concrete foundation is strongly recommended for enhanced stability.
- **Weather Conditions:** The carport is not designed for extreme winds. Before storms, move contents inside if possible. Promptly remove snow accumulation exceeding 5 inches to prevent overloading and structural damage.
- **Protection:** Install edge trims and plastic corner protectors for protection against bumps and scrapes.
- **Anchoring:** Ensure the carport is securely anchored to the ground using the provided ground anchors.

PRODUCT OVERVIEW

The Real Relax 10x15FT Heavy Duty Metal Carport provides a robust and versatile outdoor shelter solution. It features a reinforced frame and a galvanized steel roof designed for durability and protection against various weather conditions.

- **Sturdy Construction:** Built with 1.57-inch galvanized steel tubes and 8 ground anchors for superior strength and outdoor resilience.
- **Durable Materials:** Features a 0.25mm-thick galvanized steel roof with a powder-coated frame, offering rust resistance, UV protection, and year-round durability.
- **Leak-Resistant Roof:** Designed with waterproof tape and sealed screws at joints, combined with a sloped design, to effectively prevent rain leakage and ensure efficient drainage.
- **Versatile Use:** Ideal for protecting vehicles (pickup trucks, boats, cars, tractors), or as a shelter for patios, grilling areas, workshops, and storing farm tools and equipment.

Stable Carport

1.57" x1.57" Thickened Steel Tubes
0.25mm Galvanized Metal Roof

Waterproof +40%



Stability +40%

Image showing the Real Relax 10x15FT Heavy Duty Metal Carport with a car inside, highlighting its stable structure with 1.57" thickened steel tubes and 0.25mm galvanized metal roof. Arrows indicate enhanced waterproofing and stability.

UV Resistant Galvanized Roof

Protect the vehicle or tools from direct sun exposure in summer



Image depicting the carport protecting a vehicle from direct sunlight, illustrating the UV-resistant galvanized roof that shields against UVA and UVB rays.

Outdoor Activity Area



Parking



Party



Storage



Barbecue

This is an AI-generated character.

Image showcasing the carport used as a versatile outdoor activity area, with people gathered for a barbecue and relaxation, demonstrating its suitability for parking, parties, storage, and grilling.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly. The carport is shipped in two boxes, which may arrive on different days.

- Galvanized Steel Frame Components
- Galvanized Steel Roof Panels
- Ground Anchors (8 units)
- Waterproof Tape
- Screws with Washers
- Edge Trims
- Plastic Corner Protectors

- Assembly Hardware

Shipped in 2 boxes, which may arrive at different days



2 Boxes



Delivery



Buyer Signature

Image showing two cardboard boxes, indicating that the carport components are shipped in two separate packages.

SETUP / INSTALLATION INSTRUCTIONS

Careful assembly is crucial for the stability and longevity of your carport. Follow these steps for proper installation:

1. **Site Preparation:** Choose a flat and solid surface for installation. It is highly recommended to build a wooden or concrete foundation to ensure maximum stability.
2. **Frame Assembly:** Assemble the individual frame sections according to the diagrams provided in the detailed assembly manual (not included here, refer to product packaging). Ensure all connections are secure.
3. **Connecting Frame Sections:** Connect the assembled frame sections to form the complete structure. Ensure all bolts and screws are tightened appropriately.
4. **Roof Panel Installation:** Attach the galvanized steel roof panels to the frame. Apply the provided waterproof tape at all joints and use sealed screws to prevent leaks.
5. **Anchoring:** Securely anchor the carport to the ground using the 8 ground anchors. For optimal stability, especially in windy conditions, consider additional anchoring methods.
6. **Safety Accessories:** Install edge trims and plastic corner protectors on exposed edges and corners to enhance safety and prevent injuries.

Easy to Install

Ensure the carport is installed on level ground

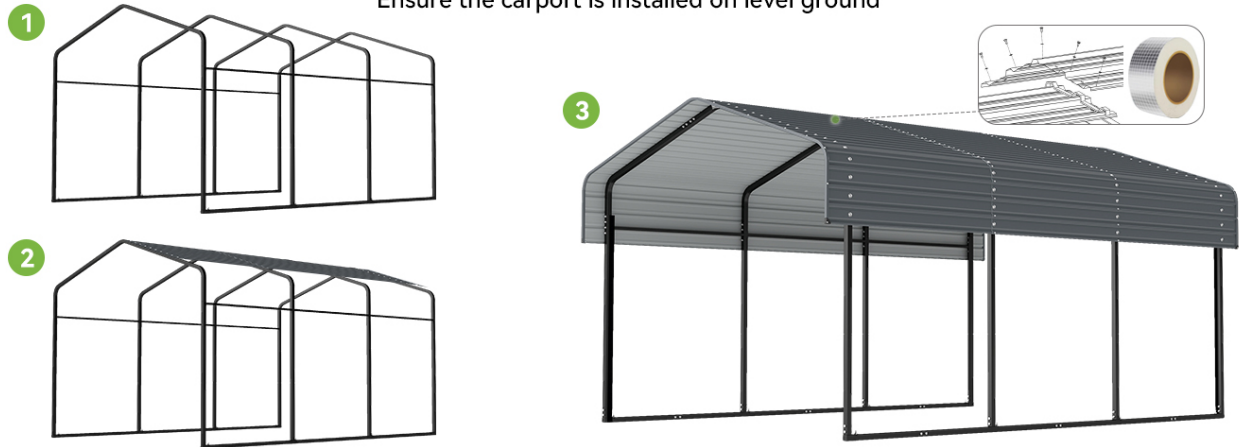


Diagram illustrating the three main steps for carport installation: assembling the frame sections, connecting them, and attaching the roof panels with waterproof tape.

Close-up image of a ground peg (stake) securing the carport frame to the ground, demonstrating the anchoring mechanism for stability.

OPERATING INSTRUCTIONS

The Real Relax Metal Carport is designed for versatile use as an outdoor shelter. Ensure the carport is properly installed and anchored before use.

- **Vehicle Protection:** Park vehicles (cars, trucks, boats, tractors) underneath to shield them from sun, rain, and light snow.
- **Outdoor Storage:** Use the carport to store outdoor equipment, tools, or other items requiring protection from the elements.
- **Activity Area:** The open design makes it suitable for use as a patio cover, grilling area, or temporary gathering space for outdoor events.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your carport.

- **Snow Removal:** During winter, promptly remove snow from the roof. Do not allow snow accumulation to exceed 5 inches (approximately 12.7 cm) to prevent structural strain.
- **Cleaning:** Periodically clean the galvanized steel roof and frame with mild soap and water to remove dirt and debris. Avoid abrasive cleaners that could damage the powder coating.
- **Inspect Connections:** Regularly check all bolts, screws, and ground anchors to ensure they remain tight and secure. Re-tighten as necessary.
- **Rust Prevention:** The galvanized steel and powder-coated frame offer rust resistance. However, inspect for any signs of rust, especially after prolonged exposure to moisture, and address them promptly with appropriate rust-inhibiting treatments.
- **Drainage:** Ensure the sloped roof design allows for efficient water drainage. Clear any debris that might obstruct water flow.

10x15 Heavy Duty Metal Carport for Snow

Do not allow roof snow to exceed 5 inches, and clear it promptly



Image of the carport in a snowy environment, with a car parked underneath, emphasizing the need to clear snow promptly to prevent accumulation exceeding 5 inches.

No Gap Galvanized Sheet Roof



Powder Coating
for Corrosion Resistance


Screws
with Washers

Tape Seals
Connections

Image showing the carport roof during rain, highlighting the powder coating for corrosion resistance, screws with washers, and tape seals at connections to prevent leaks.

Galvanized Steel Roof

Offers superior rust and UV resistance

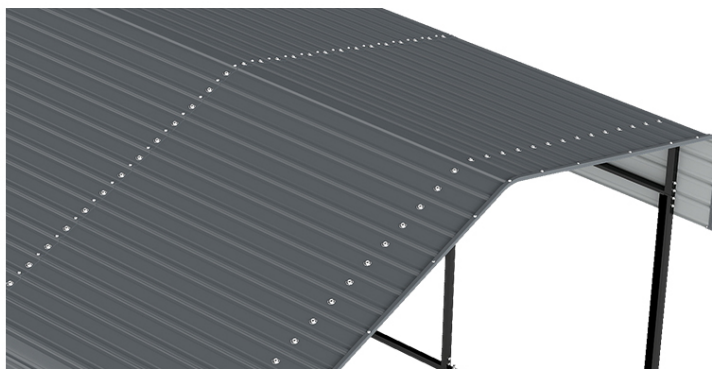

Close-up image of the galvanized steel roof panels, illustrating their design for superior rust and UV resistance.

Edge banding

Offer protection from rust and defend against cuts and scratches

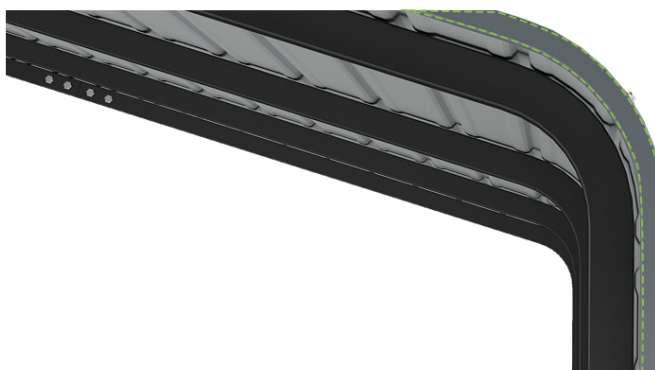


Image showing the edge banding detail on the carport roof, designed to protect against rust and prevent cuts or scratches.

Corner guards

Provide robust protection against collisions

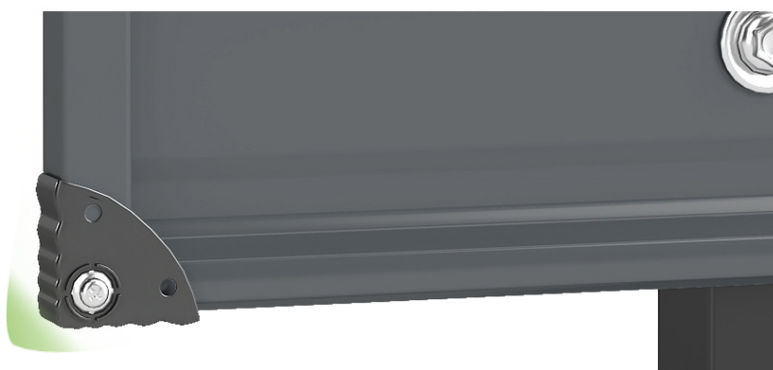


Image of a plastic corner protector installed on the carport frame, providing robust protection against collisions and enhancing safety.


- **Carport Instability:** Ensure the carport is installed on a flat, solid surface and securely anchored with all ground anchors. Consider building a wooden or concrete foundation for increased stability.
- **Water Leakage:** Verify that all roof panels are correctly overlapped, waterproof tape is applied at all joints, and screws are tightened with washers to create a proper seal.
- **Snow Accumulation:** Do not allow snow to exceed 5 inches on the roof. Promptly clear excess snow to prevent structural damage.
- **Wind Damage:** In anticipation of strong winds, ensure the carport is extra securely anchored. If possible, move valuable contents from under the carport during extreme weather.

SPECIFICATIONS

Feature	Detail
Model Number	CP1015-H256-1230
Product Dimensions (L x W x H)	4.57L x 3.05W x 2.56H meters (10x15FT)
Item Weight	102.25 kg
Frame Material	Galvanized Steel
Roof Material Thickness	0.25mm Galvanized Steel
Frame Tube Size	1.57 inches
Color	Gray
Water Resistance Level	Waterproof
Ultraviolet Light Protection	Yes
Floor Area	150 square feet
Manufacturer	Real Relax

Carport Size

Ensure the site is flat and level

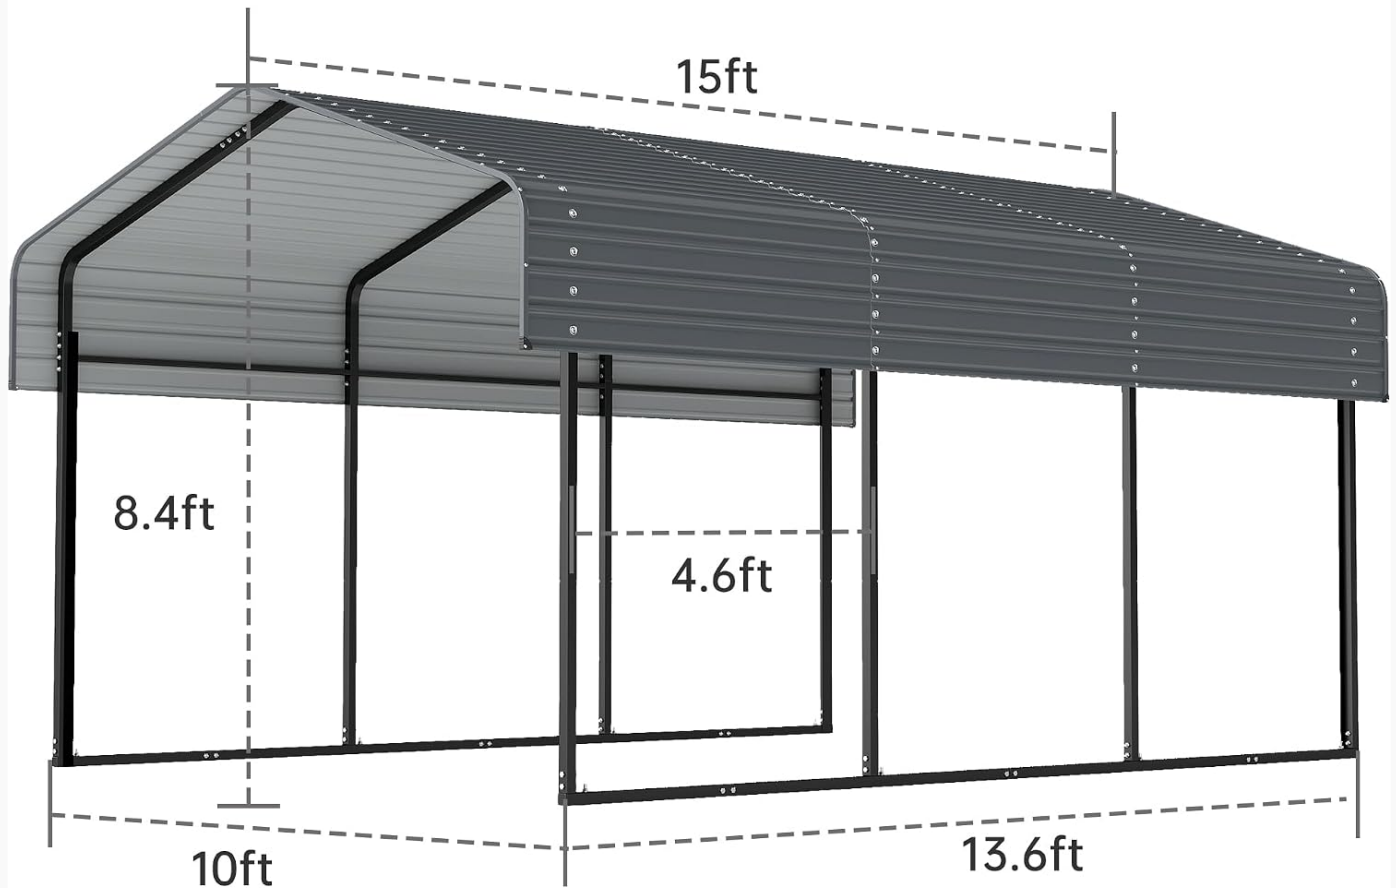

Interior dimensions: 10x13.6x8.4ft

Overall dimensions: 10x15x8.4ft

Ensure the site is flat and level



2 boxes

Diagram illustrating the overall dimensions of the 10x15FT carport, including height, width, and length, along with interior dimensions.

WARRANTY INFORMATION

For detailed warranty information regarding your Real Relax 10x15FT Heavy Duty Metal Carport, please refer to the documentation included with your purchase or visit the official Real Relax website. You may also contact customer support for specific warranty terms and conditions.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report missing or damaged parts, please contact Real Relax customer service. Contact information can typically be found on the product packaging, the official Real Relax website, or through your retailer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question