

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [AMERLIFE](#) /

› [AMERLIFE Solid Wood Queen Bed Frame Instruction Manual \(Model BSW137\)](#)

## AMERLIFE BSW137

# AMERLIFE Solid Wood Queen Bed Frame Instruction Manual

Model: BSW137

## INTRODUCTION

---

Thank you for purchasing the AMERLIFE Solid Wood Queen Bed Frame. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure safe and proper use of your new bed frame. Please read all instructions carefully before assembly and retain this manual for future reference.



Figure 1: AMERLIFE Solid Wood Queen Bed Frame (Brown Walnut)

## SAFETY INFORMATION

---

- Always assemble the bed frame on a soft, clean surface to prevent scratches.
- Ensure all bolts and screws are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not stand or jump on the bed frame.
- Keep small parts away from children during assembly.
- Do not use power tools for assembly unless explicitly instructed, as this may overtighten and damage components.

## PACKAGE CONTENTS

---

Verify that all parts and hardware are present before beginning assembly. If any parts are missing or damaged, please contact customer support.



Figure 2: All components of the bed frame

## SETUP AND ASSEMBLY

---

Assembly typically takes approximately 30 minutes. It is recommended to have two people for assembly, though it can be completed by one person.

### Tools Provided

- Allen wrench

### Assembly Steps

1. **Unpack and Identify Parts:** Carefully unpack all components and lay them out on a soft surface. All pieces are clearly labeled for easy identification.
2. **Assemble Headboard and Footboard:** Connect the headboard and footboard components using the provided hardware. Ensure all connections are snug.
3. **Attach Side Rails:** Connect the side rails to the assembled headboard and footboard. Tighten all bolts securely.

4. **Install Center Support Legs:** Assemble the middle support pieces and attach them to the central beam. These provide additional stability for the mattress.
5. **Place Slats:** Lay the wooden slats across the bed frame. The slats are connected in sections for easier placement and feature pre-drilled holes for secure fastening. Screw the slats into the side rails using the provided hardware.
6. **Secure All Connections:** Double-check all bolts and screws to ensure they are fully tightened. Insert the decorative wooden plugs into any visible screw holes for a finished look.

### — Unmatched Strength and Durability —



- Solid, Thick Wood Construction



- Supports **6-8** Adults' Weight

Figure 3: Exceptional details including adjustable legs and secure fastenings

Your browser does not support the video tag. Please update your browser or try a different one.

Video 1: Overview of the bed frame and assembly process by the manufacturer.

Your browser does not support the video tag. Please update your browser or try a different one.

Video 2: Demonstration of the solid wood bed frame construction by the manufacturer.

## OPERATION

---

The AMERLIFE Solid Wood Queen Bed Frame is designed for use with a queen-sized mattress. No box spring is needed due to the robust slat support system.

### Mattress Compatibility

- Recommended Mattress Thickness: 8-12 inches.
- The bed frame is designed to be noise-free, featuring silent foam on the headboard and slats to prevent creaking.



Figure 4: Bed frame ready for use with a mattress

## Weight Capacity

The upgraded 4-point support system and solid pine wood construction provide a weight capacity of up to 1300 lbs, ensuring long-term stability and support.



Figure 5: Demonstration of the bed frame's robust strength

## MAINTENANCE

---

### Cleaning

- Wipe the wood surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- The 7.5-inch under-bed clearance allows for easy cleaning underneath the bed, including with robotic vacuums.



Figure 6: Under-bed clearance for effortless cleaning

### Care for Solid Wood

- Avoid prolonged exposure to direct sunlight or extreme temperature changes.
- Use coasters or protective pads under items placed on the headboard or side rails to prevent scratches.

### TROUBLESHOOTING

---

#### Bed Frame is Wobbly or Noisy

- Check all assembly bolts and screws. Tighten any loose connections.
- Ensure the center support legs are properly installed and making firm contact with the floor.
- Verify that the silent foam on the headboard and slats is correctly positioned to minimize noise.

#### Missing or Damaged Parts

- Refer to the "Package Contents" section and contact AMERLIFE customer support for assistance.

## SPECIFICATIONS

---

| Feature            | Detail  |
|--------------------|---|
| Brand              | AMERLIFE  |
| Model Number       | BSW137  |
| Size               | Queen   |
| Color              | Brown Walnut  |
| Material           | Pine Wood   |
| Style              | Mid Century Modern                                  |
| Product Dimensions | 82.7"L x 61"W x 37.6"H                              |
| Item Weight        | 72 pounds   |
| Special Feature    | Cylindrical Legs, Full Panel Headboard, Silent Foam |
| Assembly Required  | Yes   |
| Box Spring Needed  | No  |
| Weight Capacity    | Up to 1300 lbs                                      |

# Queen Size



Recommended  
Mattress: 8-12"



capacity  
1300 lbs

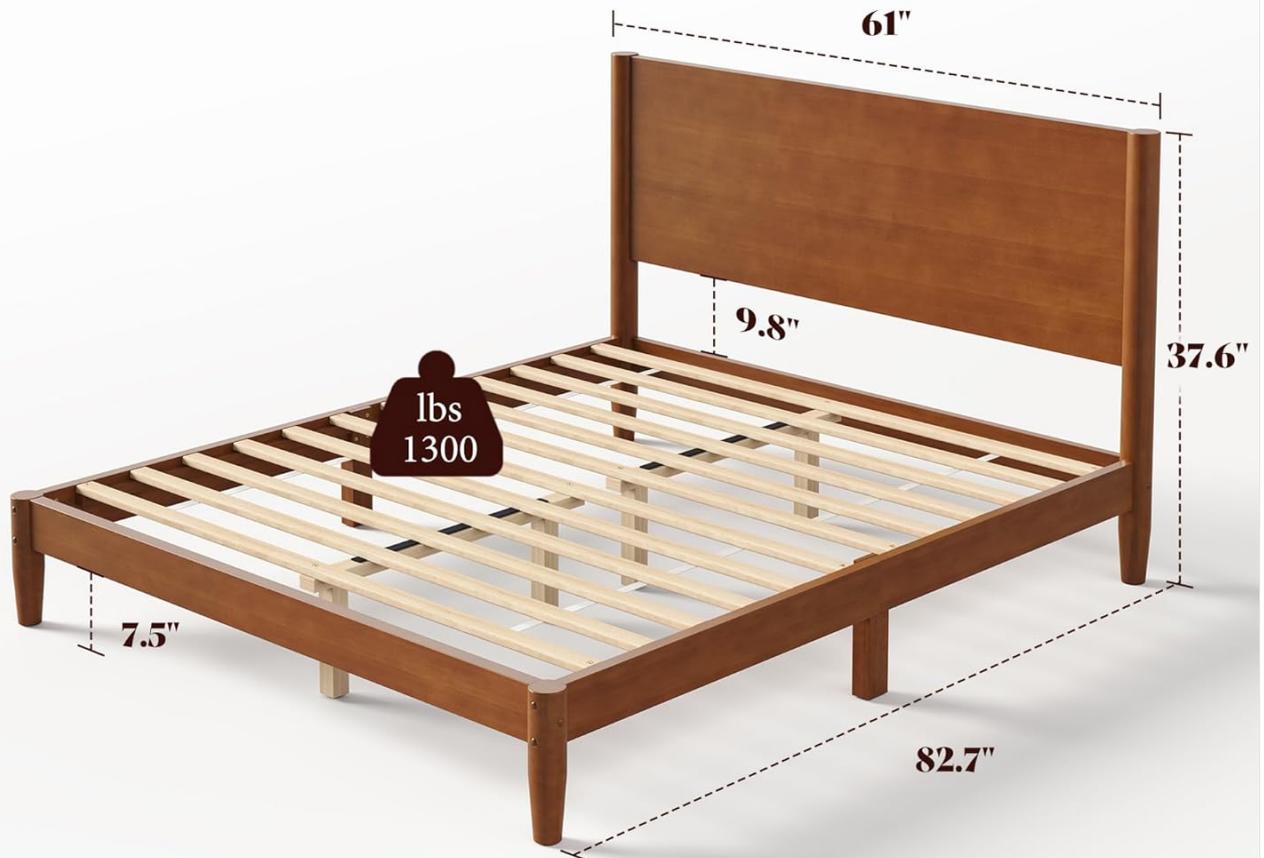


Figure 7: Product Dimensions and Recommended Mattress Thickness

## **Sturdy Cylindrical Legs**



Figure 8: Detail of the sturdy cylindrical legs

## **WARRANTY AND RETURNS**

---

This product is eligible for 90-day easy returns. For specific warranty details, please refer to the product documentation included in your package or contact AMERLIFE customer support.

## **CUSTOMER SUPPORT**

---

For any questions, concerns, or assistance with your AMERLIFE Solid Wood Queen Bed Frame, please contact AMERLIFE customer support. Contact information can typically be found on the packaging or the official AMERLIFE website.