

[Manuals.plus](#) /

› [KOMFOTT](#) /

› KOMFOTT Twin Over Full Bunk Bed Instruction Manual - Model 11346-HU-KT

KOMFOTT 11346-HU-KT

KOMFOTT Twin Over Full Bunk Bed Instruction Manual

Model: 11346-HU-KT | Brand: KOMFOTT

PRODUCT OVERVIEW

This KOMFOTT Twin Over Full Bunk Bed is designed to optimize living space with its vertical configuration. Constructed from solid pine wood, it features a twin-sized upper bunk and a full-sized lower bunk, making it suitable for various ages. The bed includes a 3-step ladder for access to the upper bunk and full-length guardrails for safety. Reinforced with 14+7 plywood slats, it provides dependable mattress support without the need for a box spring. The design also incorporates a spacious under-bed area for storage.



Image: The KOMFOTT Twin Over Full Bunk Bed in white, showcasing its design and space-saving configuration.

SAFETY INFORMATION

Always follow assembly instructions carefully to prevent instability. Do not exceed 350 lbs weight capacity on either bed. Be cautious of sharp edges during assembly and use.

- Ensure all connections are securely tightened after assembly and periodically check for tightness.
- The top bunk is not suitable for children under 6 years of age.
- Use only mattresses that are 6 inches thick or less for both the twin and full beds to ensure proper guardrail height.
- Do not allow horseplay on or under the bed.
- Always use the ladder for entering and exiting the upper bunk.



Solid Wood Frame



Long-Term Use



Crack-Resistant
Finish



Premium
Build

Twin-Over-Full Bunk Bed



Solid Pine Construction



14 + 7 Plywood Slats

Image: The full-length guardrails on the upper bunk, designed for a secure sleeping environment with an optimal height of 12 inches.

SPECIFICATIONS AND DIMENSIONS

The KOMFOTT Twin Over Full Bunk Bed is constructed from pine wood and plywood, featuring a painted white finish. Key dimensions and specifications are provided below:

Feature	Specification
Product Dimensions (L x W x H)	79.5" x 59" x 58"
Twin Size Bed Dimensions (L x W x H)	77" x 39" x 12"
Full Size Bed Dimensions (L x W)	77" x 54"
Ground Clearance for Full Size Bed	10"
Height of Guardrails	12"

Feature	Specification
Height Between Beds	28"
Recommended Mattress Thickness (Twin)	≤6"
Recommended Mattress Thickness (Full)	≤6"
Weight Capacity (Twin Size Bed)	350 lbs
Weight Capacity (Full Size Bed)	350 lbs
Net Weight	112.5 lbs
Frame Material	Pine Wood, Plywood
Color	White
Assembly Required	Yes

Product Dimensions

...

	Weight Capacity	Recommended Mattress Thickness
Twin Size	350 lbs	≤6"
Full Size	350 lbs	≤6"

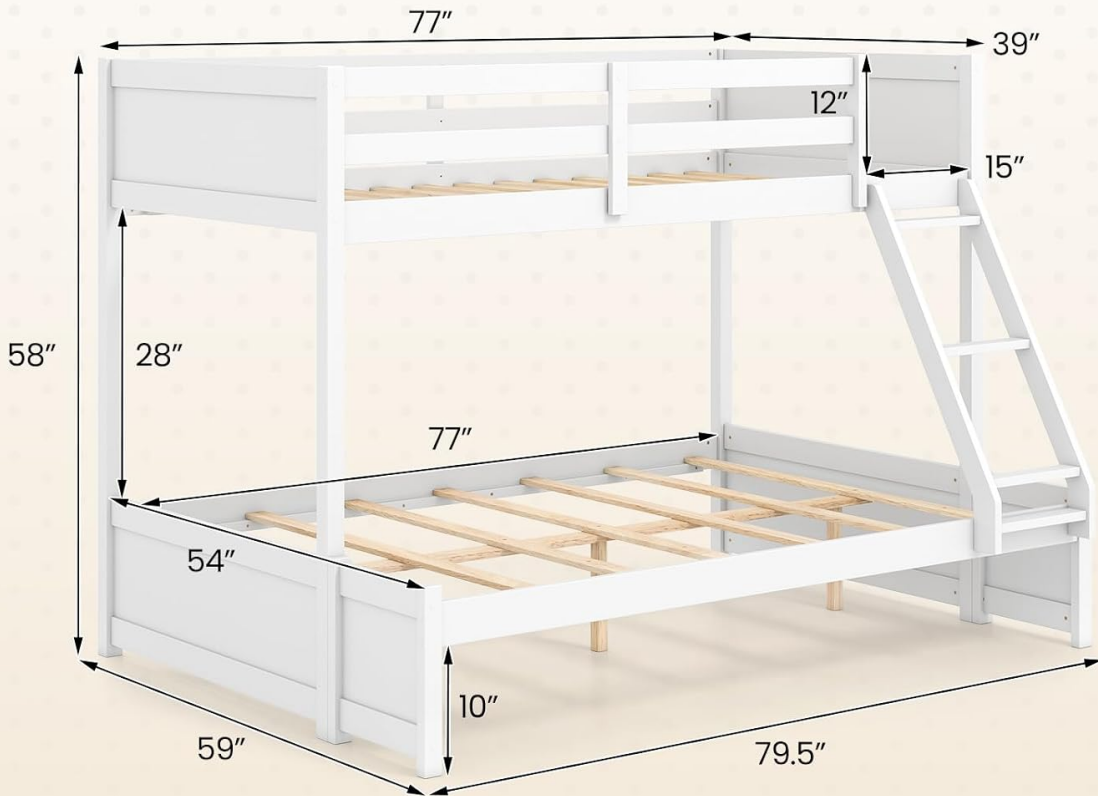


Image: A diagram illustrating the precise dimensions of the KOMFOTT Twin Over Full Bunk Bed, including height, length, width, and clearances.

SETUP AND ASSEMBLY

Assembly of the KOMFOTT Twin Over Full Bunk Bed is required. It is recommended that two adults perform the assembly to ensure stability and ease of construction. All necessary components and an instruction manual are included in the package. Follow the step-by-step instructions provided with the product for proper assembly.

Key Assembly Considerations:

- **Unpack Carefully:** Lay out all parts and hardware on a clean, soft surface to prevent scratches. Verify all components are present against the parts list.
- **Tool Requirements:** Basic hand tools (e.g., screwdriver, Allen wrench) are typically included or commonly available.
- **Secure Connections:** Ensure all bolts, screws, and fasteners are tightened securely at each step. Do not overtighten to avoid damaging the wood.
- **Ladder Placement:** The angled 3-step ladder should be securely attached as per instructions to prevent movement during use.



Image: An illustration highlighting the solid pine construction and the 14+7 plywood slats that form the bed base, ensuring durability and mattress support.



Image: Details of the bunk bed's premium craftsmanship, including the angled 3-step ladder, reinforced base legs, and secure joint system for enhanced stability.

OPERATING INSTRUCTIONS

The KOMFOTT Twin Over Full Bunk Bed is designed for comfortable and safe use. Follow these guidelines for optimal operation:

- **Sleeping:** The upper bunk accommodates a twin-sized mattress, and the lower bunk accommodates a full-sized mattress. Ensure mattresses do not exceed 6 inches in thickness for safety.
- **Ladder Use:** Always use the integrated 3-step ladder to access the upper bunk. Ensure the ladder is free from obstructions and stable before climbing.
- **Guardrails:** The full-length guardrails on the upper bunk are a critical safety feature. Do not remove or modify them.
- **Under-Bed Storage:** Utilize the 10-inch clearance beneath the full-size bed for storage. This space is ideal for bins, boxes, or other items to help keep the room tidy.



Image: The bunk bed demonstrating its spacious 10-inch under-bed storage area, suitable for organizing items and simplifying cleaning.

SECURE SLEEP ENVIRONMENT



Full-Length Safety Rails: Ensures a protected sleeping area for peace of mind.



12":
Optimal Height
for Security.



Image: The bunk bed integrated into various room settings, illustrating its versatility for child's rooms, shared living spaces, or modern apartments.

MAINTENANCE

Regular maintenance will help preserve the appearance and structural integrity of your KOMFOTT bunk bed.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the painted finish.
- **Hardware Check:** Periodically inspect all bolts, screws, and connections to ensure they remain tight. Re-tighten as necessary to maintain stability and prevent wobbling.
- **Wood Care:** The pine wood construction features a crack-resistant finish. Avoid exposing the bed to extreme temperature changes or excessive moisture.

TROUBLESHOOTING

If you encounter issues with your bunk bed, consider the following common solutions:

- **Wobbling or Instability:** This is most often caused by loose hardware. Re-check and tighten all bolts

and screws throughout the frame. Ensure the bed is on a level surface.

- **Squeaking Noises:** Squeaking can also be due to loose connections. Tighten all hardware. Applying a small amount of wax or lubricant to metal-on-metal contact points (if applicable) can also help.
- **Difficulty with Assembly:** Refer back to the included assembly manual. Ensure all parts are oriented correctly and that no steps were skipped. Two-person assembly is highly recommended.

For issues not resolved by these steps, please contact KOMFOTT customer support.

WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the documentation included with your purchase or contact KOMFOTT customer service directly. If you require assistance with assembly, parts, or have any questions about your bunk bed, please reach out to KOMFOTT customer support for guidance.