

[Manuals.plus](#) /

› [ModernMate](#) /

› ModernMate 9-Drawer Dresser (Model XDS-DG0109-MY) Instruction Manual

ModernMate XDS-DG0109-MY

ModernMate 9-Drawer Dresser Instruction Manual

Model: XDS-DG0109-MY

1. PRODUCT OVERVIEW

The ModernMate 9-Drawer Dresser is designed for efficient storage in various living spaces. It features a 63-inch wide design with a slim 15.6-inch depth, making it suitable for bedrooms, walk-in closets, or living areas. The dresser is equipped with nine drawers, each operating smoothly on two-stage steel ball-bearing slides. The top surface features a faux travertine pattern PVC laminate finish with rounded edges for a refined appearance.

Product Dimensions

Overall dimensions: 15.6"D x 63"W x 32.3"H (39.5cm D x 160cm W x 82cm H). Each drawer measures approximately 13.1"D x 19.5"W x 5.6"H (33.2cm D x 49.5cm W x 15cm H).



Figure 1: Product Dimensions

2. SAFETY INFORMATION

To prevent tipping and ensure stability, it is crucial to install the included anti-tipping device. Always secure the dresser to a wall using the provided hardware. Do not allow children to climb on or play with the dresser. Distribute weight evenly across drawers to maintain balance. Keep small parts away from children during assembly.

Anti-Tipping Device Installation

Locate the anti-tipping device in the hardware package. Follow the detailed instructions in the assembly guide to securely attach the device to the back of the dresser and to a wall stud. Ensure the device is taut and properly anchored.



Figure 2: Anti-Tipping Device Installation

3. PACKAGE CONTENTS

Your ModernMate 9-Drawer Dresser package includes the following components. Please verify all parts are present before beginning assembly. Note that the product will be sent in two separate packages and may arrive on different days.

- 1 x 9-Drawer Dresser (unassembled components)
- 9 x Metal Handles
- Assembly Hardware Kit (screws, dowels, cam locks, drawer slides, anti-tipping device)
- Instruction Manual

4. SETUP AND ASSEMBLY

Assembly of the ModernMate 9-Drawer Dresser requires careful attention to detail. Clear instructions and all necessary hardware are included. It is recommended to have two people for assembly to ensure stability and ease of handling larger components.

Preparation

- Clear a spacious, clean area for assembly.
- Lay out all components and hardware, comparing them against the parts list in the included manual.
- Gather necessary tools: Phillips head screwdriver, hammer (optional, for dowels), and a level.

Assembly Steps

1. **Assemble the Main Frame:** Follow the diagrams to connect the side panels, back panel, and base using the provided cam locks and dowels. Ensure all connections are secure.
2. **Install Drawer Slides:** Attach the drawer slides to the interior of the dresser frame and to the sides of each drawer box. Pay close attention to the orientation of the slides.
3. **Construct Drawers:** Assemble each of the nine drawer boxes. Insert the bottom panel into the grooves and secure the

back panel.

4. **Attach Handles:** Secure the metal handles to the front of each drawer using the provided screws.
5. **Insert Drawers:** Carefully slide each assembled drawer into its designated slot on the dresser frame. Ensure smooth operation.
6. **Install Anti-Tipping Device:** As detailed in the Safety Information section, securely attach the anti-tipping device to the dresser and to a wall stud.

For visual guidance on the dresser's features and assembly, please refer to the official product video:


Video 1: Official ModernMate 9-Drawer Dresser Overview. This video provides a visual demonstration of the dresser's features and general assembly process.

5. OPERATING INSTRUCTIONS

Drawer Operation

The drawers are designed for smooth and quiet operation thanks to the two-stage steel ball-bearing slides. To open a drawer, gently pull the metal handle. To close, push the drawer firmly until it is fully seated within the frame.

- Avoid forcing drawers open or closed.
- Do not overload drawers beyond their weight capacity (approximately 33 lbs or 15 kg per drawer).
- Ensure items are placed evenly to prevent strain on the drawer slides.

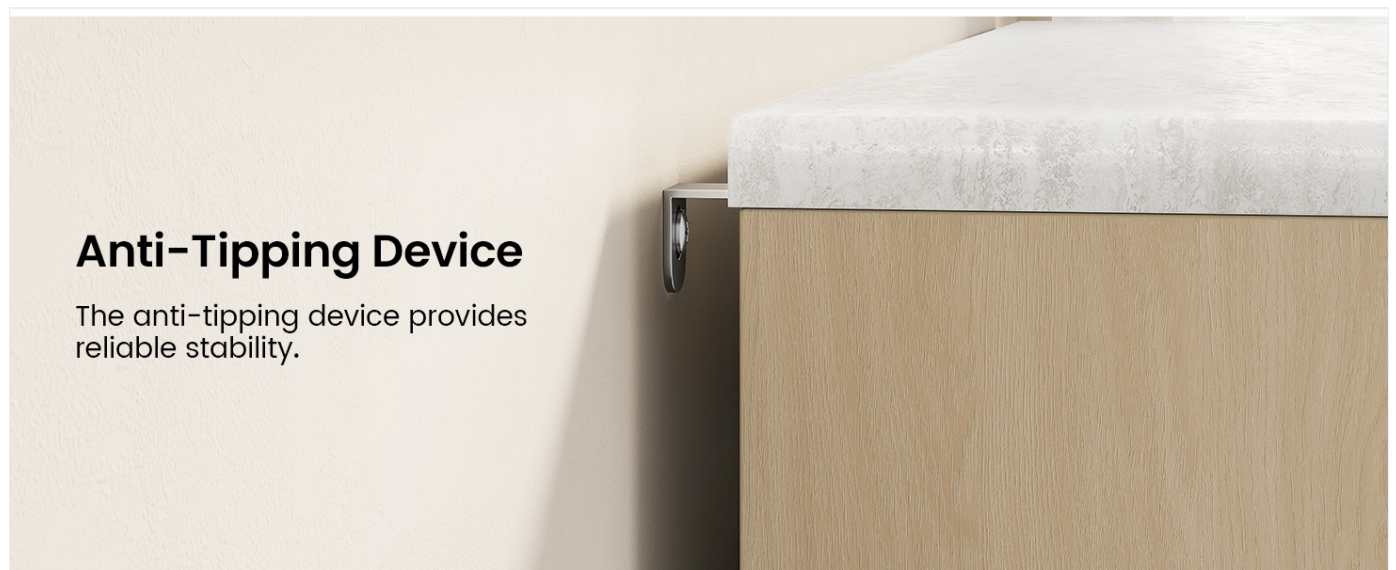

Anti-Tipping Device

The anti-tipping device provides reliable stability.

Figure 3: Open Drawers for Storage

6. MAINTENANCE

Proper care will extend the life and appearance of your ModernMate dresser.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the PVC laminate finish.
- **Spills:** Immediately wipe up any spills to prevent staining or damage to the faux travertine texture.
- **Drawer Slides:** Periodically check drawer slides for smooth operation. If they become stiff, a small amount of silicone lubricant can be applied.
- **Hardware:** Periodically check and tighten any loose screws or hardware to maintain structural integrity.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration of the finish.

Key Features for Durability

Anti-Tipping Device



Figure 4: Detailed Features (Curved Edge, Smooth Gliding Drawers, Metal Handle, Faux Travertine Texture)

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Drawers stick or do not slide smoothly.	Misaligned drawer slides, overloaded drawer, debris in slides.	Check alignment of slides, reduce drawer contents, clean slides. Apply silicone lubricant if needed.
Dresser feels wobbly or unstable.	Loose hardware, uneven floor, anti-tipping device not installed.	Tighten all assembly hardware. Ensure dresser is on a level surface. Install or re-secure the anti-tipping device.
Gaps between drawers or frame.	Incorrect assembly, loose cam locks.	Review assembly instructions for correct component placement. Tighten all cam locks and screws.

Problem	Possible Cause	Solution
Missing parts.	Packaging error.	Contact ModernMate customer support with your model number and a description of the missing parts.

8. SPECIFICATIONS

- **Brand:** ModernMate
- **Model Number:** XDS-DG0109-MY
- **Material:** PVC, MDF, Fiberboard, Steel
- **Finish Type:** Faux Travertine Pattern PVC Laminate
- **Product Dimensions:** 15.6"D x 63"W x 32.3"H
- **Number of Drawers:** 9
- **Item Weight:** 164 pounds
- **Color:** Beige
- **Included Components:** 1 x 9-Drawer Dresser, 9 x Metal Handles, Assembly Hardware

9. CUSTOMER SUPPORT

For any questions, missing parts, or assistance with assembly or troubleshooting, please contact ModernMate customer support. Refer to your purchase documentation for specific contact details or visit the official ModernMate store online.
Online Store: [ModernMate Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question