

Bellemave FST00353-Q-AA1

Bellemave Queen Upholstered Floor Bed
MODEL: FST00353-Q-AA1
Instruction Manual

Important Safety Information

Please read all instructions carefully before assembly and use of this product. Keep this manual for future reference.

- Ensure all parts are present and undamaged before beginning assembly.
- Do not use power tools for assembly as this may overtighten fasteners and damage the frame.
- Assemble the bed on a soft, clean surface to prevent scratches.
- Periodically check all connections and fasteners to ensure they remain tight.
- Do not exceed the maximum weight capacity of 500 pounds.
- Keep small parts away from children during assembly.
- It is recommended to use a mattress no thicker than 6 inches for optimal safety with the guardrails.

Package Contents

Verify that all components listed below are included in your package. If any parts are missing or damaged, please contact customer support.

Part	Description	Quantity
A	Upholstered Side Panels (Left/Right)	2
B	Upholstered Head/Foot Panels	2
C	Center Support Beam	1
D	Wooden Slats	Multiple
E	Hardware Pack (Bolts, Washers, Allen Key)	1


Tools Required: Included Allen Key (E), Phillips Head Screwdriver (not included).

Setup and Assembly Instructions

Follow these steps to assemble your Bellemave Queen Upholstered Floor Bed.

1. **Step 1: Unpack and Identify Parts.** Carefully remove all components from the packaging. Lay them out on a clean, soft surface and compare them against the 'Package Contents' list to ensure everything is present.

Product Dimensions

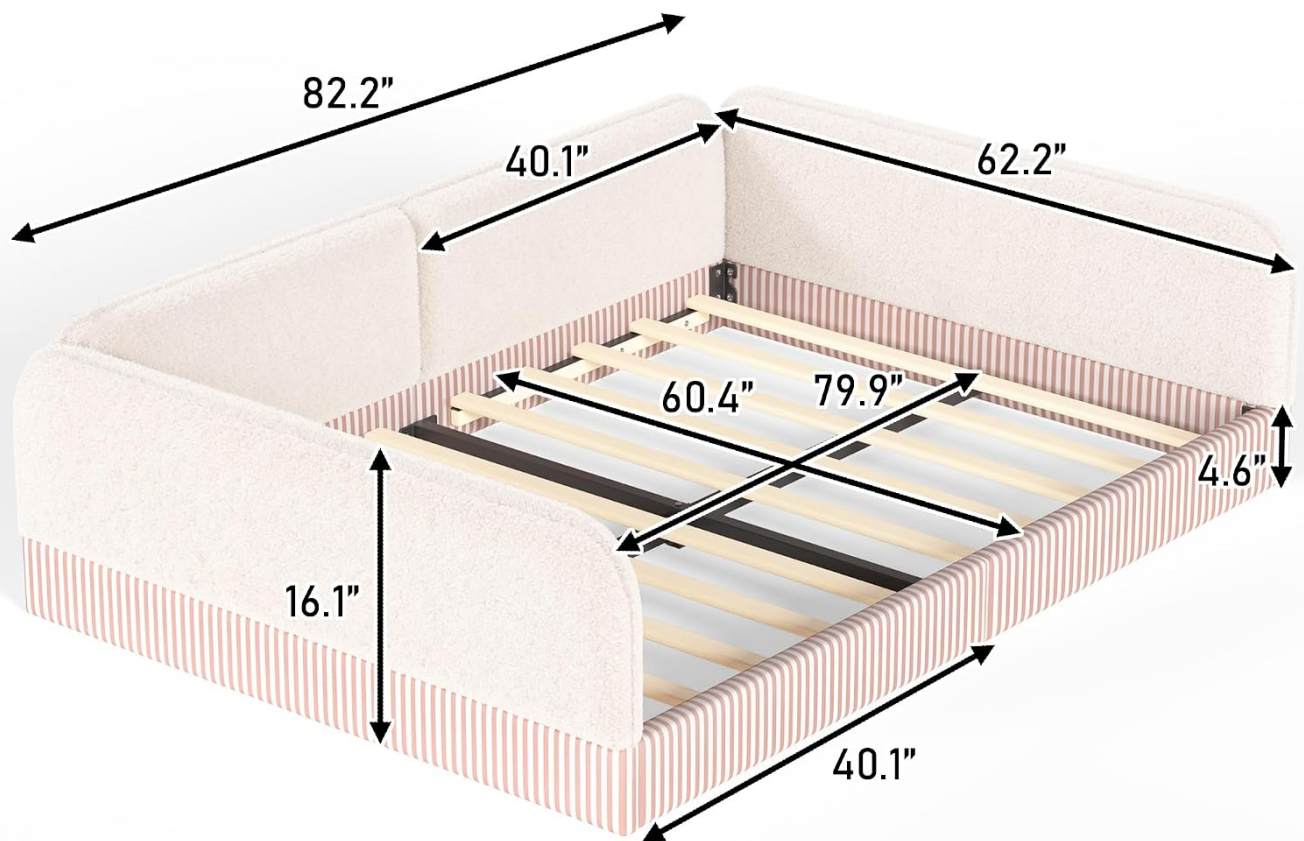

Size: inch

Product Dimensions: 82.3"L x 62.2"W x 16.14"H. This image illustrates the overall size of the bed frame.

2. **Step 2: Assemble the Bed Frame.** Connect the upholstered side panels (A) to the head and foot panels (B) using the bolts and washers from the hardware pack (E). Ensure all connections are snug but do not overtighten.



The bed frame assembled, ready for slat installation. Note the integrated guardrails.

3. **Step 3: Install the Center Support Beam.** Attach the center support beam (C) to the designated brackets on the head and foot panels. Secure with bolts provided in the hardware pack (E).
4. **Step 4: Place the Wooden Slats.** Lay the wooden slats (D) across the bed frame, resting them on the side rails and the center support beam. Ensure they are evenly spaced and secured if your model includes pre-drilled holes for screws.



Detail of the wooden slats and central support system, providing a sturdy base for the mattress.

5. **Step 5: Final Check.** Once all parts are assembled, double-check all bolts and connections to ensure they are secure. Place your mattress on the bed. The bed is now ready for use.

Operating and Usage

- **Mattress Placement:** Place your queen-sized mattress directly onto the wooden slats. No box spring is required. For optimal safety with the guardrails, a mattress no thicker than 6 inches is recommended.
- **Guardrail Functionality:** The three-sided high guardrails provide a secure sleeping environment, preventing accidental falls.
- **Side Storage Pocket:** Utilize the integrated side storage pocket for small items such as books, toys, or remote controls.
- **Weight Distribution:** Distribute weight evenly across the bed surface. Avoid concentrating heavy loads in one area.

Maintenance

- **Cleaning Upholstery:** The premium teddy fleece upholstery is durable and easy to spot-clean. Use a mild detergent and a

damp cloth to gently clean any spills or marks. Avoid harsh chemicals or abrasive cleaners.

- **Frame Cleaning:** Wipe the wooden frame components with a soft, dry cloth.
- **Regular Inspection:** Periodically inspect all bolts and connections to ensure they are tight. Re-tighten if necessary to maintain stability and safety.
- **Avoid Moisture:** Keep the bed in a dry environment to prevent damage to the wood and upholstery.

Troubleshooting

Problem	Possible Cause	Solution
Bed feels unstable or wobbly.	Loose bolts or connections.	Check and tighten all bolts and fasteners using the provided Allen key.
Squeaking noises.	Loose connections or friction between parts.	Ensure all bolts are tight. Apply a small amount of lubricant (e.g., silicone spray) to contact points if necessary.
Slats are shifting.	Slats not properly seated or secured.	Re-position slats evenly. If your model includes screws for slats, ensure they are installed.

If you encounter issues not listed here or require further assistance, please contact Bellemave customer support.

Specifications

Feature	Detail
Model Number	FST00353-Q-AA1
Size	Queen
Product Dimensions (L x W x H)	82.3" x 62.2" x 16.14"
Material	Wood, Teddy Fleece Upholstery
Color	Beige
Maximum Weight Recommendation	500 pounds
Guardrail Height	11.5 inches (approximate)
Box Spring Required	No
Special Features	3-sided guardrails, side storage pocket

Warranty and Support

For information regarding product warranty, returns, or to purchase extended protection plans, please refer to your purchase documentation or contact Bellemave customer service directly.

Customer Support: For assistance with assembly, missing parts, or any other inquiries, please visit the [Bellemave Store on Amazon](#) or contact their support channels as provided with your purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0HBJFQT5>

More documents and user manuals: <https://manuals.plus/>