



## ASPVO HF23ACTB Coffee Table Installation Guide

[Home](#) » [ASPVO](#) » ASPVO HF23ACTB Coffee Table Installation Guide 






















**HF23ACTB Coffee Table  
Installation Guide**

### Contents

- [1 HF23ACTB Coffee Table](#)
- [2 Documents / Resources](#)
  - [2.1 References](#)
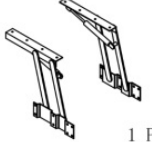
### HF23ACTB Coffee Table




① Solid Wood Leg  4 PCS	② Rounded Bar  4 PCS	③ Panel 3  1 PC	④ Panel 4  1 PC	⑤ Panel 5  1 PC	⑥ Panel 6  1 PC	⑦ Panel 7  1 PC
⑧ Panel 8  1 PC	⑨ Panel 9  1 PC	⑩ Metal Bar  1 PC	A. Dowel Pin Bolt  31+1 PCS	B. Cam Bolt Nut  31+1 PCS	C. Wood Dowel Pin  18+1 PCS	D. White Sticker  31+1 PCS
E. Lift Mechanism  1 PC	F. M6 Screw  2 PCS	G. M5 Screw  10+1 PCS	H. Spare Screw  10 PCS	I. Screwdriver  1 PC		


### Model: HF23ACTB

**Attention:** First of all, put a piece of carton or rug on the floor, then begin to install the panels, so as to prevent the parts from scratch.


STEP# I Find 4 Rounded Bars (part 2) and screw 4 dowel pin bolts (part A) in each of them.

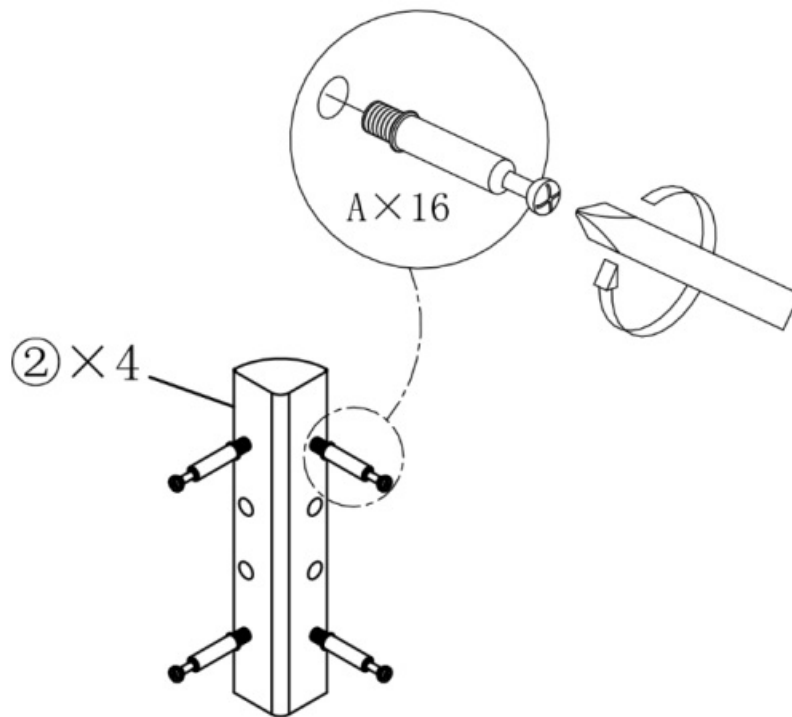


STEP #2 Insert 2 wood dowel pins (part C) into each side of panel 5 & 6

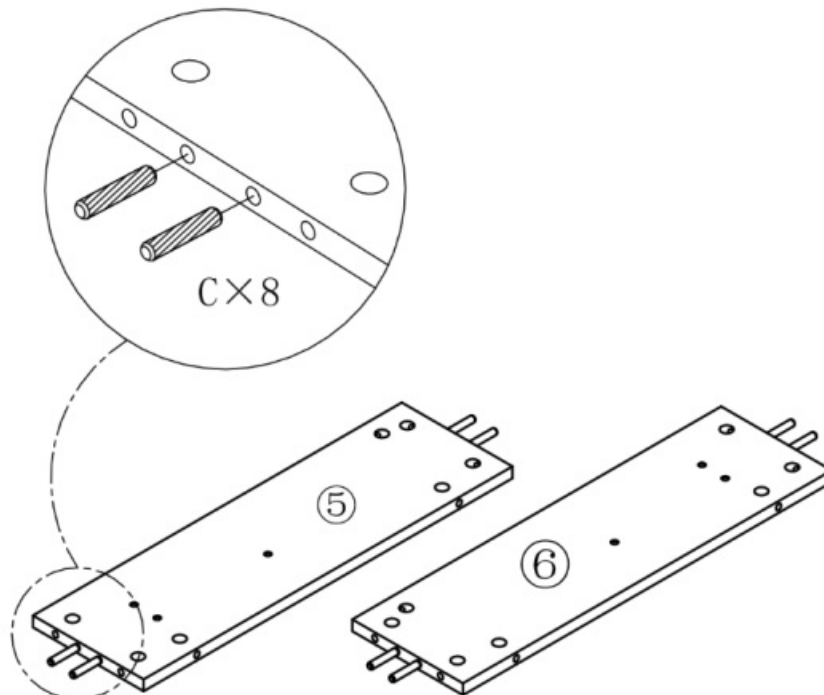


STEP #3 Insert 2 wood dowel pins into each side of panel 3 & 4, and 2 wood dowel pins into top of panel 4.

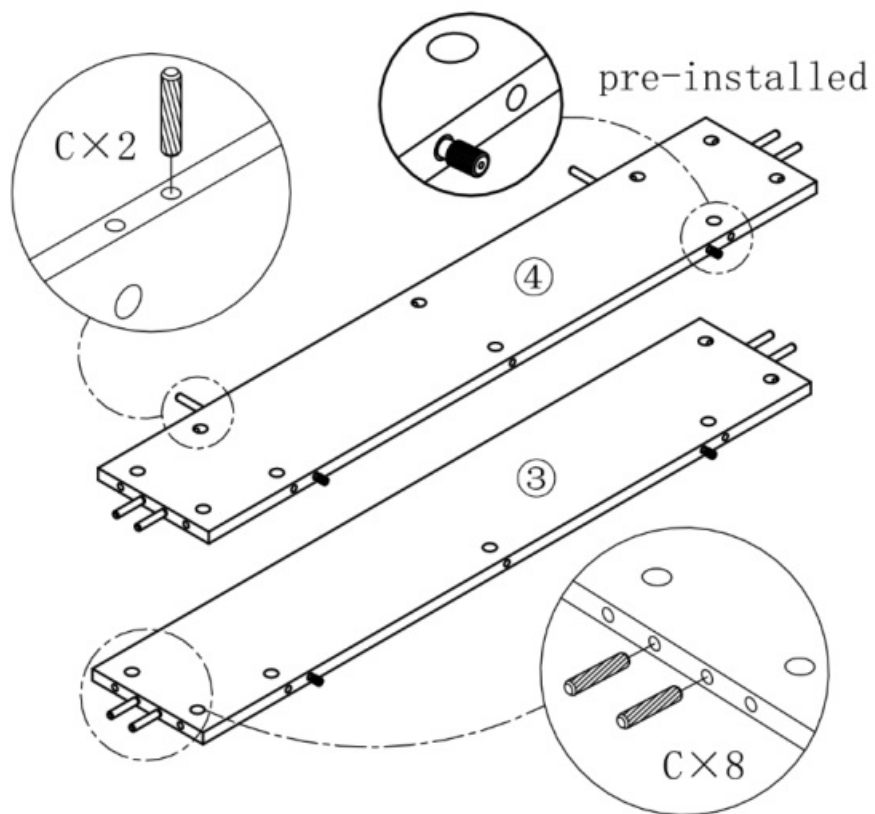


STEP #4 Put rounded bars (part 2) and panel 3-6 together.

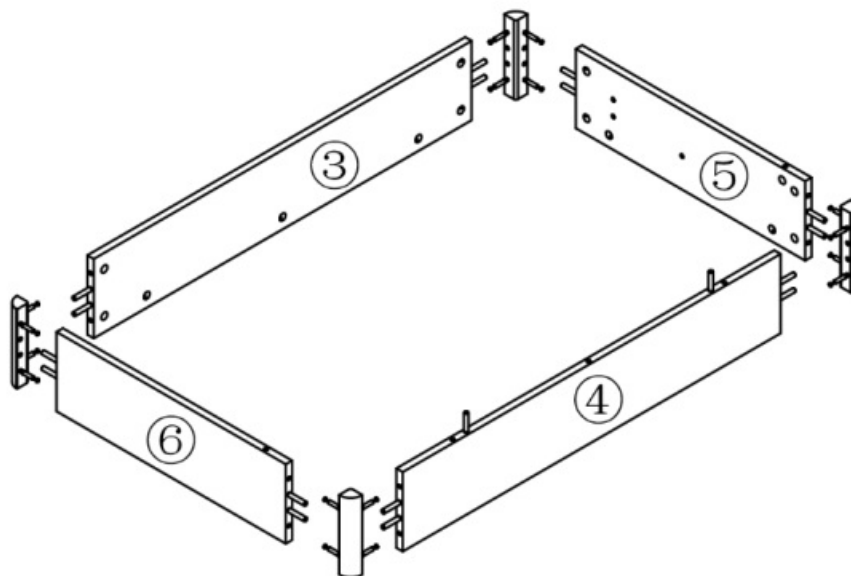


STEP #5 Put 16 cam bolt nuts (part B) inside the holes on panel 3-6, then screw to lock them.

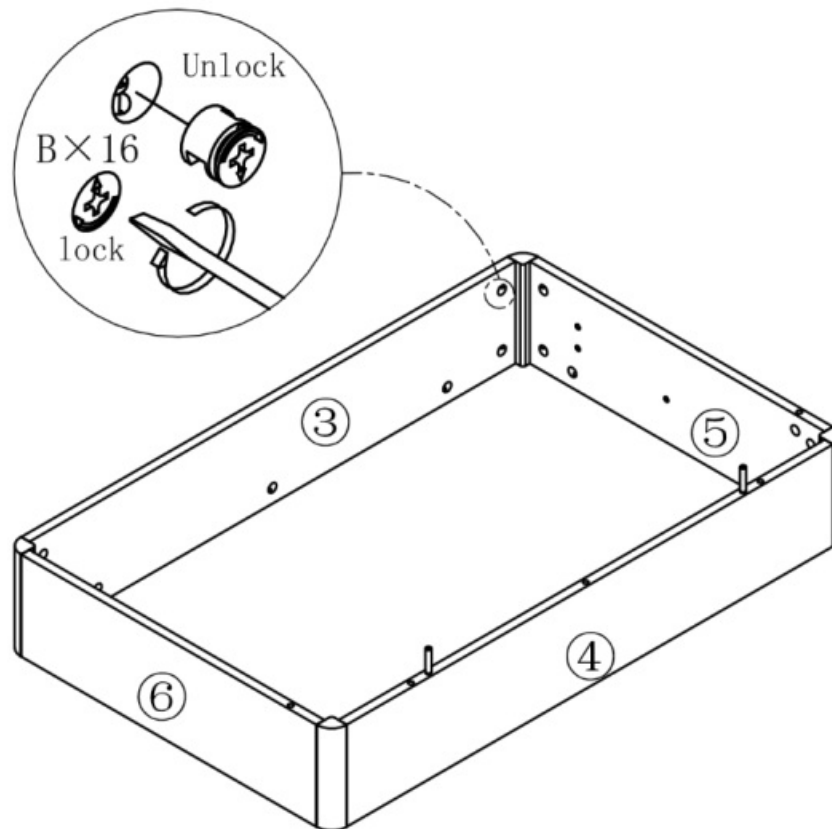


STEP #6 Find panel 9 and screw 5 dowel pin bolts (part A) into it.

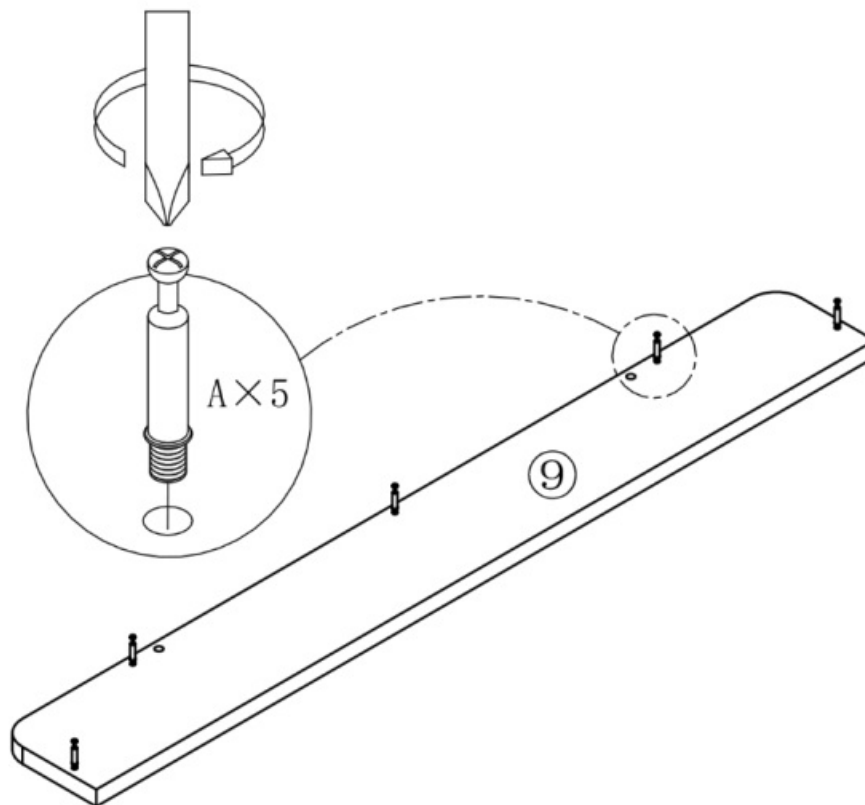


STEP #7 Place panel 8 and panel 9 together and align them.

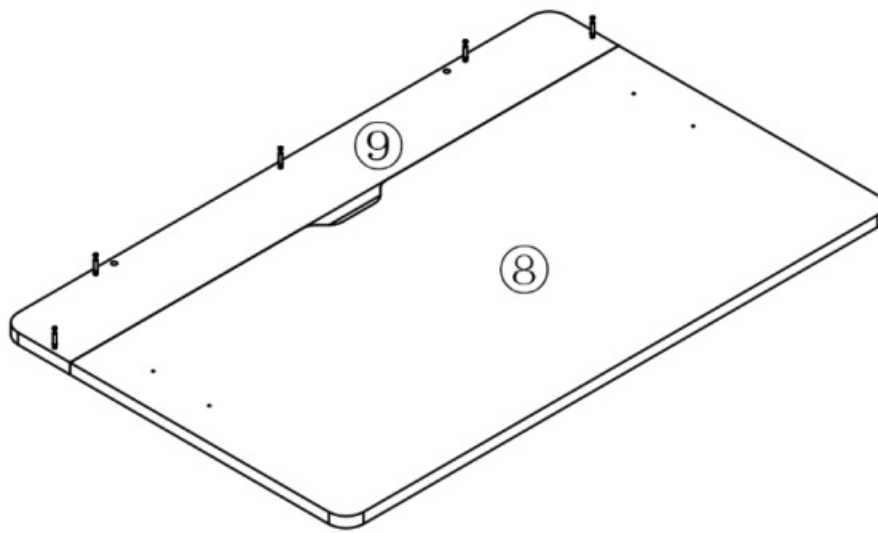


STEP #8 Turn the assembled table frame (step 5) upside down then Fit it on panel 8 & 9.

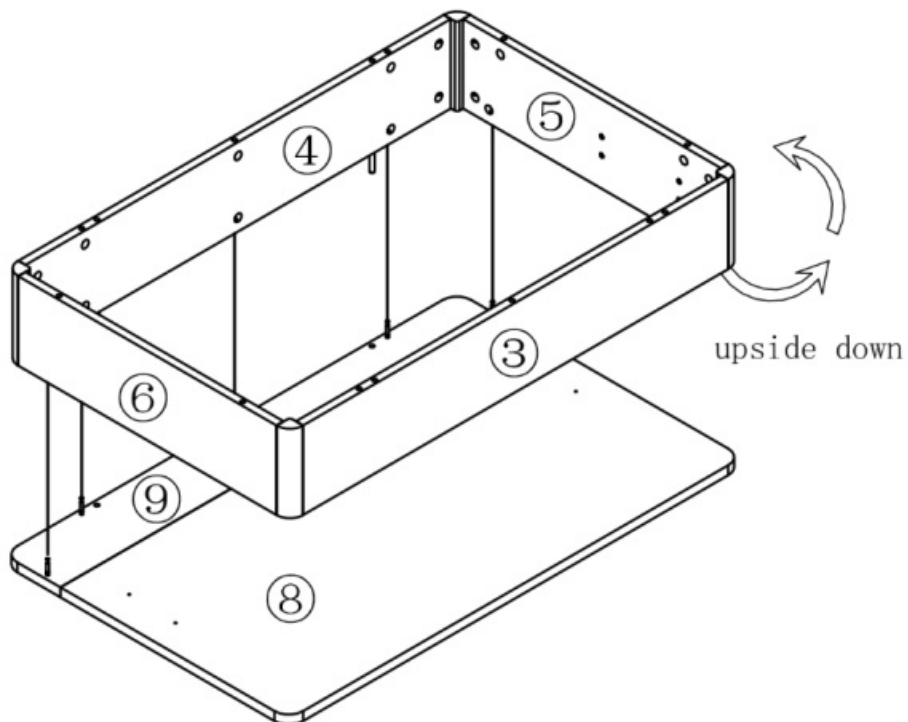


STEP #9 Put 5 cam bolt nuts (part B) inside the holes on panel 4&5&6, then screw to lock them.

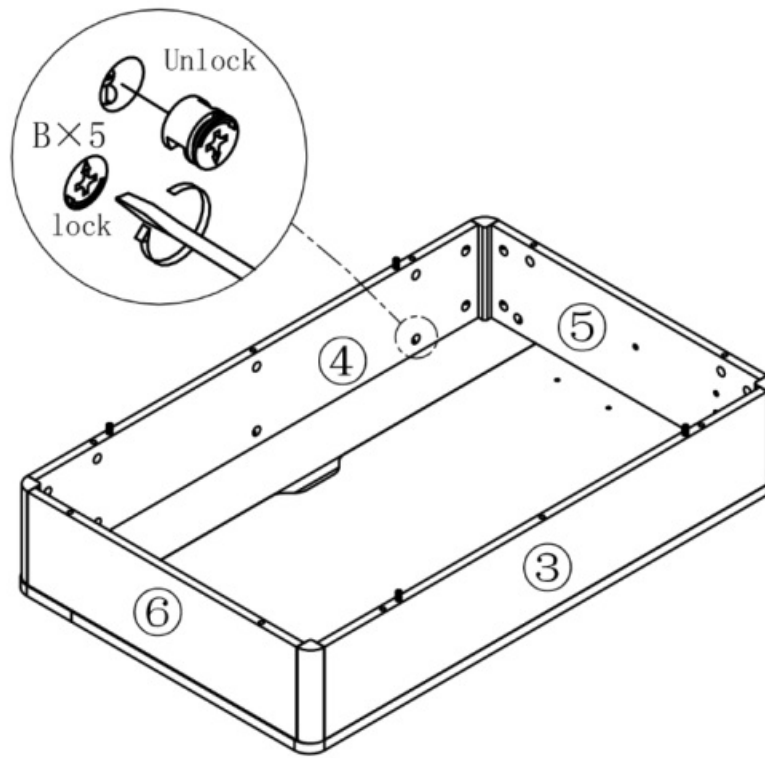


STEP #10 Prepare two lift mechanisms and align them with pre-drilled holes on panels.

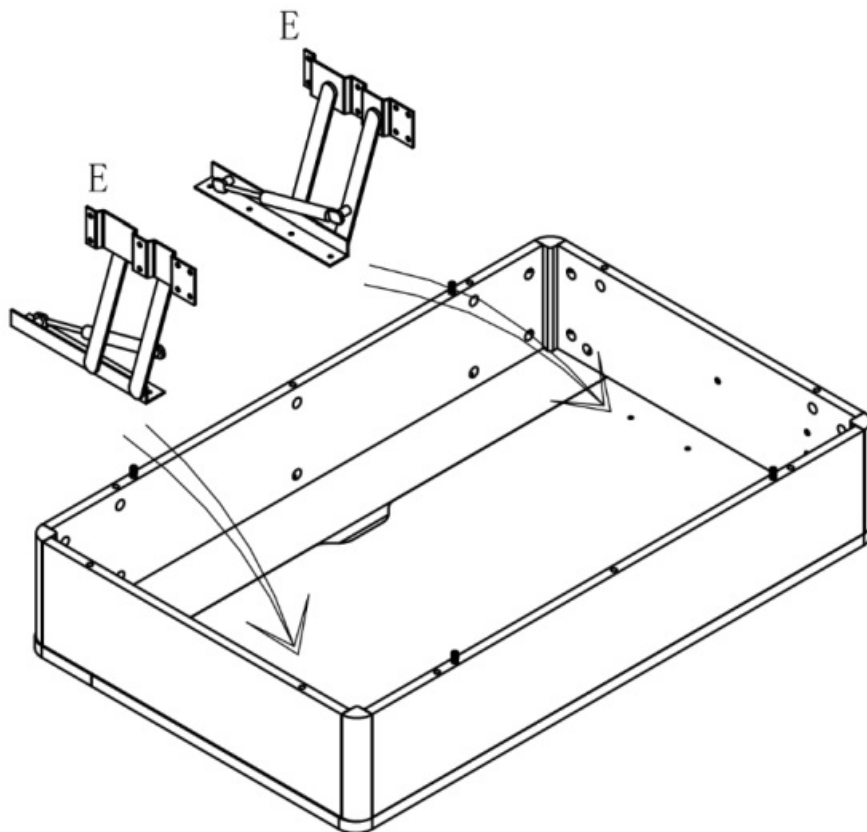

STEP # 11 Find IO m5 screws and fasten lift mechanisms to the panel 5 & 6 & 8.

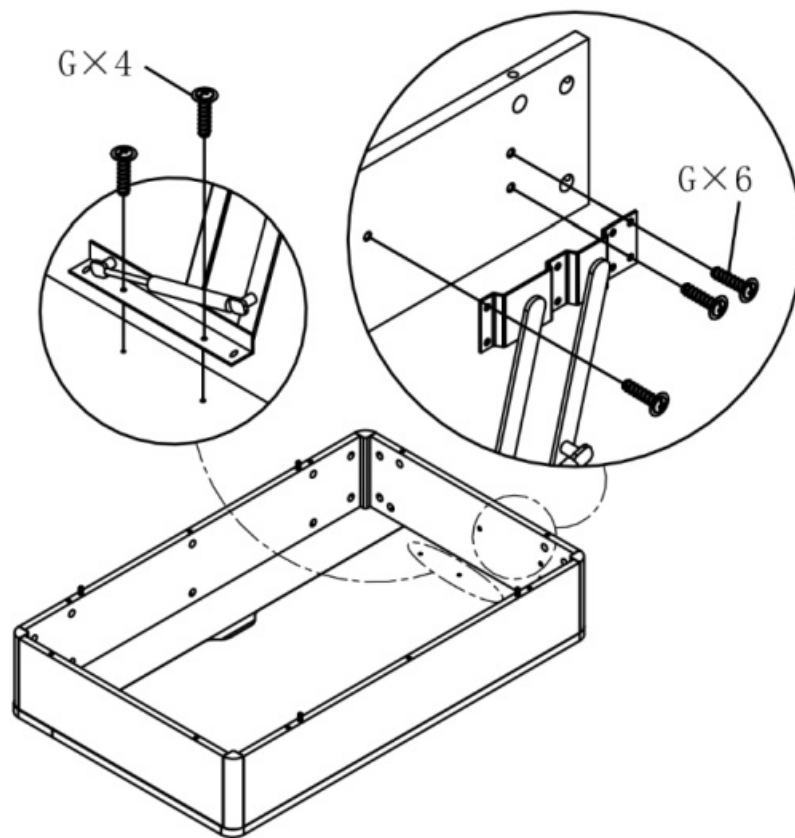


STEP # 12 Find panel 7 and screw IO dowel pin bolts (part A) into it.

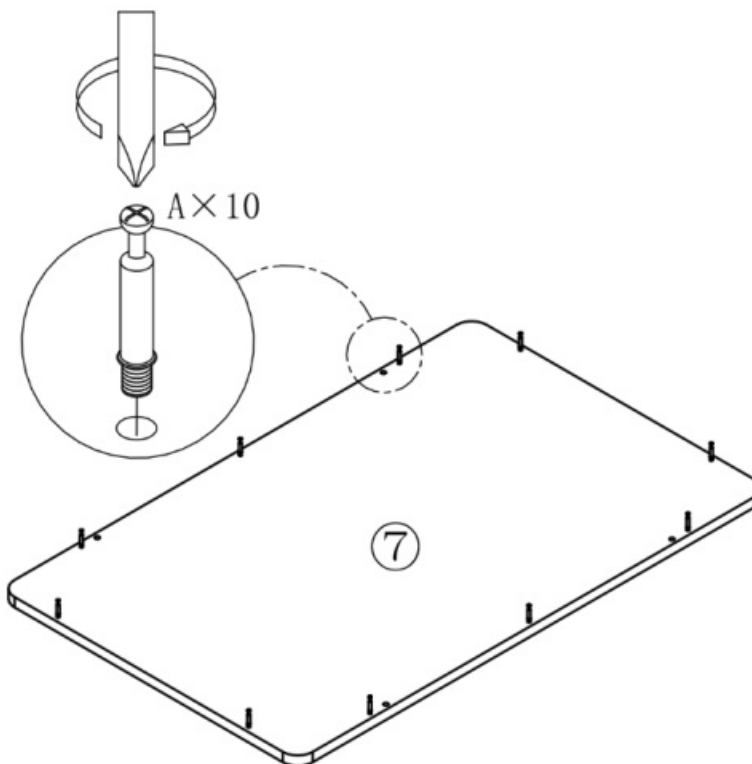


STEP# 13 Fit panel 7 onto table frame, align the bolts and pins carefully.




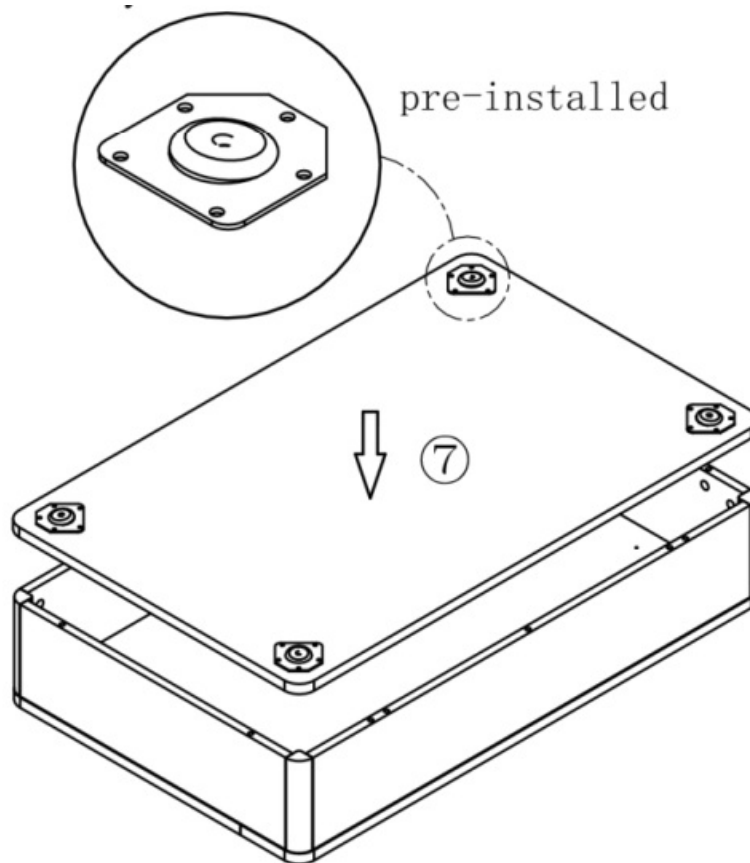


STEP# 14 Fasten 4 solid wood legs on to pre-assembled metal plates on panel 7

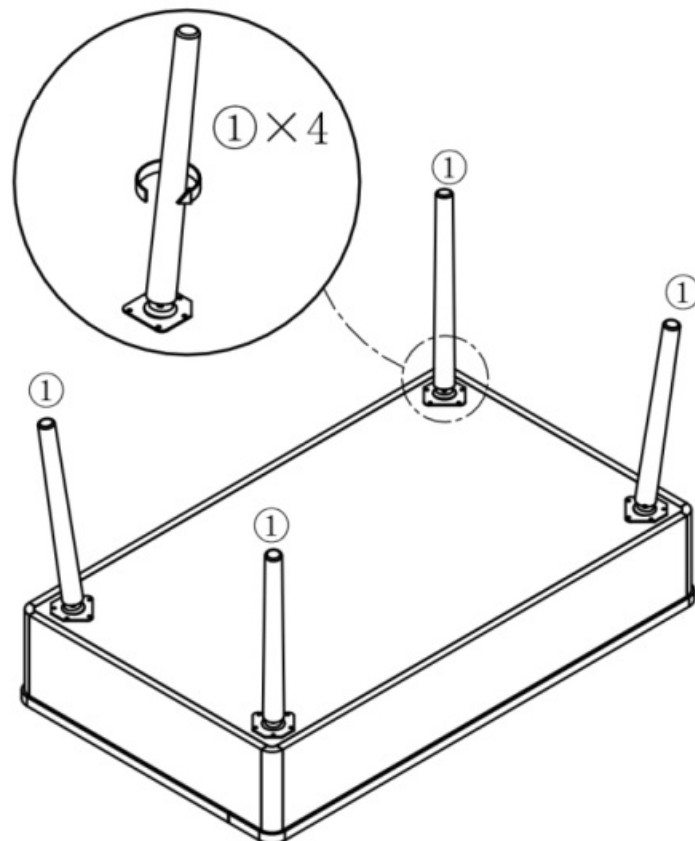


STEP #15 Hold the lifetable side (Panel 8) and carefully flip the coffee table.

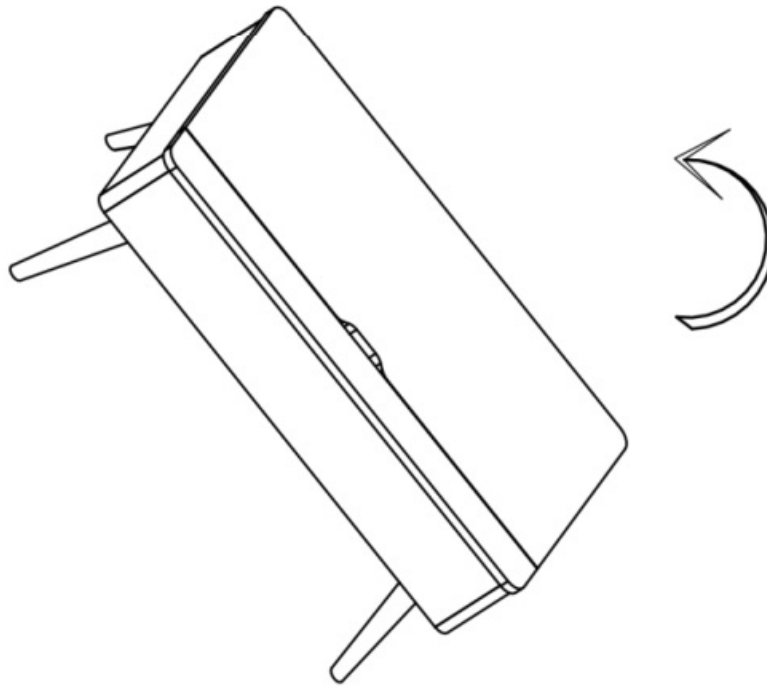


STEP #16 Lift the tabletop, put 10 cam bolt nuts (part 8) inside the holes on panel 3-6, then screw to lock them.

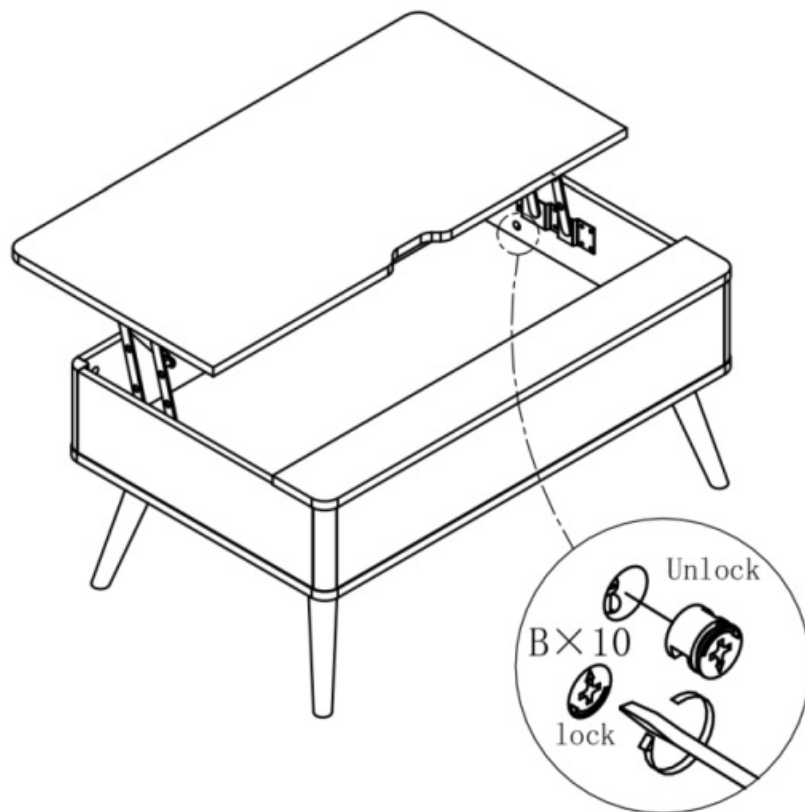

STEP #17 Place metal bar (Part I 0) between two lift mechanisms, fasten two m6 screws (part F) into it.

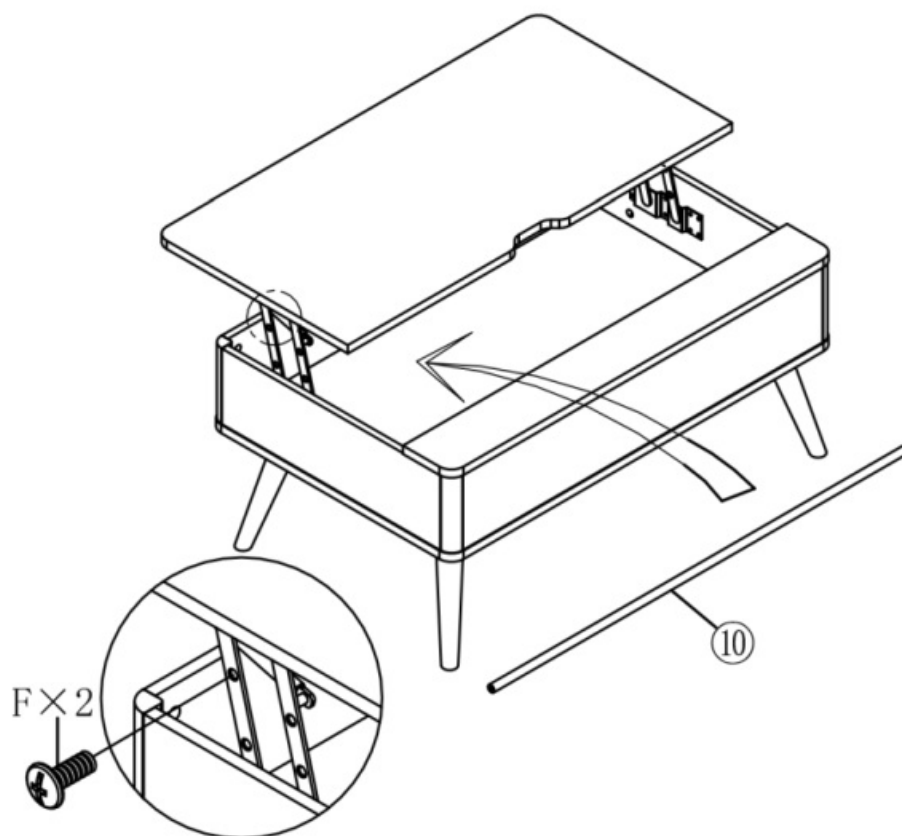

STEP # 18 (Optional) Put 31 white stickers (Part D) on the cam bolt nuts to cover them. Then you are all set!

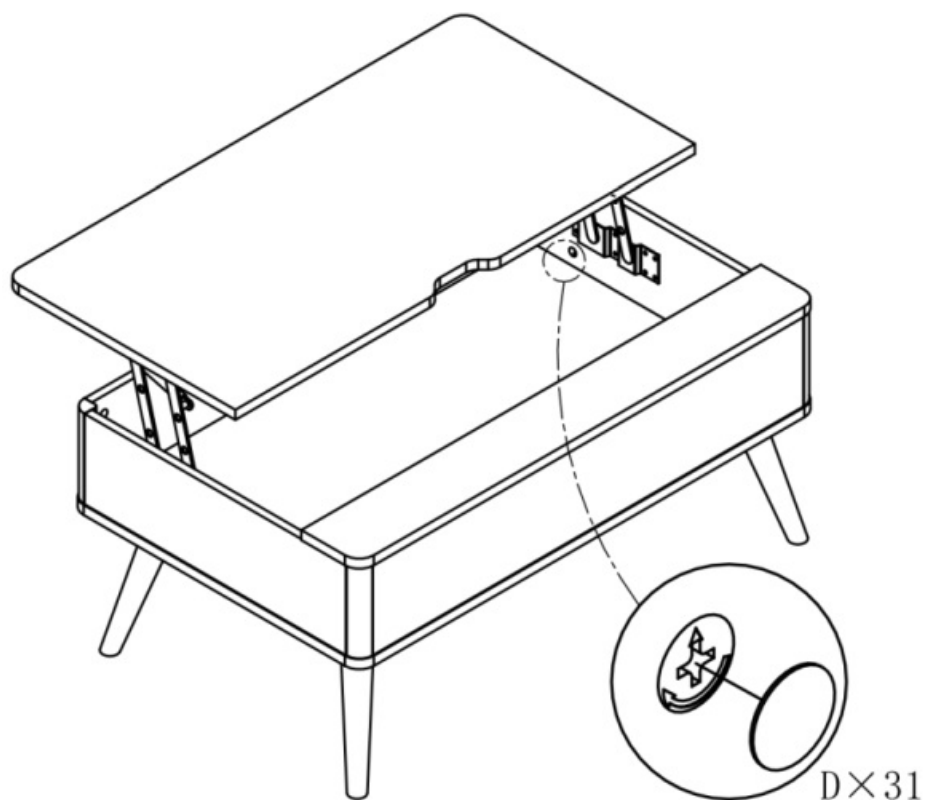

**ASPVO**

HF23ACT

---

## Documents / Resources

	<a href="#">ASPVO HF23ACTB Coffee Table</a> [pdf] Installation Guide HF23ACTB Coffee Table, HF23ACTB, Coffee Table, Table
---	--

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.