


ATDEC
AW-FB Ora Bolt
Through Fixing

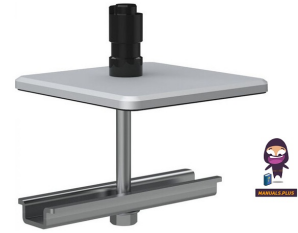

ATDEC AW-FB Ora Bolt Through Fixing Installation Guide

[Home](#) » [ATDEC](#) » ATDEC AW-FB Ora Bolt Through Fixing Installation Guide 

Contents

- [1 ATDEC AW-FB Ora Bolt Through Fixing](#)
- [2 COMPONENT CHECKLIST](#)
- [3 CAPACITY](#)
- [4 IMPORTANT INFORMATION](#)
- [5 For bolt through installations, drill hole in the work surface](#)
- [6 Attach Arm Spigot to Clamp Plate](#)
- [7 Attach plate assembly to desk](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

ATDEC


ATDEC AW-FB Ora Bolt Through Fixing



COMPONENT CHECKLIST




Arm Spigot (x1)

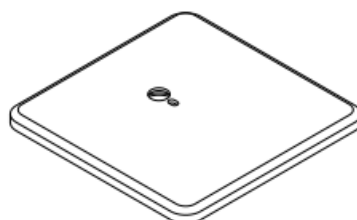

Clamp Plate (x1)



M8 Stud Bolt (x1)

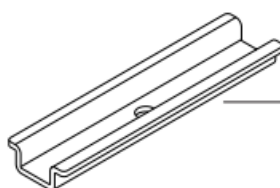

Clamp Bar (x1)



M8 Flange Nut (x1)

CAPACITY

- **Weight:** 2 – 8kg (4.4 – 17.6lb)
- **Display Size:** Up to 35" (curved or flat) (Larger monitors within the weight capacity may be compatible, please contact Atdec for advice).

WARRANTY

10 Years Limited

TOOLS REQUIRED


- 4mm Hex Key (supplied with Ora arm)
- 8.5mm (or 11/32") drill bit
- Power Drill
- 13mm Spanner
- Phillips head screwdriver

IMPORTANT INFORMATION

- Install Ora Accessories as per these installation instructions.
- comet installati accepts no responsibility for
- The product is compatible with grommet hole sizes up to 80mm (3.15")
- The product is compatible with desk thicknesses
- This product is not suitable for outdoor use.
- Do not use this product for mobile applications.
- Please ensure desk structure and mounting surface are of sufficient strength to support this product and mounted equipment.


For bolt through installations, drill hole in the work surface

1. Mark out hole position on the work surface. Use Clamp Plate as a template.

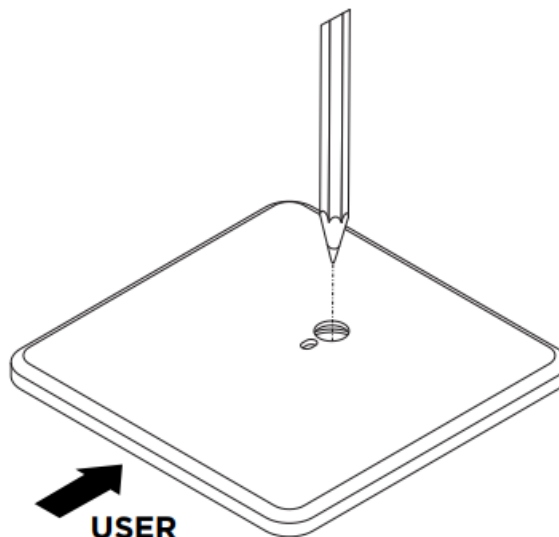


2. Drill the hole using a suitable drill bit. Ensure the hole is drilled perpendicular to the work surface and the edges

of the clamp are positioned fully on the desk.

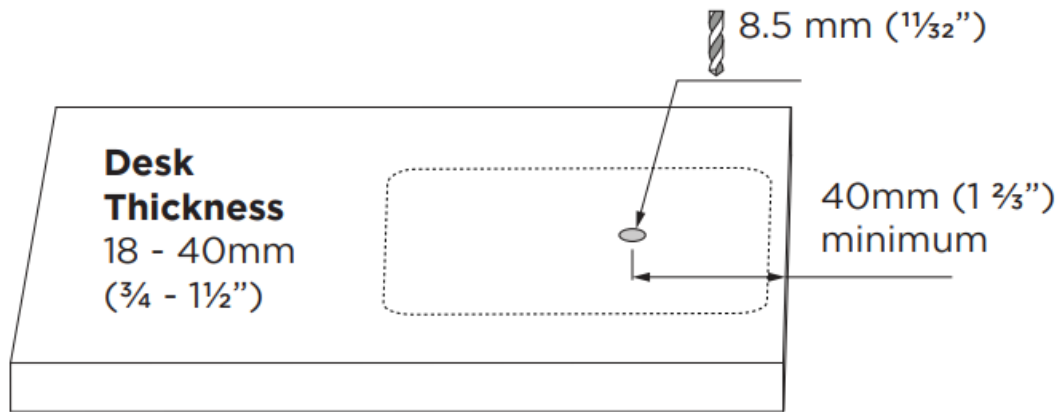

TIP


When positioning the desk clamp, offset the clamp to the left or right of the seating position. The monitor will then be centred for the user.

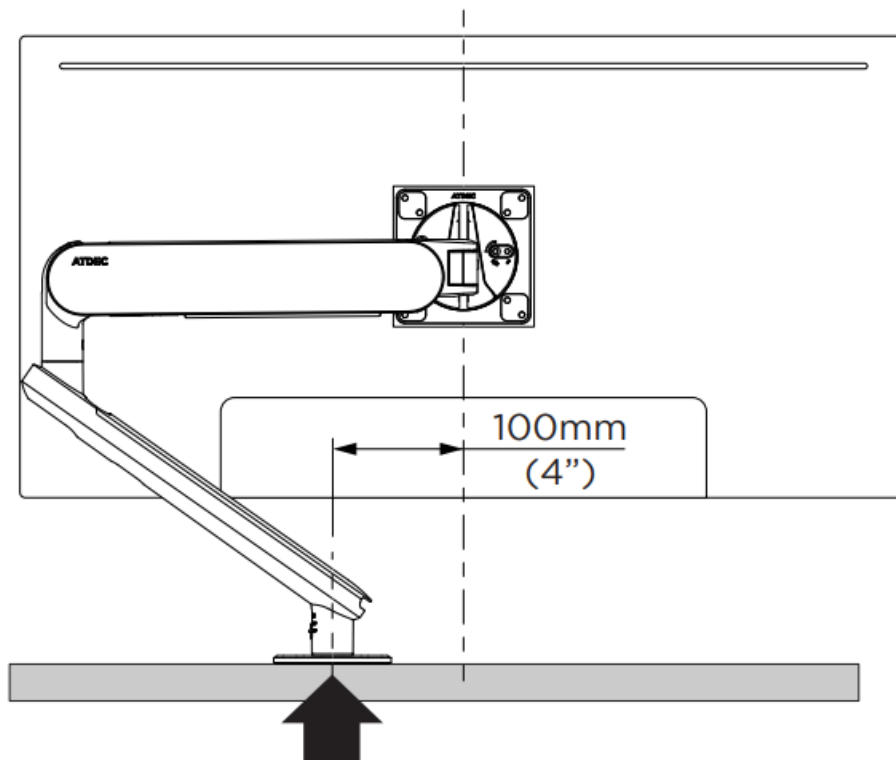


Attach Arm Spigot to Clamp Plate

HINT!


Hold Arm Spigot and Clamp Plate together, locating the dimple in the slot, before hand tightening the screw into the spigot.

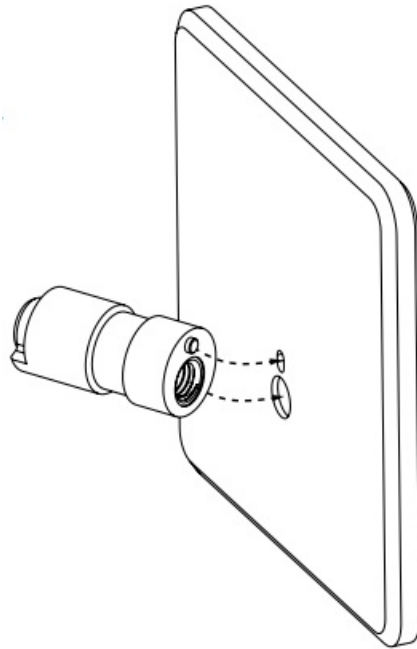

1. Screw M8 Stud Bolt through Clamp Plate into Arm Spigot.

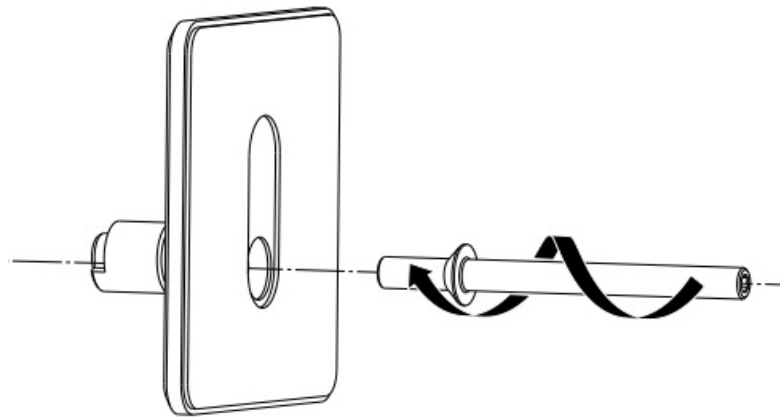


2. Tighten firmly with 4mm Hex Key supplied with Arm.

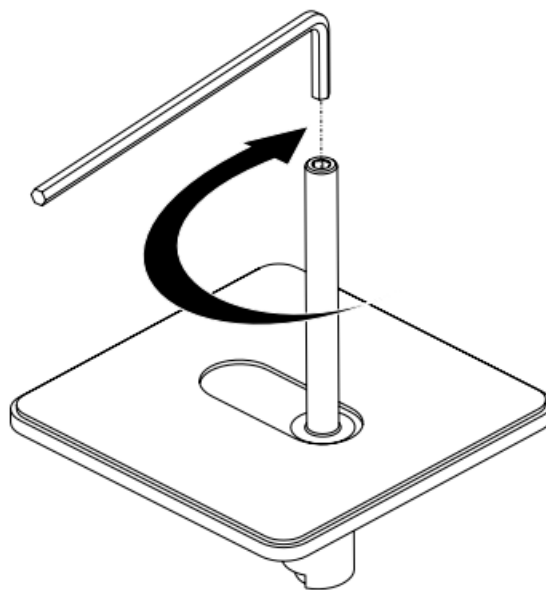

Attach plate assembly to desk



Place Clamp Bar over M8 Stud Bolt under the desk as illustrated and secure Flange Nut with spanner.

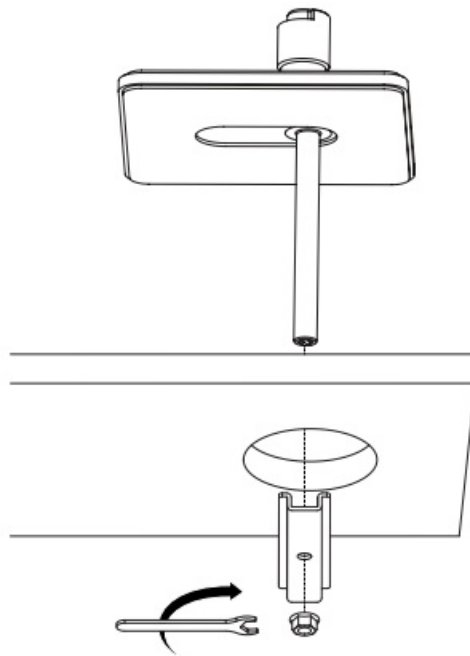

TIP

Support plate while tightening to maintain the correct orientation on the work surface. Place Clamp Bar over the M8 Stud Bolt under the desk as illustrated and secure the Flange Nut with a spanner.

➔
USER

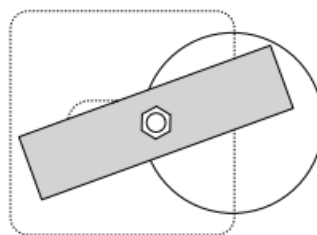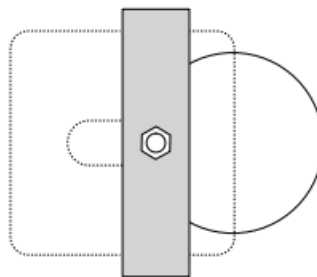

Documents / Resources

	<p>ATDEC AW-FB Ora Bolt Through Fixing [pdf] Installation Guide AW-FB Ora Bolt Through Fixing, AW-FB, Ora Bolt Through Fixing, Bolt Through Fixing, Through Fixing, Fixing</p>
--	---

References

- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.