AUTOWIKI WJ20-0719 LED Tail Lights

AUTOWIKI WJ20-0719 LED Tail Lights User Manual

AUTOWIKI

AUTOWIKI WJ20-0719 LED Tail Lights

Product Information

Specifications

- **Model:** WJ20-0719
- **Compatibility:** Chevy Silverado 1500/2500 1999-2002, Chevy Silverado 1500/2500 2003-2006, Chevy Silverado 3500 2001-2006, Chevy Silverado Classic Body Style 2007
- (Not compatible with other models), GMC Sierra 1500/2500 1999-2002, GMC Sierra 3500 2001-2002

Product Usage Instructions

Installation Instructions

1. Open the tailgate and locate the two screws and remove them.
2. Remove the taillight by pulling it straight out.
3. Remove all sockets from the taillight housing.
4. Remove the bulbs from the black sockets except the reverse bulb and side marker bulb.
   - Reverse bulb
   - Side marker bulb
5. Place the resistor in a safe location in the housing.
6. Connect the pigtails to the stock sockets. Make sure the wires match: Black to Black.
7. Connect the resistor to the taillight housing.
8. Place the taillight into the truck housing and secure it with screws.
9. Repeat steps 2-9 for the other side.

Required Tools

- Ratchet
- Flathead Screwdriver
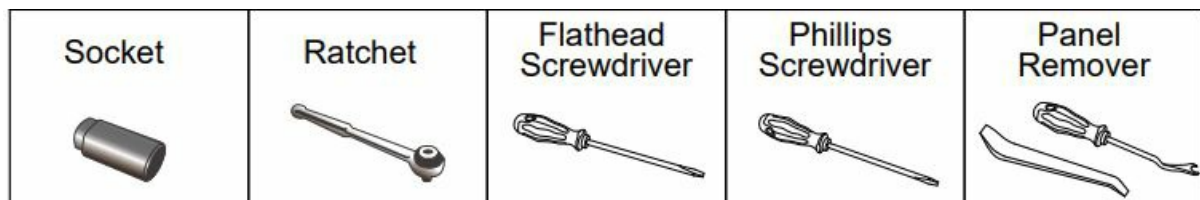- Phillips Screwdriver
- Panel Remover

FAQ

Q: Are these tail lights compatible with other vehicle models?

A: No, these tail lights are specifically designed for Chevy Silverado and GMC Sierra models as mentioned in the specifications section.
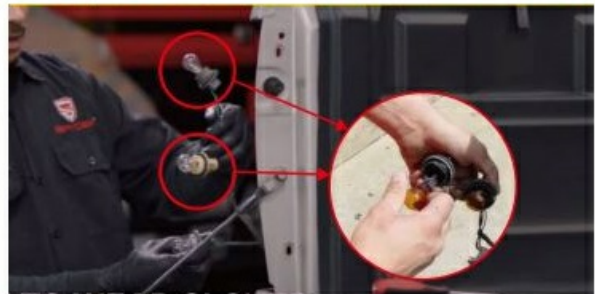
Model.: WJ20-0719

- **Chevy** Silverado 1500/2500 1999-2002
- **Chevy** Silverado 1500/2500 2003-2006
- **Chevy** Silverado 3500 2001-2006
- **Chevy** Silverado Classic Body Style 2007 NOT FIT other models
- **GMC** Sierra 1500/2500 1999-2002
- **GMC** Sierra 3500 2001-2002

REQUIRED TOOLS

Socket	Ratchet	Flathead Screwdriver	Phillips Screwdriver	Panel Remover

Installation Instructions

- Open the tailgate and locate the two screws and remove them.
- Remove the taillight by pulling it straight out
- Remove all sockets from the taillight housing
- Remove the bulbs from the black sockets except the reverse bulb and side marker bulb

- Place the resistor in a safe location in the housing.
- Connect the pigtails to the stock sockets. Make sure the wires match: Black to Black.
- Connect the resistor to the taillight housing.
- Place the taillight into the truck housing, secure with screws.
- Repeat the steps 2~11 for the other side.

Documents / Resources

AUTOWIKI WJ20-0719 LED Tail Lights [pdf] User Manual
WJ20-0719 LED Tail Lights, WJ20-0719, LED Tail Lights, Tail Lights, Lights

References

- **User Manual**