

AVTEQ®
Neat Frame Floor Stand



AVTEQ Neat Frame Floor Stand Installation Guide


[Home](#) » [AVTEQ](#) » AVTEQ Neat Frame Floor Stand Installation Guide 

Contents

- [1 AVTEQ Neat Frame Floor Stand](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 PACKAGE CONTENTS](#)
- [5 INSTALLATION INSTRUCTION](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



AVTEQ Neat Frame Floor Stand

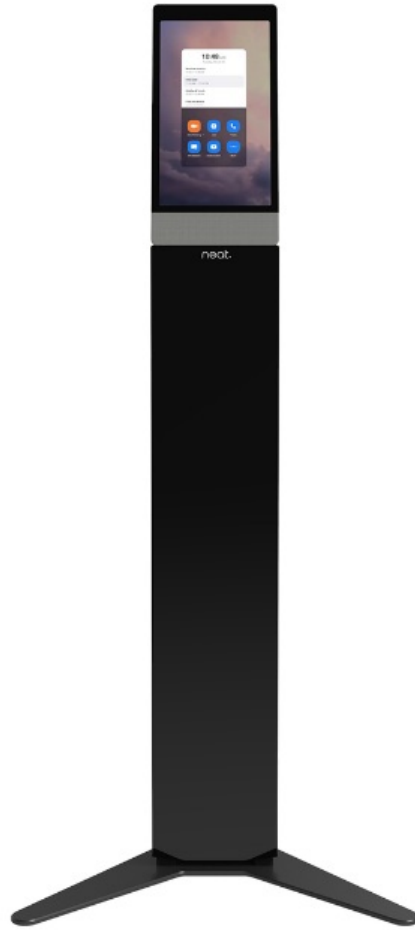

Product Information

Specifications

- Product Name: Neat Frame Floor Stand
- Model: NEATFRAME-STAND

Package Contents

- A. Base plate [x1]
- B. Body column [x1]
- C. Rear cover [x1]
- D. Flat 1/4-20 1/2 screw [x1]
- E. Socket M6x1.0 10mm long screw [x2]
- F. Flat 3/8-16 1.25 screw [x3]

Product Usage Instructions

Step 1: Secure Base to Body Column

Place the base plate at the bottom of the body column and secure them together.

Step 2: Secure the Neat Frame

Attach the Neat Frame to the inner hole of the body column by screwing from the bottom into the top inner hole.

Step 3: Secure Rear Cover to the Body Column


Secure the rear cover to the body column using screws through the two top holes of the rear cover.

FAQ

- **Q: How do I contact support for this product?**

A: You can contact us at support@avteqinc.com for any questions or assistance.

PACKAGE CONTENTS

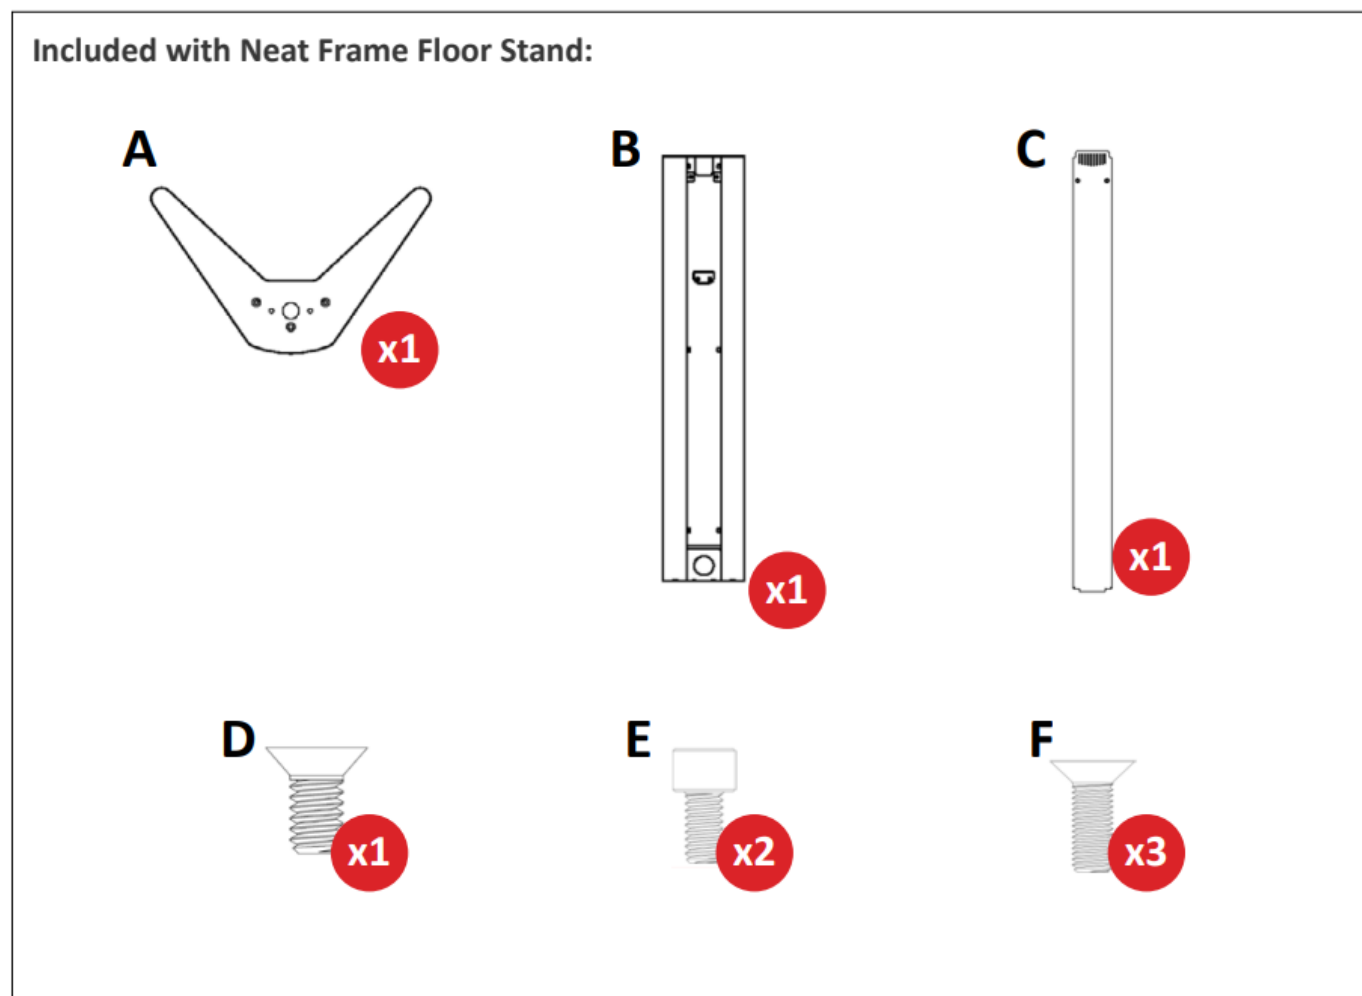


- **A.** Base plate [x1]
- **B.** Body column [x1]
- **C.** Rear cover [x1]
- **D.** Flat 1/4-20 1/2" screw [x1]
- **E.** Socket M6x1.0 10mm long screw [x2]
- **F.** Flat 3/8-16 1.25" screw [x3]


INSTALLATION INSTRUCTION

Secure base to body column

- Place body column (B) on top of the base plate (A) and screw it on from the bottom of the base plate with [x3] flat-headed 3/8-16 1.25" screws (F).

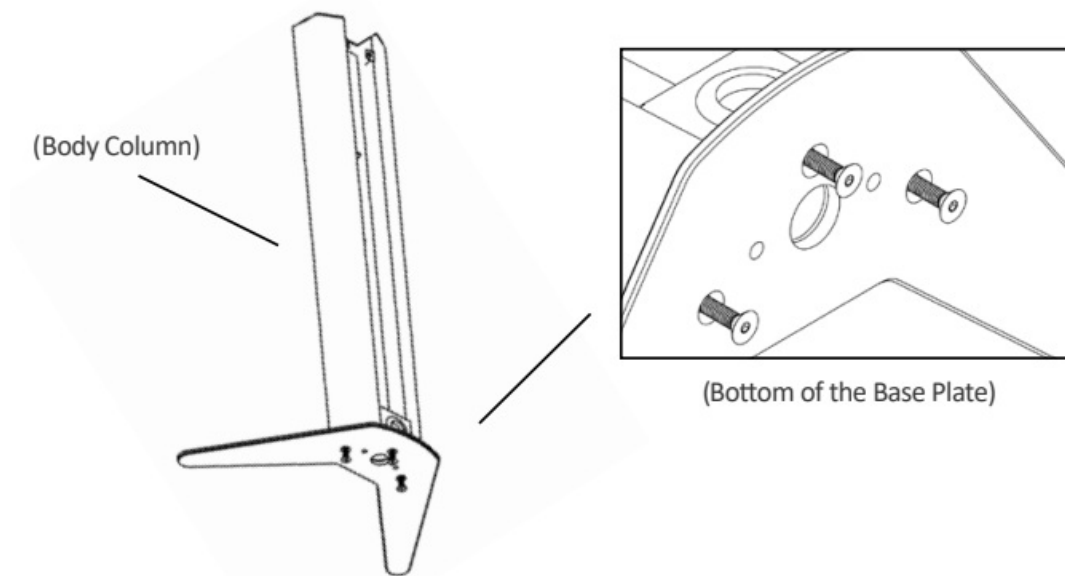


Secure the Neat Frame

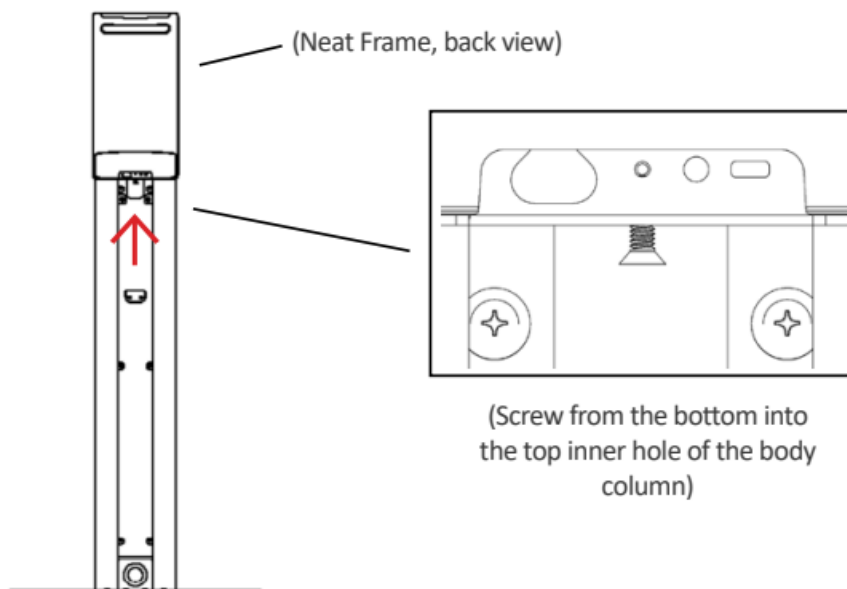

- Place the Neat Frame on top of the body column (B).
- Secure the Neat Frame with a [x1] flat 1/4-20 1/2" screw (D). Screw from the bottom into the top inner hole of the body column.

Secure rear cover to the body column

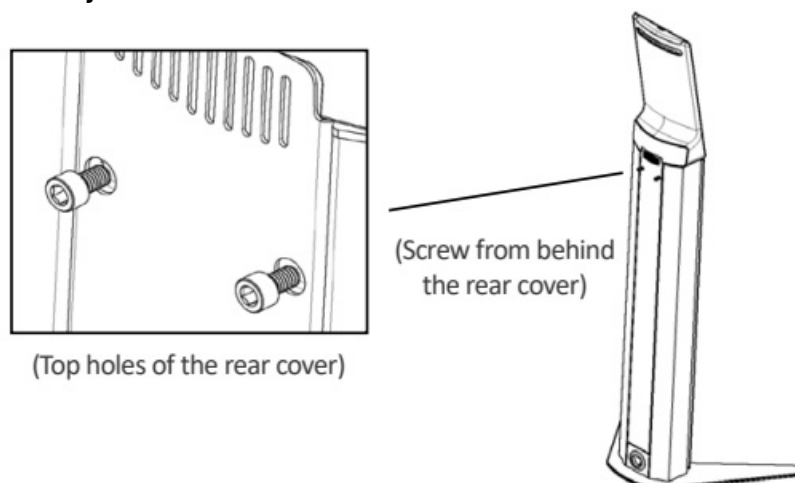

- Place the rear cover (C) behind the body column (B).
- Secure the rear cover using a wrench and [x2] socket M6x1.0 10mm screws (E) and screw into the two top holes of the rear cover.

avteqinc.com

Have a question?

Contact us at support@avteqinc.com

Documents / Resources

 The image shows the cover of an installation guide for the AVTEQ Neat Frame Floor Stand. It features the AVTEQ logo at the top, followed by the text 'Install Guide' and 'Neat Frame Floor Stand'. Below the text is a line drawing of the floor stand, which is a tall, thin, rectangular frame with a base and a top section.	<p>AVTEQ Neat Frame Floor Stand [pdf] Installation Guide Neat Frame Floor Stand, Frame Floor Stand, Floor Stand, Stand</p>
---	--

References

- [AVTEQ | Collaborative AV Furniture Designed for Today's Technology](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.