

AVTEQ®

**NEATFRAME-
WM Neat Frame
Wall Mount**



AVTEQ NEATFRAME-WM Neat Frame Wall Mount Installation Guide

[Home](#) » [AVTEQ](#) » AVTEQ NEATFRAME-WM Neat Frame Wall Mount Installation Guide 

Contents

- [1 AVTEQ NEATFRAME-WM Neat Frame Wall Mount](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 PACKAGE CONTENTS](#)
- [6 Installation Instruction](#)
- [7 Contact](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

AVTEQ®

AVTEQ NEATFRAME-WM Neat Frame Wall Mount



Product Information

Product Name: Neat Frame Wall Mount (NEATFRAME-WM)

- Package Contents:
 - A. Wall mount [x1]
 - B. Anchor screw [x3] (Only for drywall)
 - C. #8 1 1/2 wood screw [x3] (For wood or metal studs)
 - D. 1/4-20 3/4 screw [x1]

Product Usage Instructions

Step 1: Secure wall mount to the wall

NOTE: The cutout for the wall needs to be 8.5 wide and 3.8 tall.

NOTE: To secure on drywall, use the anchor screws (B). To secure on wood or metal studs, use the wood screws (C).

1. Insert screws inside the mount.
2. For flat installation: place screws at the bottom.
3. For tilt installation: place screws at the top.


FAQ

- **Q: How do I contact support for Neat Frame Wall Mount?**

- A: You can contact us at support@avteqinc.com for any questions or assistance regarding the product.

PACKAGE CONTENTS

Included with Neat Frame Wall Mount (NEATFRAME-WM):

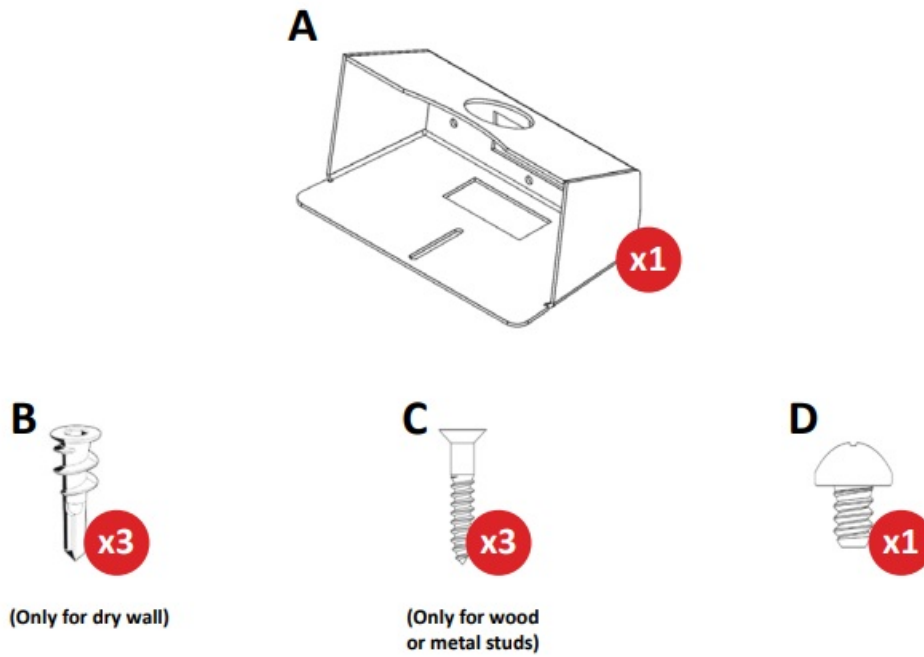

- A. Wall mount [x1]
- B. Anchor screw [x3] *For drywall
- C. #8 1 1/2" wood screw [x3] *For wood or metal studs
- D. 1/4-20 3/4" screw [x1]

Installation Instruction




STEP 1

Secure wall mount to wall

NOTE: The cutout for the wall needs to be 8.5" wide and 3.8" tall.

NOTE: To secure on dry wall, use the anchor screws (B). To secure on wood or metal studs, use the wood screws (C).


- Place the wall mount (A) in the wall. Secure the wall mount using [x3] anchor screws (B) or wood screws (C), depending on the wall material. For a flat installation of the Neat Frame device, insert screws into the bottom three inner holes of the wall mount. For a slight tilt, insert screws into the top three inner holes of the wall mount.

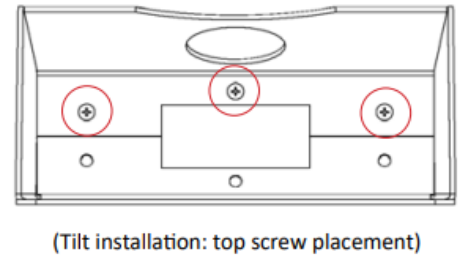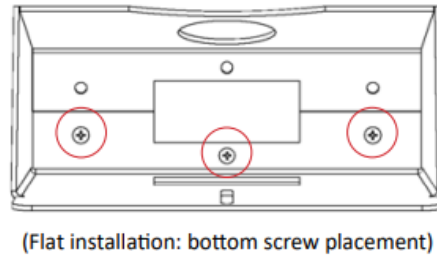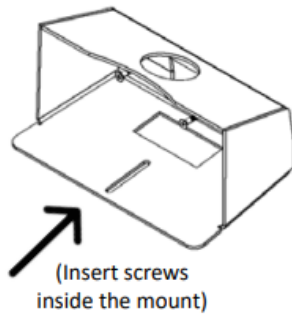

STEP 2

Secure Neat Frame device to wall mount


- Secure the Neat Frame device to the base of the wall mount (A) using a [x1] 1/4-20 3/4" screw (D). Screw through the bottom of the wall mount (A).

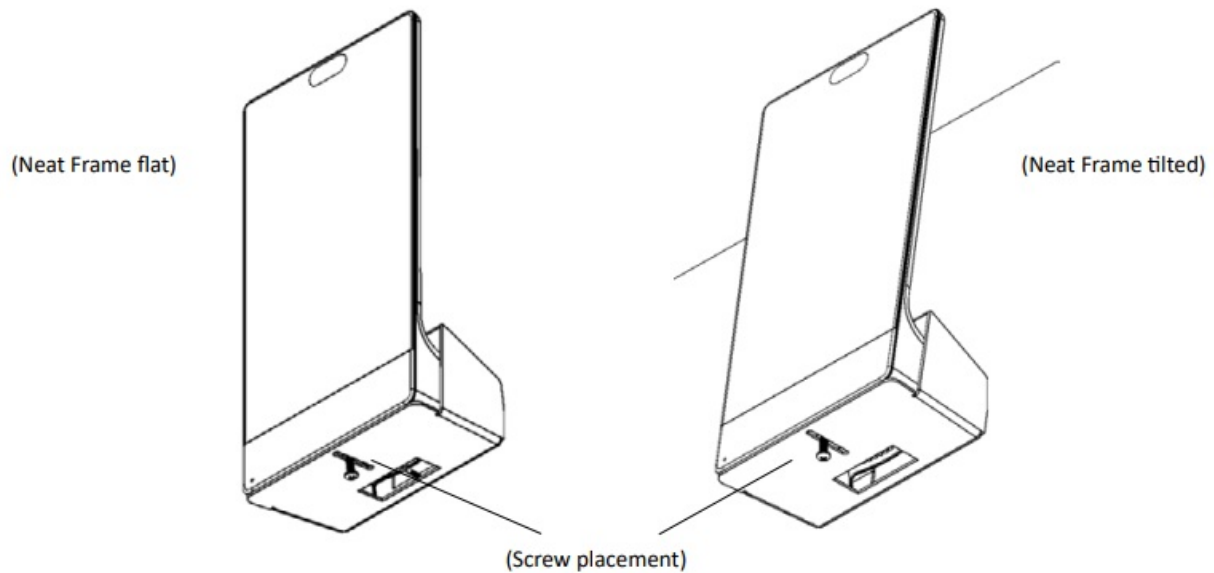

Contact

- Have a question?
Contact us at support@avteqinc.com
- avteqinc.com

Documents / Resources

 <p>AVTEQ Install Guide Neat Frame Wall Mount (NEATFRAME-WM)</p>	<p>AVTEQ NEATFRAME-WM Neat Frame Wall Mount [pdf] Installation Guide NEATFRAME-WM, NEATFRAME-WM Neat Frame Wall Mount, Neat Frame Wall Mount, Frame Wall Mount, Wall Mount, Mount</p>
---	---

References

- [!\[\]\(83eb2aa26b610eb6a9dca7cf4702d681_img.jpg\) **AVTEQ | Collaborative AV Furniture Designed for Today's Technology**](#)
- [**User Manual**](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.