


BBK 1509 Performance Full Length Headers

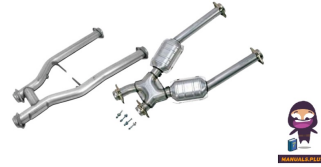

BBK 1509 Performance Full Length Headers Installation Guide


[Home](#) » [BBK](#) » BBK 1509 Performance Full Length Headers Installation Guide 

Contents

- [1 BBK 1509 Performance Full Length Headers](#)
- [2 Product Information](#)
- [3 More Information](#)
- [4 Using Instructions](#)
- [5 Contact](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)



BBK 1509 Performance Full Length Headers

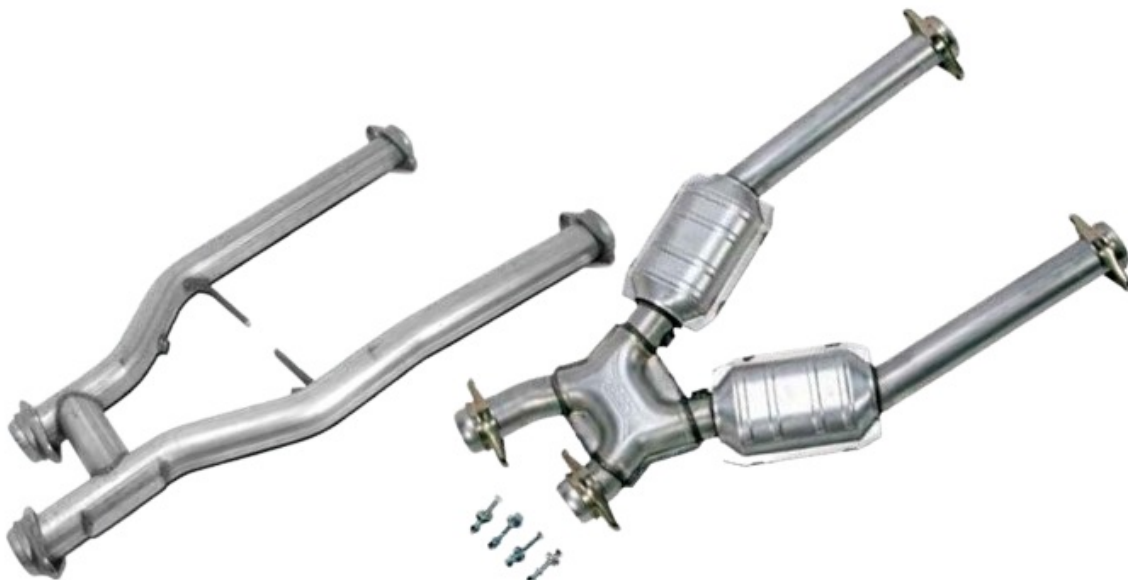

Product Information

Specifications

- **Manufacturer:** BBK PERFORMANCE LLC
- **Part Numbers:** 1509, 1510, 1535, 1538, 1635, 1638, 1659, 1660, 1671, 1672, 1810, 1811 + more
- **Installation Time:** Approximately 30 Minutes
- **Difficulty Level:** Very Easy
- **Made in:** U.S.A.

Frequently Asked Questions

- **Q:** Do I need any special tools for installing the Short H-Pipe/X-Pipe?
 - **A:** No special tools are required for installation.
- **Q:** How long does it take to install the Short H-Pipe/X-Pipe?
 - **A:** The installation process typically takes about 30 minutes.
- **Q:** Is it necessary to use safety equipment during installation?
 - **A:** Yes, it is important to use all appropriate safety equipment and gear while working on the vehicle or installing any BBK Performance products.

FOR USE WITH BBK PERFORMANCE FULL-LENGTH HEADERS

More Information

- **SPECIAL TOOLS REQUIRED:** No special tools required
- **INSTALL TIME:** Approximately 30 Minutes
- **DIFFICULTY:** Very Easy

Note

- It may be necessary to use some WD-40 to aid in removal of the stock midpipe.
- Due to the metal to rubber slide mount these units can be sticky.

IMPORTANT

- All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle.
- BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

Using Instructions

FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

STEP 1

- After installing your new BBK full-length headers, you can now install the matching short H-Pipe/X-Pipe by simply bolting it in place of the old H-Pipe Assembly.
- It may be necessary to use some WD-40 to aid in removal of the stock midpipe.
- Due to the metal to rubber slide mount these units can be sticky.

STEP 2

- Using the washers and nuts supplied with your full lengths stud kit, mount the front H-Pipe/X- Pipe flanges to the header collectors

STEP 3

- Using the supplied hardware, bolt up the BBK H-Pipe/X-Pipe.

NOTE

- Be sure to add a small amount of anti-seize to the top thread of each oxygen sensor using the supplied anti-seize packet.
- As you thread the oxygen sensor back into the part the anti-seize will spread evenly throughout the threads.

STEP 4

- Reconnect the factory air tube if installing catalyst equipped pipes.

Contact

BBK PERFORMANCE LLC

- 3060 Performance Circle Deland, FL 32724
- MADE IN U.S.A.
- WWW.BBKPERFORMANCE.COM
- For any questions, email us: TECH@BBKPERFORMANCE.COM



Documents / Resources



[BBK 1509 Performance Full Length Headers](#) [pdf] Installation Guide
1672, 1509 Performance Full Length Headers, 1509, Performance Full Length Headers, Full Length Headers, Length Headers, Headers

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.