

Contents [[hide](#)]

- [1 BedTech T-ZJ01LP Headboard Bracket](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 BEFORE BEGINNING](#)
- [5 INSTALLATION](#)
- [6 FAQ](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

BedTech

BedTech T-ZJ01LP Headboard Bracket



Product Information

Specifications:

- **Model:** Headboard Bracket Assembly
- **Compatible with:** Adjustable bases T-ZJ01LP, T-ZJ02LP, T-ZJ03LP
- **Materials:** Metal
- **Hardware:** 5/16*45 bolts, 5/16*20 bolts, nuts

Product Usage Instructions

Before Beginning:

Adjust the head of the adjustable base all the way up to allow for more room to work.

Assembly Steps:


1. Install T-bracket (L/R) / T-bracket Plate (Straight):
 - Use four 5/16*45 bolts (B) and four nuts (C)
 - Secure the T-Bracket Plate (A) to the head end of the bed base frame.
2. Attach the T bracket-Big (E) to the T BRACKETE PLATE(A):
 - Use two 5/16*20 bolts(D) and two nuts(B)
3. Attach the T bracket – PLATE(A) to the headboard:
 - Use hardware provided with headboard (NOT INCLUDED)
4. Repeat steps 1-3 to the opposite side of the base.

NOTE: More configurations are possible than shown in the manual.

T-ZJ01LP T-ZJ02LP

BEFORE BEGINNING


Adjust head of the adjustable base all the way up to allow for more room to work.

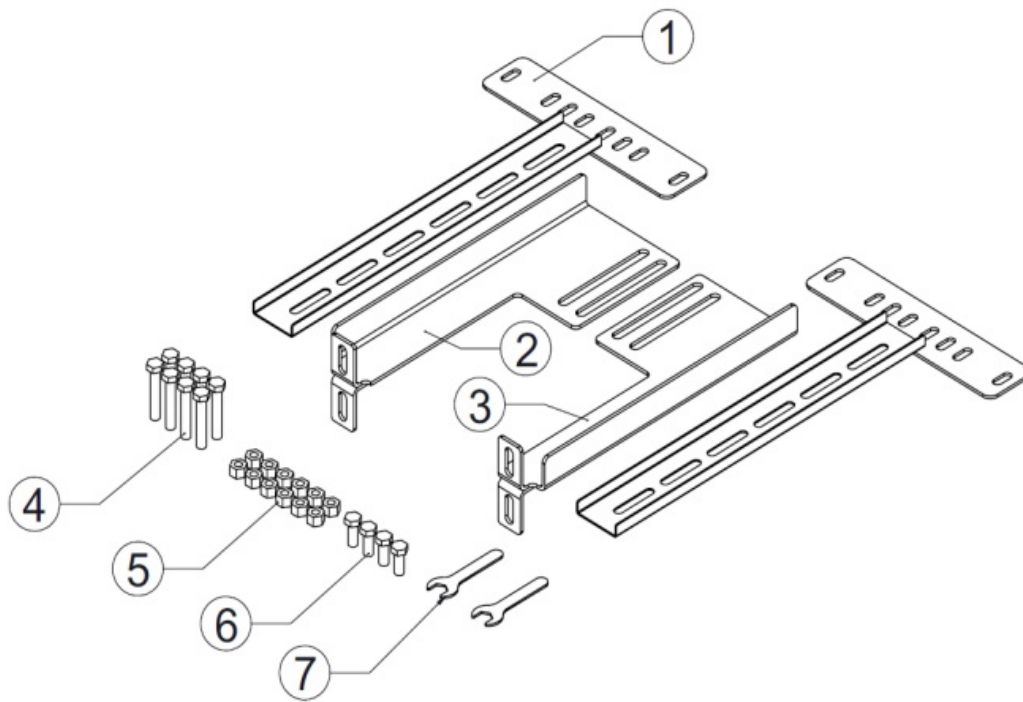

- x2 T BRACKTE PLATE – Big
- x1 T BRACKTE PLATE Left side
- X1 T BRACKTE PLATE Right side
- x8 5/16 – 45L Bolts
- x12 5/16 Nuts
- x4 5/16 – 18L Bolts
- x1 Open-end Wrench

T-ZJ03LP

Adjust head of the adjustable base all the way up to allow for more room to work.

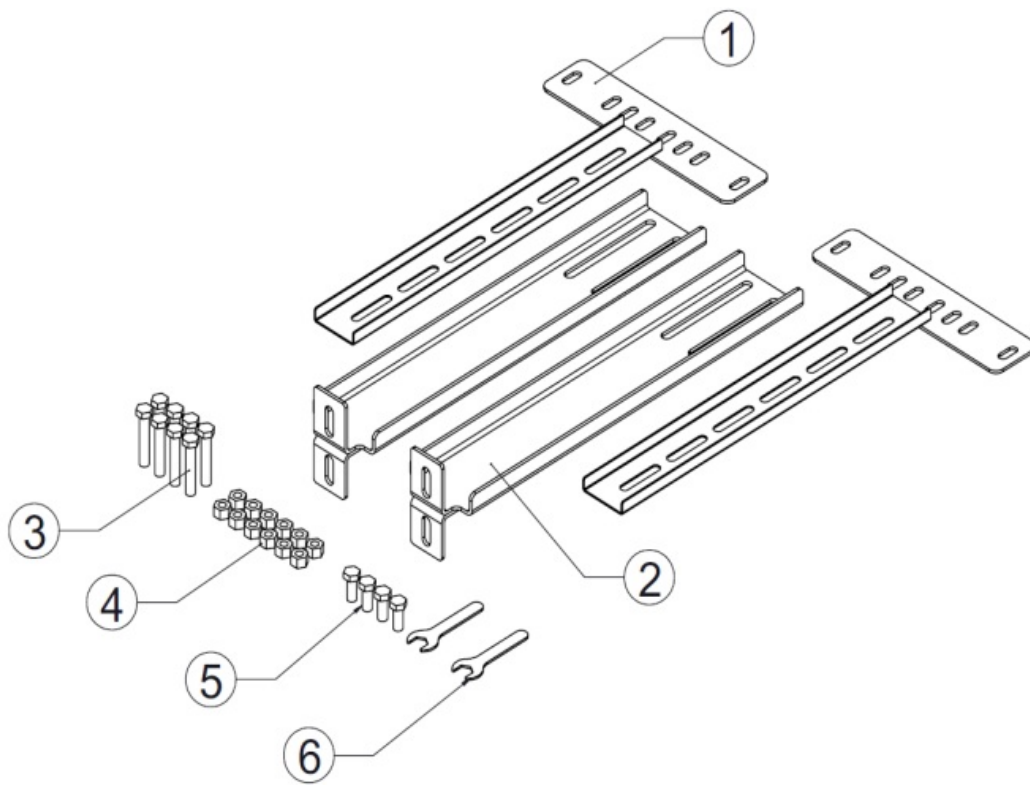


1. x2 T BRACKTE PLATE – Big
2. x1 T BRACKTE PLATE (straight)
3. x8 5/16 -45L Bolts
4. x12 5/16 Nuts
5. x4 5/16 – 18L Bolts
6. x2 Open-end Wrench

INSTALLATION


1. Install T-bracket (L/R) / T-bracket Plate (Straight)

Use four 5/16*45 bolts (B) and four nuts (C)

Secure the T-Bracket Plate (A) to the head end of the bed base frame.

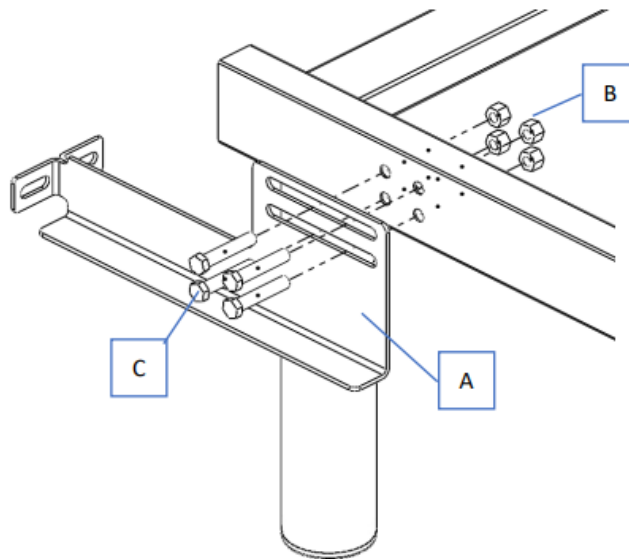


2. Attach the T bracket-Big (E) to the T BRACKTE PLATE(A) using two 5/16*20 bolts(D), with two Nuts(B)

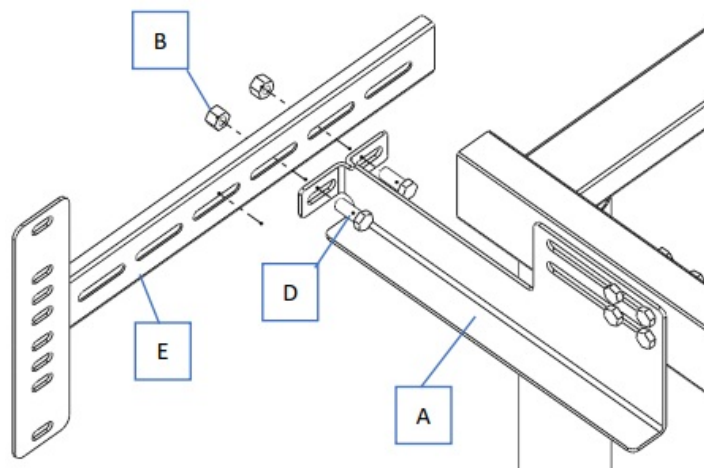

3. Attach the T bracket – PLATE(A) to the headboard using hardware provided with headboard (NOT INCLUDED).

Repeat steps 1-3 to the opposite side of the base.

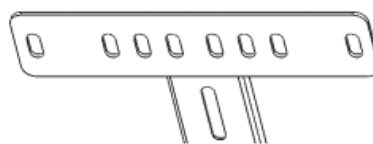

NOTE: * MORE CONFIGURATIONS POSSIBLE THAN SHOWN

Customer Service: 1-[888-236-3044](tel:888-236-3044)

FAQ

Q: Can these brackets be used with any type of headboard?


A: The brackets can be used with most headboards, but it's important to ensure

compatibility with the specific headboard design.

Q: Are additional bolts and nuts included in case of loss or damage?

A: It is recommended to have spare bolts and nuts on hand in case of loss or damage during assembly.

Documents / Resources

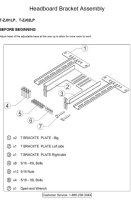	BedTech T-ZJ01LP Headboard Bracket [pdf] Instruction Manual T-ZJ01LP, T-ZJ02LP, T-ZJ03LP, T-ZJ01LP Headboard Bracket, Headboard Bracket, Bracket
---	---

References

- [User Manual](#)

BedTech, Bracket, Headboard Bracket, T-ZJ01LP, T-ZJ01LP Headboard Bracket, T-ZJ02LP, T-ZJ03LP

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.