




better bathrooms ARIMB021 Matt Black Bath Waste and Overflow User Manual

[Home](#) » [Better Bathrooms](#) » better bathrooms ARIMB021 Matt Black Bath Waste and Overflow User Manual 

Contents

- [1 better bathrooms ARIMB021 Matt Black Bath Waste and Overflow](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Important information](#)
- [5 Installation](#)
- [6 Troubleshooting](#)
- [7 Maintenance and Cleaning](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)



better bathrooms ARIMB021 Matt Black Bath Waste and Overflow



Product Information

Specifications

- Product: ARIMB021 – Matt Black Bath Waste and Overflow
- Product: ARIBB022 – Brushed Brass Bath Waste and Overflow
- Product: CHBAW001 – Chrome Bath Waste and Overflow
- Product: ARIMW007 – Matt White Bath Waste and Overflow
- Product: ARIVRG007 – Vapour Rose Gold Bath Waste and Overflow

Product Usage Instructions

Single-person assembly. We always recommend using professional tradespeople to install your product.

Congratulations on your purchase!

- Welcome to our growing gang of savvy shoppers. We're on a mission to bring you extraordinary bathroom products, for less. From modern to traditional style ceramics, plus the gorgeous fixtures, fittings, and furniture to match. So, you can fall in love with your space every single day.
- As one of the UK's largest independent bathroom stores, we've received countless awards; including the National Business Awards UK, the Digital Entrepreneur Awards, and being placed on The Sunday Times Fast Track 100.

- We hope your new product goes above and beyond your expectations. However, should any problems occur, please contact us via betterbathrooms.com/content/contact-us.

Important Information

Please read these instructions thoroughly and retain for future reference.

Parts / Diagrams Dimensions

No	Part Description
1	Waste housing
2	Rubber washer
3	Flat rubber washer
4	Waste base
5	Spring core
6	Sealing ring
7	Drain cover
8	Decorative cover
9	Thread bolt
10	Fixing seat
11	Rubber seal
12	Overflow housing
13	Retaining nut
14	Hose
15	Rubber washer
16	Retaining nut

Tools Required

- Screwdriver

Installation

1. Fit the rubber seal (11) on the overflow housing (12), hold the unit in position from the backside of the bath.
2. Screw in the thread bolt (9) through the fixing seat (10) and fasten with the overflow housing (12). Please ensure it is fully screwed at the body.
3. Install the decorative cover (8) by inserting the plastic cores into the 2 holes on the fixing seat (10).
4. Put the waste base assembled (4&5&7) and flat rubber washer (3) into the bottom waste hole of the bath. Place the rubber washer (2) and waste housing (1) onto the waste from the backside of the bath in sequence. Tighten all the above parts together.

5. Check all the joints for leaks.
6. To fill the bath, press down on the drain cover, press the cover again to empty the bath water.

Troubleshooting

Issues

Water leak

Check

- Is there damage to the rubber washer (2, 3, 15)?
- Is there damage to the sealing ring (6)?
- Is there damage to the rubber seal (11)?
- Is the retaining nut (13, 16) fully tightened?
- Has the drain cover (7) been screwed fully onto the spring core (5)?

Maintenance and Cleaning

To maintain the surface of your product, wipe with a clean damp cloth and wipe dry. Do not use any abrasive cleaning agents or materials. If any harsh chemicals come into contact with the surface of the product, rinse and wipe clean immediately.

FAQ

- **Q: Can I install the product by myself?**

A: We recommend using professional tradespeople to install the product for optimal results.

- **Q: What should I do if there is a water leak?**

A: Please check for damage to the rubber washer, sealing ring, rubber seal, and ensure that the retaining nut is fully tightened. Also, make sure the drain cover is screwed fully onto the spring core.

- **Q: How should I clean and maintain the product?**

A: Wipe the surface of the product with a clean damp cloth and wipe dry. Do not use any abrasive cleaning agents or materials. If any harsh chemicals come into contact with the surface, rinse and wipe clean immediately.

Thank you for choosing Better Bathrooms. Please read this manual before installing your product and keep for future reference.

Product

ARIMB021 – Matt Black Bath Waste and Overflow
ARIBB022 – Brushed Brass Bath Waste and Overflow
CHBAW001 – Chrome Bath Waste and Overflow
ARIMW007 – Matt White Bath Waste and Overflow
ARIVRG007 – Vapour Rose Gold Bath Waste and Overflow

- Single-person assembly
- We always recommend using professional tradespeople to install your product

Congratulations on your purchase

And welcome to our growing gang of savvy shoppers

We're on a mission to bring you extraordinary bathroom products, for less. From modern to traditional style ceramics, plus the gorgeous fixtures, fittings and furniture to match. So, you can fall in love with your space every single day.

As one of the UK's largest independent bathroom stores, we've received countless awards; including the National Business Awards UK, the Digital Entrepreneur Awards and being placed on The Sunday Times Fast Track 100.

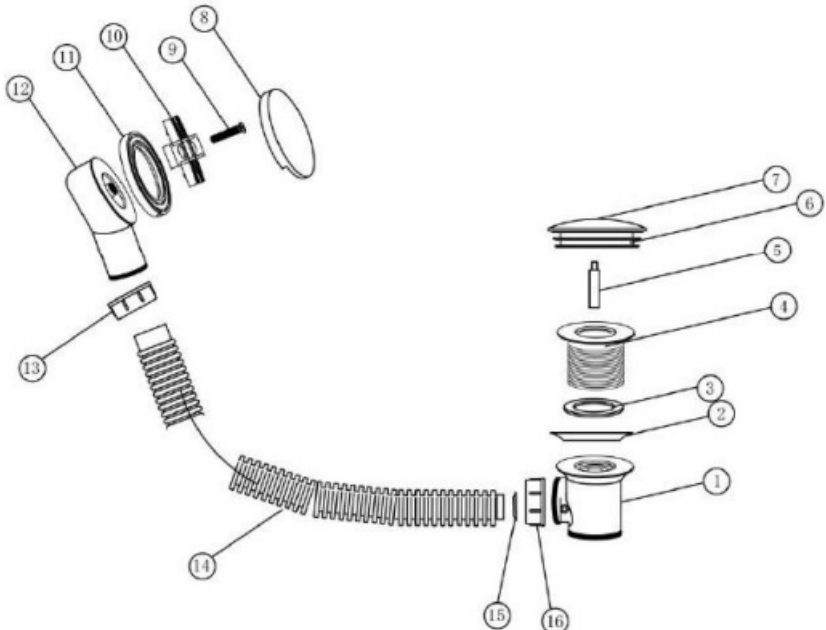
We hope your new product goes above and beyond your expectations. However, should any problems occur, please:

- log in to your account and contact our customer services team via your self-serve portal – betterbathrooms.com/CustomerAccount/Login
- contact us via betterbathrooms.com/content/contact-us

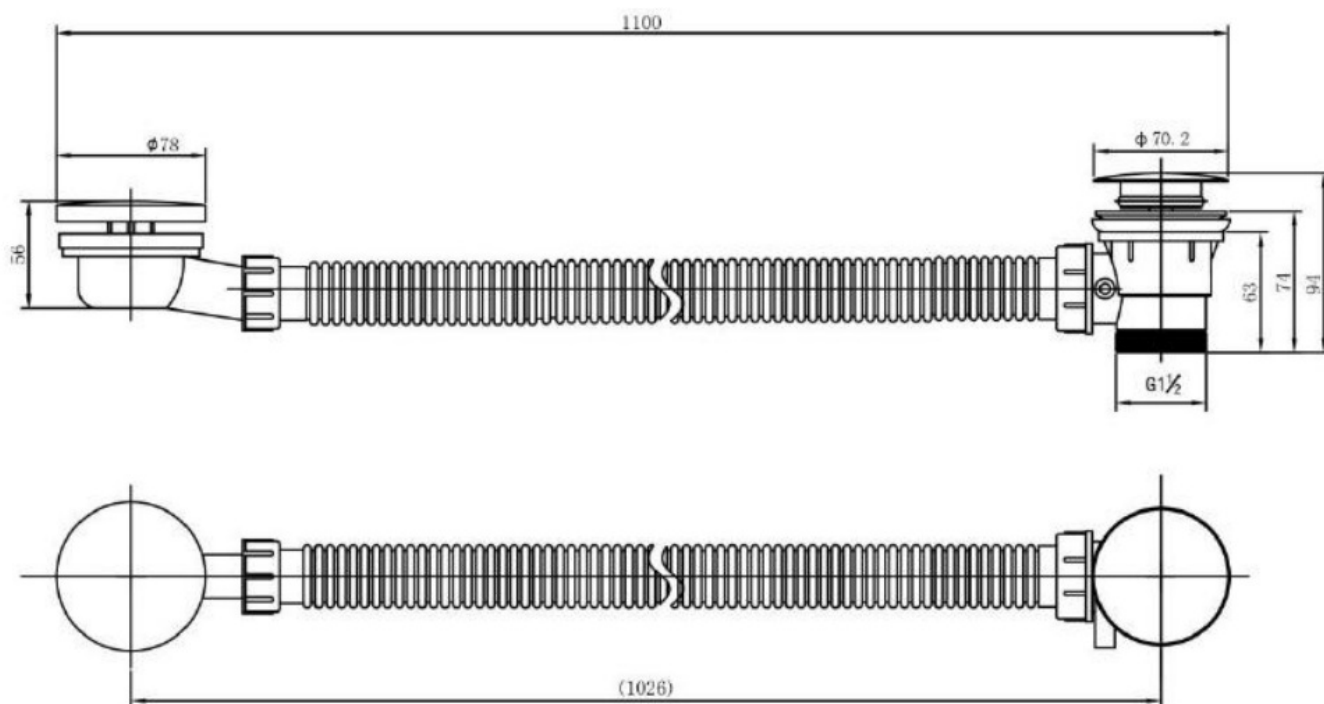
Important information

Please read these instructions thoroughly and retain for future reference

Parts / Diagrams

	No	Part Description
	1	Waste housing
	2	Rubber washer
	3	Flat rubber washer
	4	Waste base
	5	Spring core
	6	Sealing ring
	7	Drain cover
	8	Decorative cover
	9	Thread bolt
	10	Fixing seat
	11	Rubber seal
	12	Overflow housing
	13	Retaining nut
	14	Hose
	15	Rubber washer
	16	Retaining nut

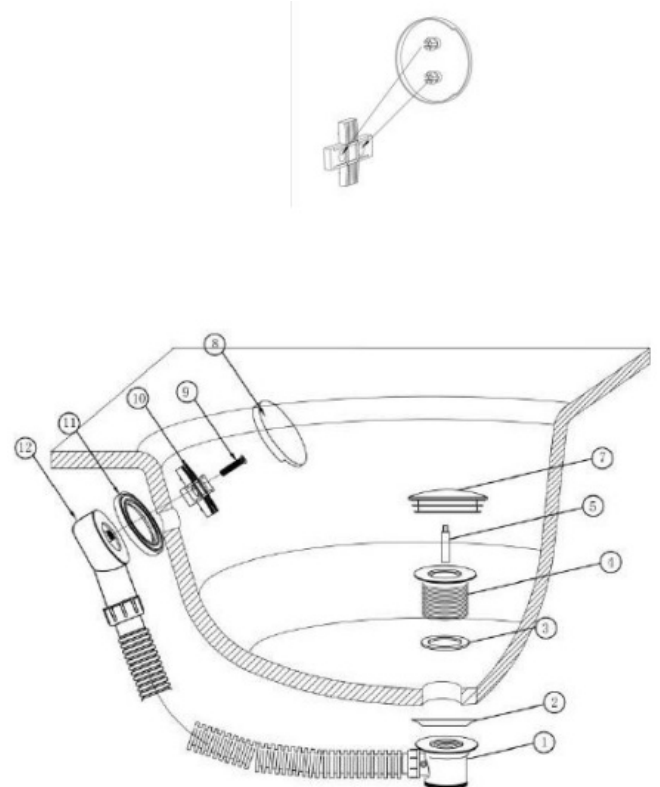
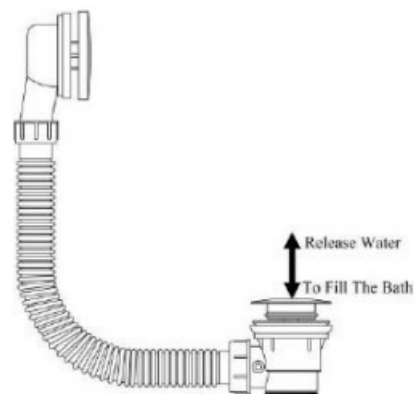
Dimensions



Tools required

Screwdriver

Installation

	<ul style="list-style-type: none"> • Fit the rubber seal(11) on the overflow housing(12), hold the unit in position from the backside of bath. • Screw in the thread bolt(9) through the fixing seat(10) and fasten with the overflow housing(12). Please ensure it is fully screwed at the body. • Install the decorative cover(8) by inserting the plastic cores into the 2 holes on fixing seat(10). • Put the waste base assembled(4&5&7) and flat rubber washer(3) into the bottom waste hole of bath. Place the rubber washer(2) and waste housing(1) on to the waste from backside of bath in sequence. Tighten all the above parts together. • Check all the joints for leaks.
	<p>To fill the bath press down on the drain cover, press the cover again to empty the bath water.</p>

Troubleshooting

Issues	Check
Water leak	<ul style="list-style-type: none"> • Is there damage to the rubber washer(2,3,15) • Is there damage to the sealing ring(6) • Is there damage to the rubber seal(11) • Is the retaining nut(13,16) fully tightened • Has the drain cover(7) been screwed fully onto the spring core(5)

Maintenance and Cleaning

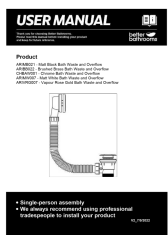
To maintain the surface of your product, wipe with a clean damp cloth and wipe dry, do not use any abrasive cleaning agents or materials.

If any harsh chemicals come into contact with the surface of the product, rinse and wipe clean immediately.

For more information

- visit betterbathrooms.com
- email customerservices@buyitdirect.co.uk
- call 03303903062
- write to Trident Business Park, Neptune Way, Huddersfield, HD2 1UA

Documents / Resources



[better bathrooms ARIMB021 Matt Black Bath Waste and Overflow](#) [pdf] User Manual
ARIBB022, ARIMB021 Matt Black Bath Waste and Overflow, ARIMB021, Matt Black Bath Waste
e and Overflow, Black Bath Waste and Overflow, Bath Waste and Overflow, Waste and Overflo
w, Overflow

References

- [!\[\]\(b1b781be830eb908d845c527ab08d5f8_img.jpg\) Contact Us | Better Bathrooms](#)
- [!\[\]\(2176a4ba510fa27404d783166e891577_img.jpg\) Better Bathrooms - Login](#)
- [User Manual](#)