



BRONCO6G MUD Flaps for Bronoc Instruction Manual

[Home](#) » [BRONCO6G](#) » BRONCO6G MUD Flaps for Bronoc Instruction Manual 

Contents

- [1 BRONCO6G MUD Flaps for Bronoc](#)
- [2 WHAT IN THE BOX](#)
- [3 INSTALLATION INSTRUCTIONS](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)



BRONCO6G MUD Flaps for Bronoc




WHAT IN THE BOX



INSTALLATION INSTRUCTIONS

The Installation Steps of The Mud Flaps Are as Follows:

1. Turn the three buckles indicated by the arrow and pull out the wheel brows
2. Remove all expansion screws from marked positions.
3. Take out the accessories and install as shown in the picture.

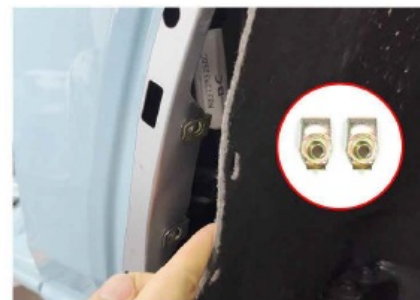

4. Take out the attachment and align the attachment hole in the previous step as shown in the picture.
5. Align the inner lining holes of the original car with the holes of all accessories and install the screws as shown in the picture
6. Take out the fender and install it according to the fitting hole, pay attention to the mark on the back of the bracket.



7. After all the holes are aligned, fix them using the accessory screws and tools as shown in the picture.

8. Remove expansion screws using the original vehicle and fix them in the marked position.
9. Install the original wheel eyebrows and the installation is complete.



10. The rear wheel Mud Flaps installation takes the left rear wheel as an example, first find the left rear front tow hook.
11. Use a tool to remove the front tow hook screw and remove the front tow hook.
12. The disassembly is completed as shown in the figure and then proceed to the next step.



13. Take out the two accessory brackets for your fingers as shown in the picture for the accessories used to install the Mud Flaps on the left rear wheel.
14. Assemble the two brackets using the accessory screws.
15. Place the assembled bracket in the position where the front tow hook was removed.



16. Then put the front tow hook on the bottom and fix it.
17. The installation effect of the lower bracket part is completed as shown in the figure.
18. Use the tool to remove the screw at the liner position as shown in the figure.



19. Insert the liner edge using the accessory bracket shown and secure with the accessory screws.
20. Then use the original car screws to fix the liner and bracket.
21. After the upper and lower brackets are installed, take out the left rear wheel Mud Flaps and insert it between the original car and the lower bracket.



22. The effect after fully inserted is as shown in the figure.
23. Note that the upper bracket is aligned with the hole in the Mud Flaps.
24. Note that the lower brackets line up with the two holes in the Mud Flaps.



25. Secure Brackets and Mud Flaps with Accessory Screws and Nuts.
26. When fixing, pay attention to pressing the nut on the back.
27. The fixing effect of the upper bracket and Mud Flaps is shown in the figure.




28. After everything is fixed, use the accessory "L-shaped screwdriver" to fix the lower bracket and Mud Flaps.
29. Re-fix the upper bracket and Mud Flaps.
30. connection complete effect.



31. Reinstall the original wheel eyebrows, the installation is complete.
32. You can install the accessory shock-absorbing cotton according to your own needs, draw the outline with a pen from the back for cutting, drill holes with screws, and then tear off the back glue to install.
33. The accessory shock-absorbing cotton can effectively fill the installation gap between the original car and the Mud Flaps, preventing noise and wear.



Documents / Resources

	<p>BRONCO6G MUD Flaps for Bronoc [pdf] Instruction Manual</p> <p>MUD Flaps for Bronoc</p>
---	---