

Cabelcon F Self Install TrueDrop Instructions

Home » Cabelcon » Cabelcon F Self Install TrueDrop Instructions 🖫



Item no. 99909621, 99909631, 99909636

Contents


- 1 F Self Install TrueDrop
- 2 Documents /

Resources

3 Related Posts

F Self Install TrueDrop

Step 1

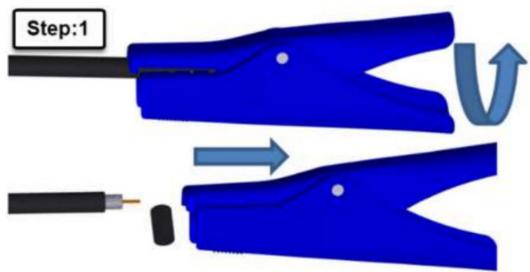

Strip the cable to obtain the following stripping

A = 6,5mm (outer conductor)

B = 6.5-8.0mm (inner conductor)


For "Quad shield", "Tri shield" and "Super shield" cables: Remove the outer braid and foil, only Leave the inner foil and inner braid, inner foil must be attached to dielectric and make sure, it is smooth and undamaged.

Clean the cable inner and outer conductor with a conductor cleaner or any other appropriate equipment.

For your safety and best results Cabelcon's pre-adjusted Cable Stripper is recommended. Please read the instructions for use, supplied with the tool.


Step 2

Verify stripped dimensions by using cutting guide on the connector.

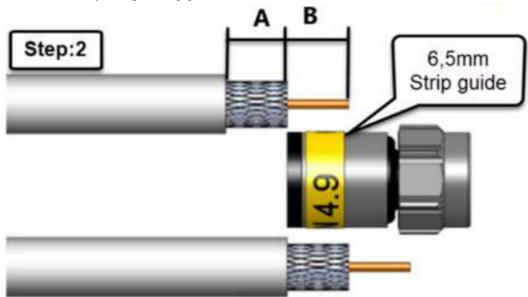


Step 3

optional option, press connector support sleeve back into connector, with light pressure for click, it will make cable installation easier (step 5).

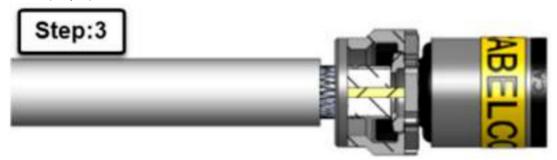


Step 4

Brush/fold exposed braid back over jacket by using astripping tool brush (if available) or any other nonmetallic brush.

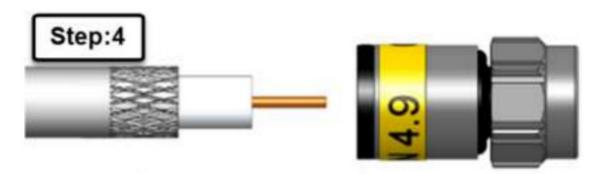

Step 5

Push the connector over the foil, allow the support sleeve to slide between the foil and braid. Press and turn until the dielectric is flush with the support mandrel face. For better connector and cable grip, Cabelcon's connector mounting and cable rubber grip tool can be used.

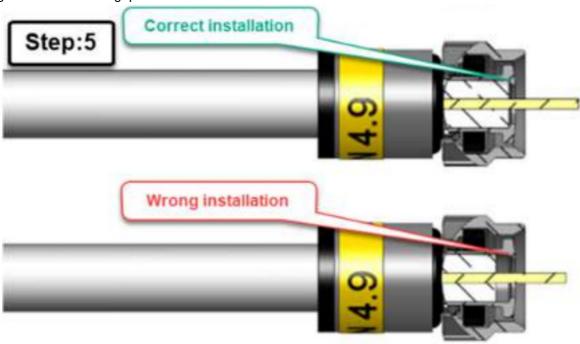

Step 6Compress the connector by tightening the connector onto the F female port.



Tools and Accessories	Item No.
CABLE STRIPPER ROTARY RG 6/59/MINI.	98501010
CABLE STRIPPER RG6/59 W. HEX 11 SPANNER	98501040-02
CABLE STRIPPER I/D RG6/59 WB FOR INDOOR PVC CABLE	98501083
CABLE CUTTER DROP RG59/6/11 CCS	98028619-01
CONDUCTOR CLEANER CC-200EUR	98500903
TORQUE WRENCH AH HEX 11mm 4,5NM	98029080-01
COLOR MARKING CX3. BLACK/BROWN/RED/ORANGE/YELLOW/GREEN/BLUE/VIOLET/GREY/WHITE/TURQUI S	990040**



Industriparken 10, DK-4760 Vordingborg www.cabelcon.com

cccustomercare@cabelcon.com

Rev. Date: 11/01-2022

Documents / Resources



<u>Cabelcon F Self Install TrueDrop</u> [pdf] Instructions

99909621, 99909631, 99909636, F Self Install TrueDrop, F TrueDrop, Self Install TrueDrop, Tru eDrop

Manuals+,