


CARBEST 318022 Acrylic Sliding Window RW Style Slide User Manual

Home » CARBEST » CARBEST 318022 Acrylic Sliding Window RW Style Slide User Manual

CARBEST 318022 Acrylic Sliding Window RW Style Slide

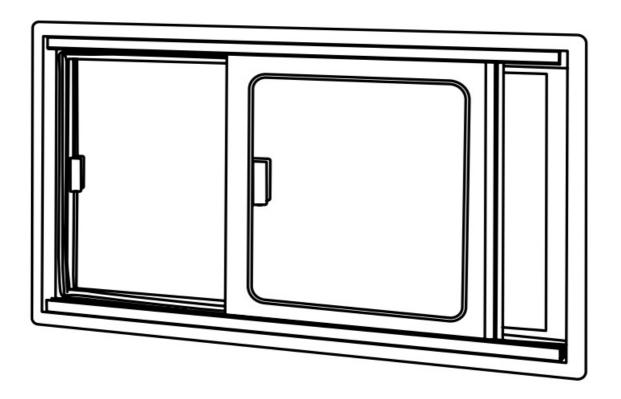

Contents

- 1 Features
- **2 SAFETY INSTRUCTIONS**
- **3 NOTES ON INSTALLATION**
- **4 SCOPE OF DELIVERY**
- **5 ACCESSORIES (OPTIONAL)**
- **6 INSTALLATION OF THE SLIDING**

WINDOW

- **7 CLEANING AND CARE INSTRUCTIONS**
- **8 WARRANTY**
- 9 DISPOSAL
- **10 Customer Support**
- 11 Documents / Resources
- 12 Related Posts

Features



















Please read the instructions carefully before installation and commissioning and keep them.

Pass these instructions on to the next user if the product is passed on.

Failure to follow the instructions in this manual may result in material damage or leakage and affect the function of the window.

Also observe the safety instructions and requirements prescribed by the vehicle manufacturer / body builder!

SAFETY INSTRUCTIONS

- CARBEST sliding window RW Style Slide is designed exclusively for installation in campervans, motorhomes and caravans.
- Please hire a specialist company to install the window if you do not have sufficient installation knowledge.
- Keep the window closed during rain, snowfall or strong wind.
- Before each trip, check that the window is undamaged and closed.
- If you notice any damage to the window (cracks, damage to the acrylic glass), contact a specialist workshop, your dealer or the manufacturer immediately.

NOTES ON INSTALLATION

- Before mounting, please note the specified wall thickness and compare it with the wall thickness of your vehicle.
- The sliding window is suitable for wall thicknesses from 30 to 45 mm
- Before installation, clarify whether the wall cutout needs to be reinforced.
- Please check and verify the installation location carefully before sawing a cutout in the body of your vehicle.

 There must be no load-bearing components, power lines or furniture in the way.

ATTENTION: The sliding window can be mounted on the left and right side of the vehicle. When mounting, please note that the movable pane must always be in the front direction of travel.

SCOPE OF DELIVERY

• Sliding window



• Mounting frame



• Mounting material (screws)



ACCESSORIES (OPTIONAL)

Interior frame with mosquito net and blackout


Outer dimension W x H (mm)	Article number	Suitable for windows
528×478	3180010	318022
728×328	31800130	318023
728×428	3180020	318024
928×478	3180030	318025
1028×528	31800170	318026

INSTALLATION OF THE SLIDING WINDOW

We always recommend installing the window with at least two people.

1. Make sure that the existing wall cutout on your vehicle matches the specified cutout dimension of the window.

Cutout W x H (mm)	Item number
500×450	318022
700×300	318023
700×400	318024
900×450	318025
1000×500	318026

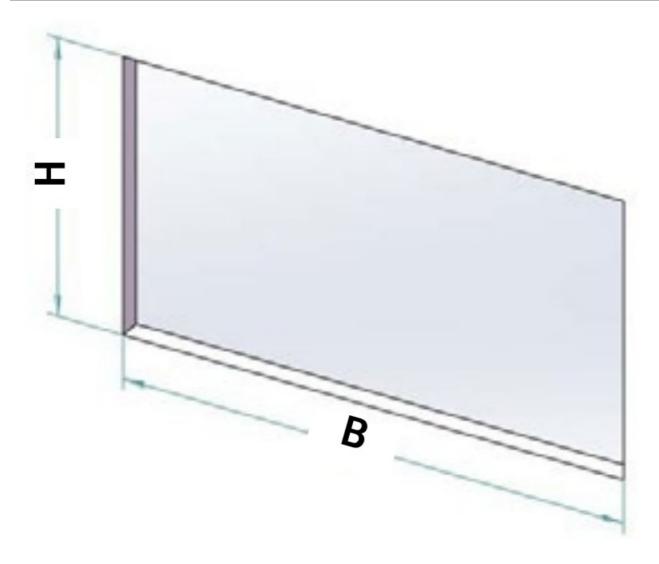

- 2. Thoroughly clean the inside of the outer frame and the entire area around the wall cutout. The surfaces must be clean and free of dust and grease.
- 3. Please apply sealant evenly and as thick as your thumb to the inside of the outer frame.

Recommendation: DEKAseal 8936 or SikaLastomer 710

ATTENTION! Observe the instructions of the sealant manufacturer!



- 4. Center the outer frame in height and width in the wall cutout and carefully press the frame against the vehicle wall so that the sealant can spread evenly.
- 5. While one person holds and fixes the window frame from the outside, the second person should counter-screw the supplied interior mounting frame with the supplied screws from the inside. Attention: Please do not overtighten the screws!



6. Once the window installation is complete, the optional blackout system can be installed if required. Depending on the installation situation and the existing wall thickness, an additional wooden frame may be required for mounting the blackout system. This must be manufactured individually and by the customer. At the four outer corners of the frame are the holes for the screw connection. Fasten the blackout system with the supplied

fastening screws and tighten the screws lightly by hand. Check that the mosquito net and the blackout can be moved easily. Close the screw holes with the four cover caps and remove all protective foils.





WARNING! Heat accumulation between the glass pane and the blackout system may damage the product. Do not close the blackout system completely when there is strong sunlight and the associated high temperatures.

CLEANING AND CARE INSTRUCTIONS

• Do not use aggressive cleaning agents. These can damage the acrylic glass. Gentle cleaning with water or soapy water is recommended (depending on the degree of soiling of the window).

• Do not use rough cloths, as they can cause scratches and haze. Only use soft, lint-free cloths.

WARRANTY

The warranty period is 36 months. Reimo reserves the right to eliminate possible defects. The warranty is excluded for any damage caused by incorrect use or improper handling.

Limitations of Liability: In no event shall Reimo be liable for incidental, consequential or indirect damages, costs, expenses, loss of use or loss of profits. The stated sales price of the product represents the appropriate amount of Reimo's limitation of liability.

DISPOSAL

Place the packaging material in the appropriate recycling waste. If you wish to decommission the product permanently, please contact your local recycling center or your specialist dealer for the applicable disposal regulations.

Customer Support



REIMO REISEMOBIL-CENTER GMBH

63329 EGELSBACH · BOSCHRING 10 GERMANY · <u>WWW.REIMO.COM</u> MADE IN CHINA · © REIMO 03/2023



Documents / Resources



CARBEST 318022 Acrylic Sliding Window RW Style Slide [pdf] User Manual 318022 Acrylic Sliding Window RW Style Slide, 318022, Acrylic Sliding Window RW Style Slide, Slide, Slide, RW Style Slide, Style Slide, Slide

Manuals+,