



cell2 02180151 High Gradient Windshield Shroud Kit User Manual

[Home](#) » [Cell2](#) » cell2 02180151 High Gradient Windshield Shroud Kit User Manual 

cell2 02180151 High Gradient Windshield Shroud Kit User Manual



Contents


- [1 INSTALLATION](#)
- [2 ADJUSTABLE ANGLE](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

INSTALLATION

1. Assemble the lighthead to the plastic shroud with the rubber backing.
2. Adjust the angle of the lighthead before fixing it with the provided machine screws (ensure that they are on the same level).
3. Choose a mounting area on the windshield that is clear from obstruction to view or interference with driving.
4. Clean the mounting area thoroughly with alcohol and remove tape backings before mounting.

5. Press the assembly firmly against the windshield for 1 minute to complete the installation.
6. Make wiring according to the lighthouse manual.


NOTE: Lightheads may be oriented with cable exiting to the left or to the right of the rear shroud.

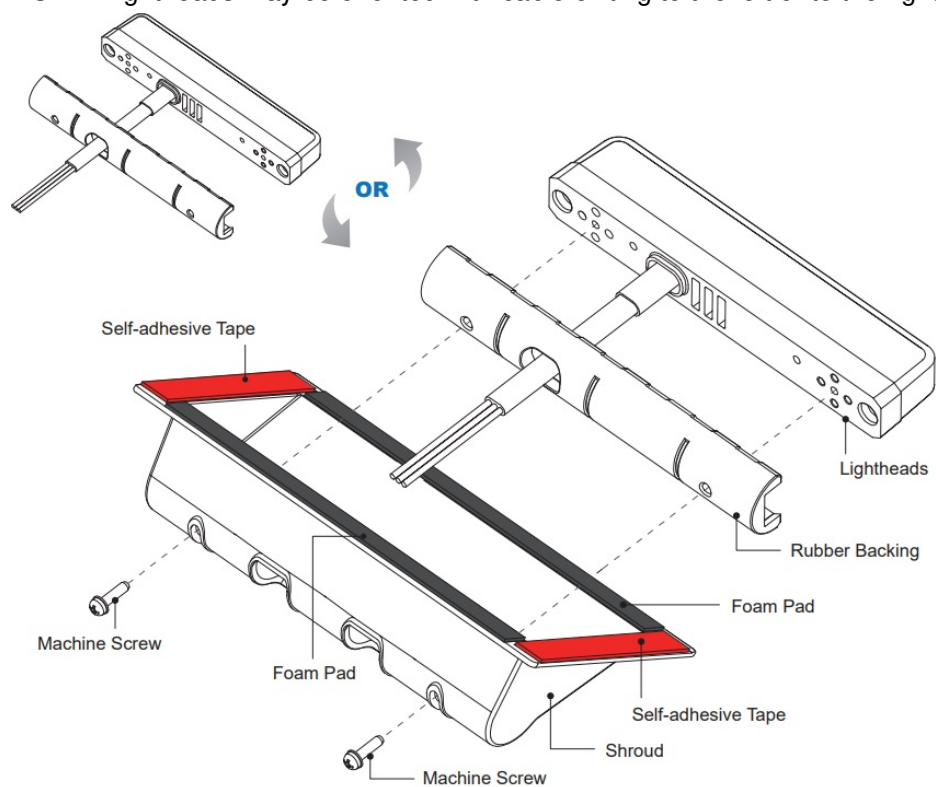


CAUTION: Recommended torque force @ 1.5~2.5Kgf-cm

ADJUSTABLE ANGLE


The angle of ligh the ad is adjustable with 55 degree at most for optimum warning efficiency

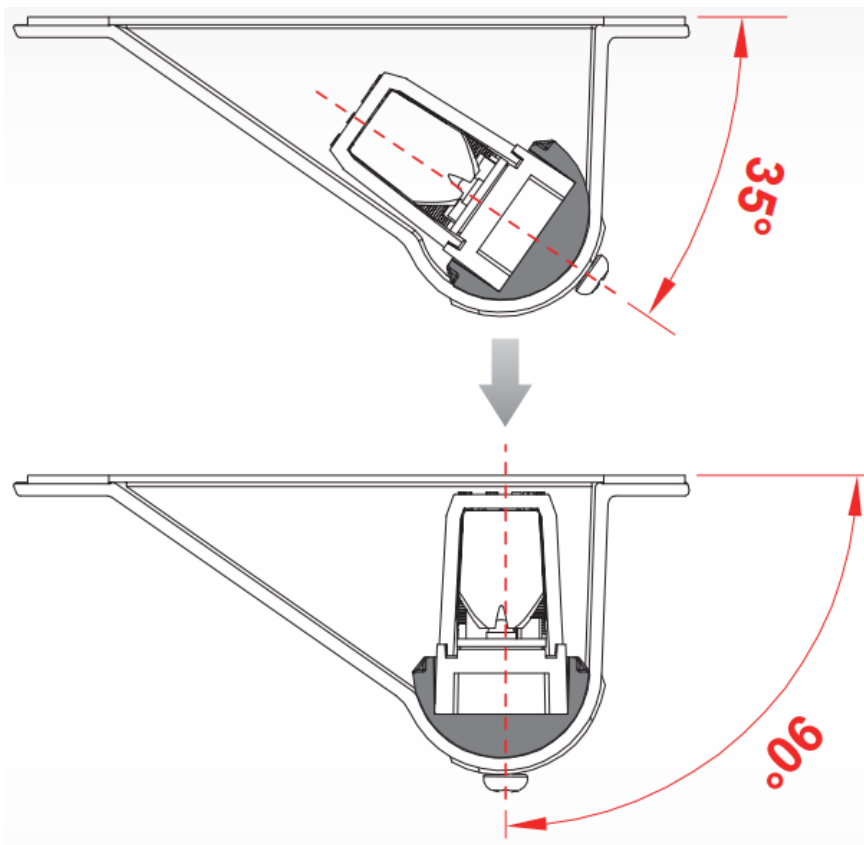

Horizontal marking that indicates level of adjustment.

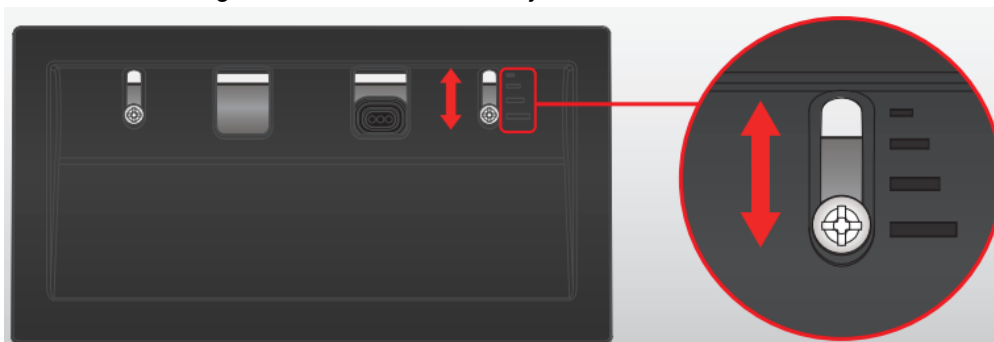

Documents / Resources

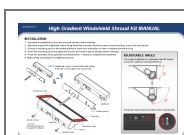

[cell2 02180151 High Gradient Windshield Shroud Kit](#) [pdf] User Manual
86-M5910-0311.0, 02180151 High Gradient Windshield Shroud Kit, 02180151, High Gradient Windshield Shroud Kit, Windshield Shroud Kit