CJ INDUSTRIES OBD2 Bluetooth Scan Tool





CJ INDUSTRIES OBD2 Bluetooth Scan Tool User Guide

Home » CJ INDUSTRIES » CJ INDUSTRIES OBD2 Bluetooth Scan Tool User Guide



Contents

- 1 CJ INDUSTRIES OBD2 Bluetooth Scan
- Tool
- **2 Product Information**
- **3 Product Usage Instructions**
- 4 FAQ
- **5 SETUP OUR OBD DEVICE**
- 6 Documents / Resources
 - **6.1 References**



CJ INDUSTRIES OBD2 Bluetooth Scan Tool



Product Information

Specifications:

• Product Name: OBD Device

· Compatibility: Works with vehicles equipped with an OBD port

 Required App: TOOLBOX app on the head unit, TORQUE OBD App on the Play Store

• Password: Default is set to 1234

Product Usage Instructions

Connecting the OBD Device:

Ensure the OBD device is securely connected to the OBD port in your vehicle.

Pairing Process:

- 1. Locate and open the TOOLBOX app on the head unit.
- 2. Click on "OBD MATCH" to initiate the pairing process.
- 3. Click the search button to discover available OBD devices.
- 4. Select the detected OBD device and click to pair.
- 5. If connection issues persist, change the password to 1234 and attempt pairing again.

Setting Up TORQUE OBD App:

- After successful pairing, download the TORQUE OBD App from the Play Store onto the head unit.
- Open the TORQUE app and follow the on-screen instructions to complete the setup process.

• If you encounter any difficulties during setup, please reach out to our team via email for assistance.


FAQ

Q: What should I do if the OBD device doesn't connect after multiple attempts?


A: Try changing the password to 1234 and attempt pairing again. If issues persist, contact our team for support.

SETUP OUR OBD DEVICE


- 1. Ensure our OBD device is connected to the OBD port on your vehicle
- 2. Locate the TOOLBOX app on the head unit

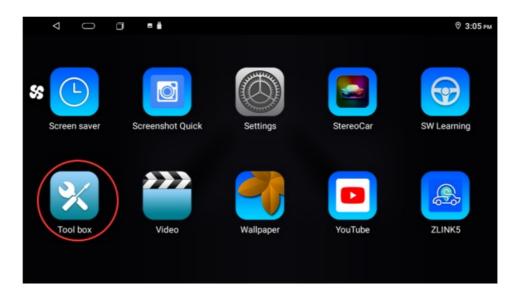


3. Click OBD MATCH

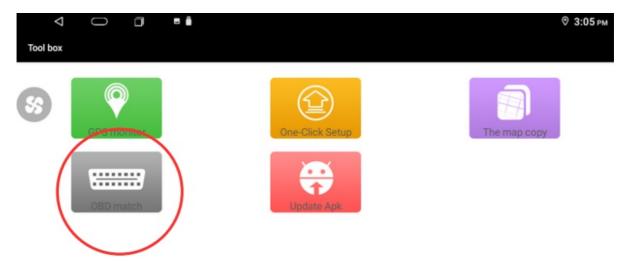

4. Click the search button

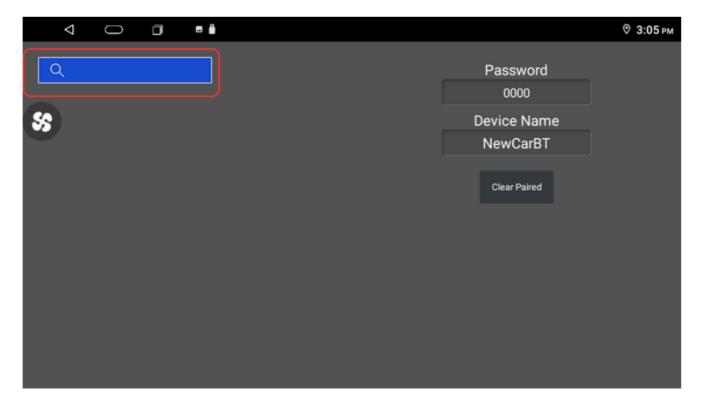

- 5. The obd device should pop up, click to pair.
- 6. If it won't connect after numerous attempts try clicking the PASSWORD and changing it to 1234 instead. Then, try the pairing again

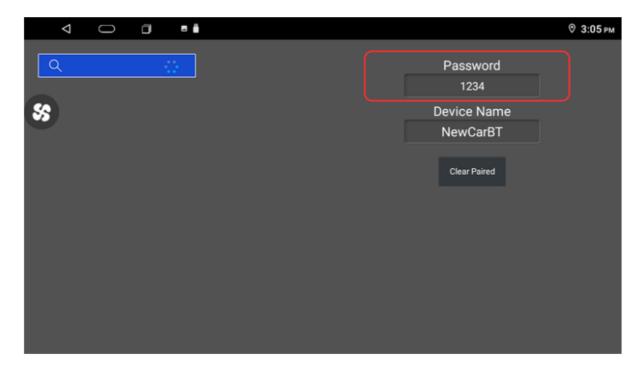

7. Next, once paired – you will need to download the TORQUE OBD App onto the head unit through the Play Store.

Once downloaded, enter the Torque app to begin setup.

If you are still experiencing trouble - contact our team via email

Documents / Resources



CJ INDUSTRIES OBD2 Bluetooth Scan Tool [pdf] User Guide OBD2, OBD2 Bluetooth Scan Tool, Bluetooth Scan Tool, Scan Tool, Tool

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.