



ClearOne BMA 360 Conferencing Beamforming Microphone Array Installation Guide

[Home](#) » [ClearOne](#) » ClearOne BMA 360 Conferencing Beamforming Microphone Array Installation Guide 

ClearOne BMA 360 Conferencing Beamforming Microphone Array



Contents

- [1 IMPORTANT INFORMATION](#)
- [2 For BMA CT or CTH](#)
- [3 For BMA 360](#)
- [4 SALES AND INQUIRIES](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

IMPORTANT INFORMATION


The method of attachment of the conduit box differs between a BMA CT or CTH, and a BMA 360. For the BMA CT or CTH, adhesive strips are used; for the BMA 360, screws are used.

Important: Clear One recommends that you attach the conduit box before you install the full unit in the ceiling grid.

For BMA CT or CTH

Step 1

Remove adhesive tape liner from bottom three surfaces of conduit box to expose adhesive strips. This adhesive is rated for high temperatures.

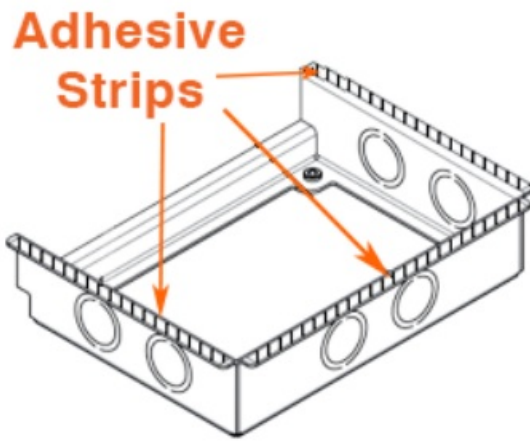

Conduit Box Part Number:

910-3200-205-CB


Included Parts:

- Conduit box with 6 concentric 1/2" and 3/4" knockouts, with adhesive strips on edges (1)
- Conduit box lid (1)
- M4x8mm screws (4)

Step 2

To avoid prematurely engaging the adhesive while you align the open end of the box to the BMA CT/CTH connectors, tilt the conduit box and slide it into position against the self clinching nuts. Press the box into place.

To position the conduit box,
use the self-clinching nuts.

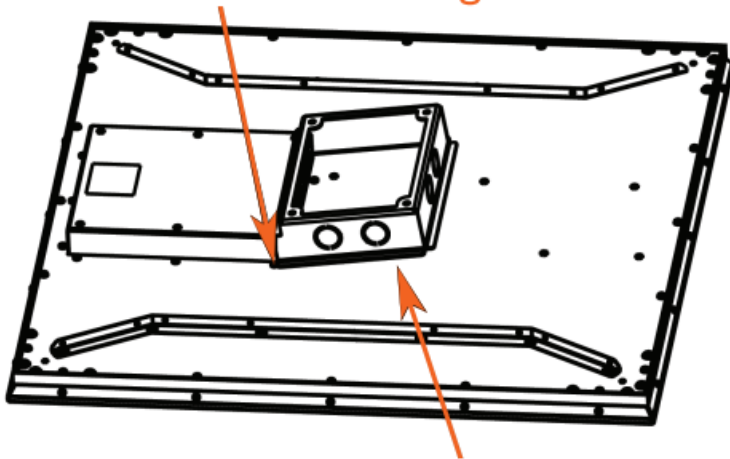

To avoid tape engaging prematurely,
keep conduit box tilted until
properly positioned.


Step 3

Remove the conduit box lid.


Attach conduit.

Route cables through desired knockouts.

Use the four M4x8mm screws to re-attach the conduit box lid.

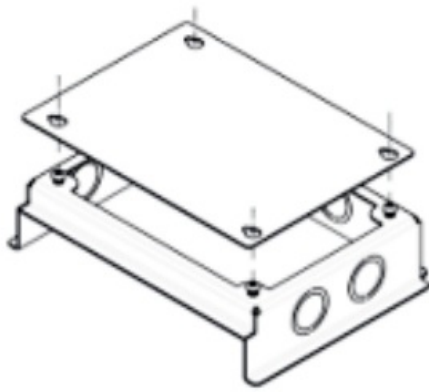

To speaker 1

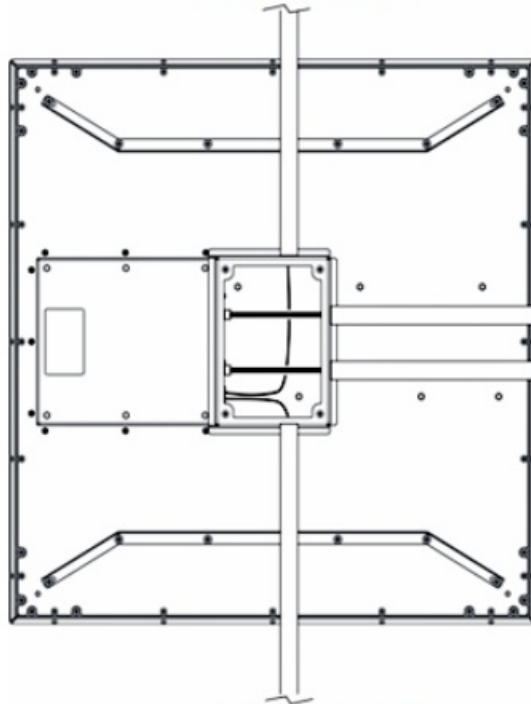

To CP2 or P-Link device


To PoE injector

To speaker 2

For BMA 360

Step 1

Use the six M3x8mm screws to attach the conduit box to the back of the BMA 360.

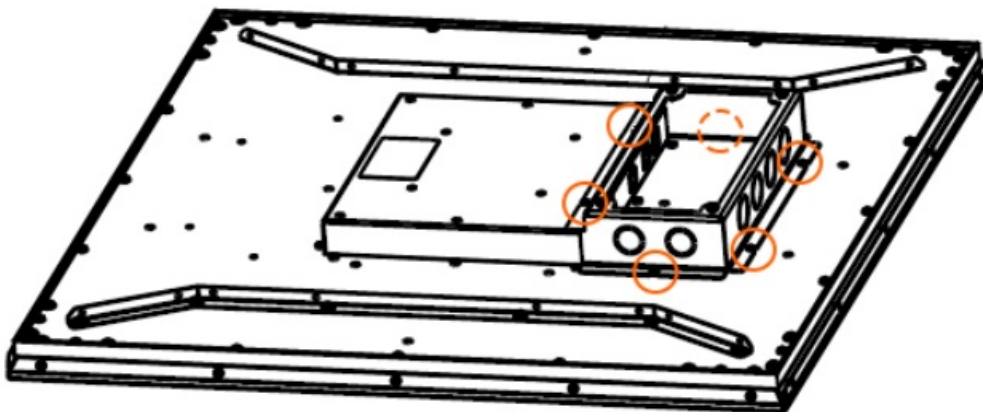

Conduit Box Part Number:

910-3200-208-CB

Included Parts:

- Conduit box with 12 concentric 1/2" and 3/4" knockouts
- Conduit box lid (1)
- M4x8mm screws (4)
- M3x8mm screws (6)



Step 2

Remove the conduit box lid.

Attach conduit.

Route cables through desired knockouts.

Use the four M4x8mm screws to re-attach the conduit box lid.

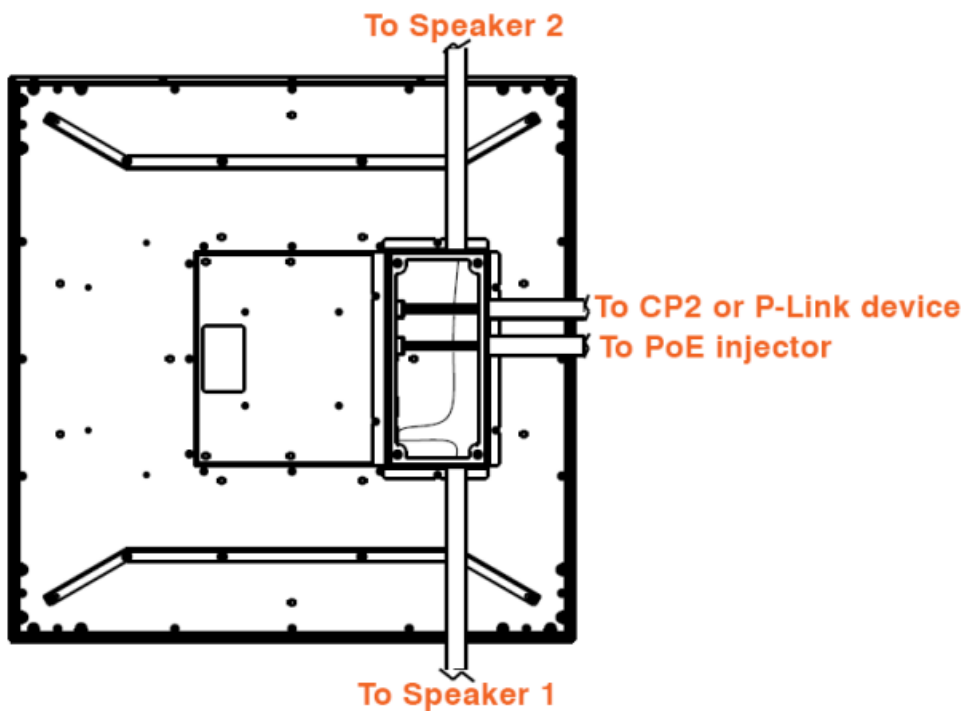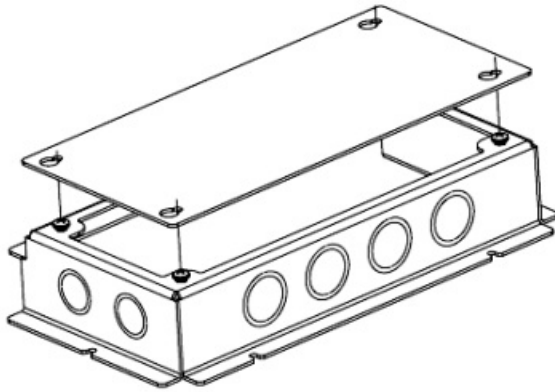

SALES AND INQUIRIES

Headquarters

5225 Wiley Post Way Suite 500 Salt Lake City, UT 84116

US & Canada

Tel: 801.975.7200

Fax: 801.303.5711

International

Tel: +1.801.975.7200

global@clearone.com


Sales

Tel: 801.975.7200



sales@clearone.com

ClearOne®

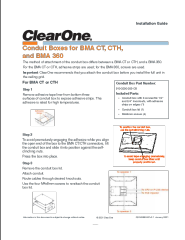Documents / Resources

| | |
|---|---|
|  | <p>ClearOne BMA 360 Conferencing Beamforming Microphone Array [pdf] Installation Guide BMA 360 Conferencing Beamforming Microphone Array, BMA 360, Conferencing Beamforming Microphone Array, Beamforming Microphone Array, Microphone Array, Array</p> |
|---|---|

References

-  [Manual-Hub.com - Free PDF manuals!](#)
-  [Manual-Hub.com - Free PDF manuals!](#)
- [User Manual](#)

Manuals+ Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.