

CMS Electracom FTA3 Access Floor Box Installation Guide

[Home](#) » [CMS Electracom](#) » CMS Electracom FTA3 Access Floor Box Installation Guide 

Contents

- [1 CMS Electracom FTA3 Access Floor Box](#)
- [2 CMS INSTALLATION GUIDE](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)





CMS Electracom FTA3 Access Floor Box



CMS INSTALLATION GUIDE

ACCESS FLOOR BOX APPLICATION – FTA3

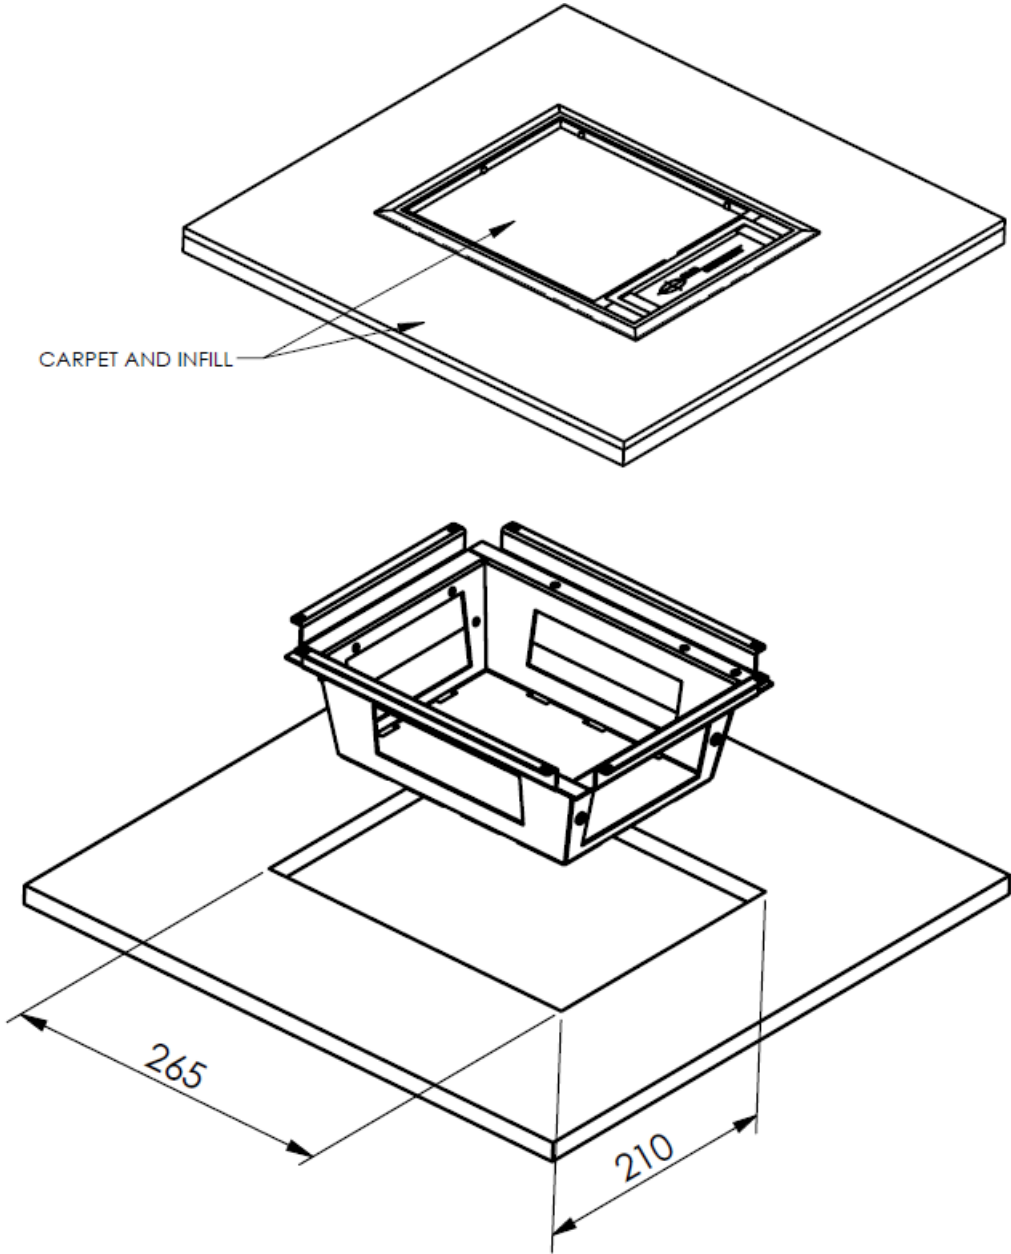

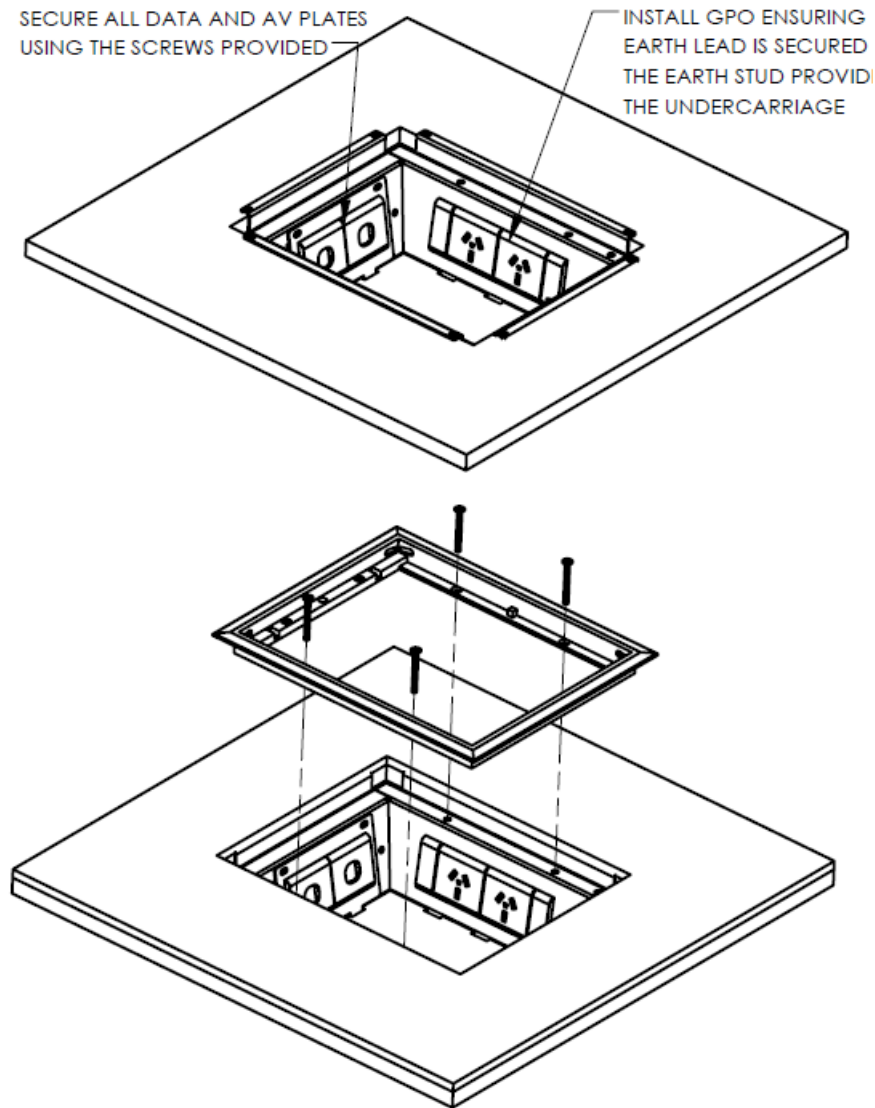


1. STEP 1 – CUT A HOLE INTO THE FLOORING FOLLOWING THE LISTED CUT-OUT DIMENSIONS
2. STEP 2 – INSTALL THE UNDERCARRIAGE INTO THE CUT-OUT AND SCREW FIX IN PLACE
3. STEP 3 – TERMINATE ALL GPO DATA AND AV OUTLETS INTO THE MOUNTING PLATES AND INSTALL TO THE UNDERCARRIAGE USING THE SCREWS PROVIDED.
4. STEP 4 – LAY CARPET AND CUT OUT HOLE FOR THE LID TO FIT- USE CUT PIECE TO INSTALL INTO RECESS (IF APPLICABLE) INSTALL AND SECURE THE LID FRAME TO THE FLOORBOX UNDERCARRIAGE USING THE FIXING SCREWS PROVIDED

NOTE: THE LID IS ADJUSTABLE TO ACCOMMODATE VARYING CARPET THICKNESS

SYDNEY | MELBOURNE | BRISBANE | PERTH | NEW ZEALAND www.cmselectra.com

Documents / Resources

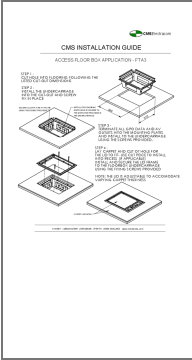 The image shows the first page of a technical installation guide. It features a title 'CMS INSTALLATION GUIDE' and a subtitle 'ACCESS FLOOR APPLICATION - FTA3'. Below the text are several diagrams illustrating the installation process: a top-down view of the floor box, a side view showing the box being lowered into a pre-cut hole, and a detailed view of the box's internal structure and mounting points. The diagrams are labeled with numbers 1 through 5, corresponding to the steps in the installation process.	<p>CMS Electracom FTA3 Access Floor Box [pdf] Installation Guide FTA3, Access Floor Box, FTA3 Access Floor Box</p>
---	--

References

- [Home page | CMS Electracom - United States](#)

[Manuals+](#).