

Command 17067es Small Wire Hooks Installation Guide

Home » COMMAND » Command 17067es Small Wire Hooks Installation Guide 🖫

Contents

- 1 Command 17067es Small Wire Hooks
- 2 APPLY
- **3 REMOVE**
- 4 Hooks can be reused with Command® Small Refill Strips
- **5 Limited Warranty and Limitation of Liability Product sold in the USA**
- 6 Documents / Resources




Command 17067es Small Wire Hooks




Failure to follow instructions carefully may cause damage. Save instructions or visit command.com

APPLY

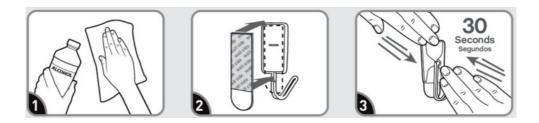


- 1. Clean the surface with rubbing alcohol. Do not use household cleaners.
- 2. Remove the red liner. Press adhesive to hook.
- 3. Remove the black liner. Press the hook firmly to the wall for 30 sec. Wait 1 hour before use.

REMOVE







- 1. Hold the hook gently in place.
- 2. Never pull the strip towards you! Always pull straight down.
- 3. Stretch the strip slowly against the wall at least 6 inches to release.

Hooks can be reused with Command® Small Refill Strips

CAUTION: Do not hang over beds or on wallpaper Do not hang valuable or irreplaceable items or framed pictures. Use indoors 50'-105°F.

Limited Warranty and Limitation of Liability Product sold in the USA

This product will be free from manufacturing defects. If defective, your exclusive remedy shall be, at 3M's option, product replacement or refund. 3M will not be liable for any loss or damage arising from this product, whether direct, indirect, special, incidental, or consequential.

Documents / Resources



<u>Command 17067es Small Wire Hooks</u> [pdf] Installation Guide 17067es Small Wire Hooks, 17067es, Small Wire Hooks, Hooks