

COMNOVA WB-TS298SD Style Nerf Bars Running Boards



COMNOVA WB-TS298SD Style Nerf Bars Running Boards Instruction Manual

[Home](#) » [COMNOVA](#) » COMNOVA WB-TS298SD Style Nerf Bars Running Boards Instruction Manual 

Contents

- [1 COMNOVA WB-TS298SD Style Nerf Bars Running Boards](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 PARTS LIST](#)
- [6 Installation Instructions](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)



COMNOVA WB-TS298SD Style Nerf Bars Running Boards



Specifications

- **Product:** S6 Running Boards
- **Compatibility:** 2022-2024 Toyota Tundra Crewmax
- **Part Numbers:** WB-TS298SD (Driver/Left), WB-TS298BD (Passenger/Right)
- **Cleaning Instructions:** Use mild soap only, avoid abrasive polishes or waxes

Product Usage Instructions

Installation Steps for Passenger/Right Side:

Front Mounting Location:

1. Remove plastic plugs or hex bolts from threaded holes.
2. Attach the Passenger/Right Front Mounting Bracket using provided hardware.

Center (2nd) Location:

1. Attach one Passenger/Right Rear Mounting Bracket to the 2nd location.

Rear Location:


- 1. Attach the remaining Passenger/Right Rear Mounting Brackets to the 3rd and rear locations.
- 2. Secure the Passenger/Right Running Board to all four mounting brackets.

FAQ

Frequently Asked Questions

- **Q:** Can the running boards be installed on other vehicle models?
 - **A:** These running boards are specifically designed for the 2022-2024 Toyota Tundra Crewmax and may not be compatible with other models.
- **Q:** What should I do if I encounter missing parts during installation?
 - **A:** Contact customer support immediately to request replacement parts for a complete installation.

PARTS LIST



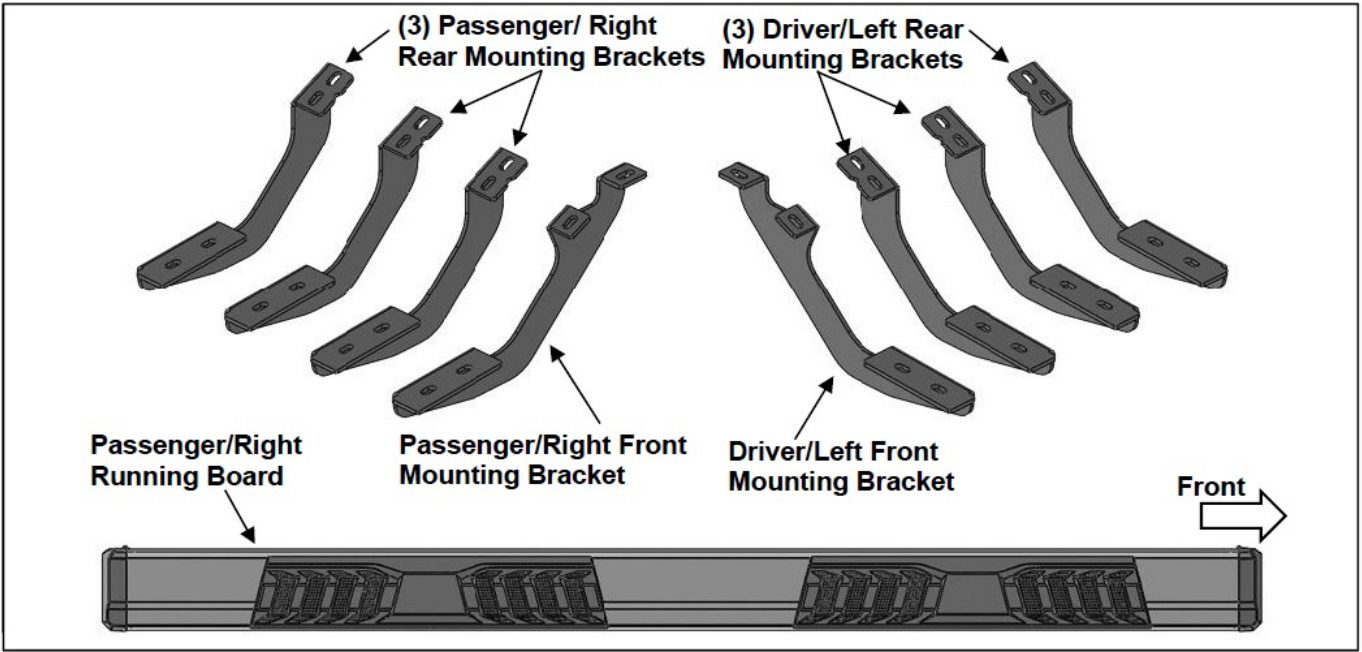


1	Driver/Left S6 Running Board	8	8mm x 35mm Double Bolt Plates
1	Passenger/Right S6 Running Board	16	8mm x 30mm Hex Bolts
1	Driver/Left Front Mounting Bracket	16	8mm Lock Washers
1	Passenger/Right Front Mounting Bracket	32	8mm x 24mm OD x 2mm Flat Washers
3	Driver/Left Rear Mounting Brackets	16	8mm Nylon Lock Nuts
3	Passenger/Right Rear Mounting Brackets		

Installation Instructions

PROCEDURE:

Passenger/Right Side Installation Pictured

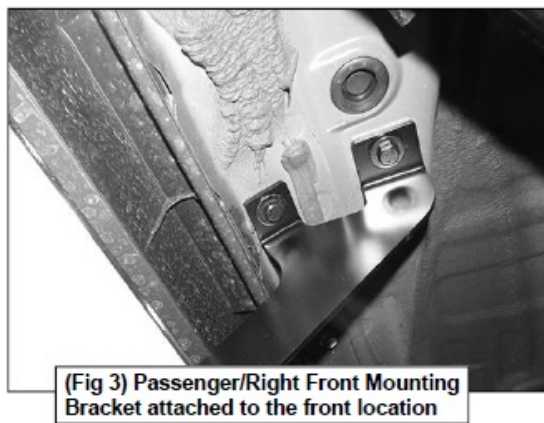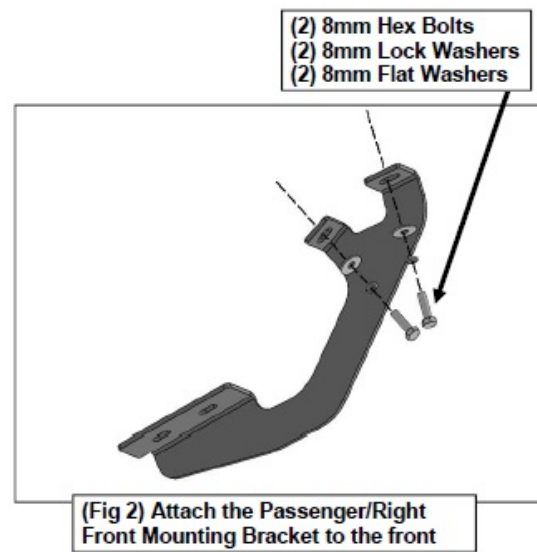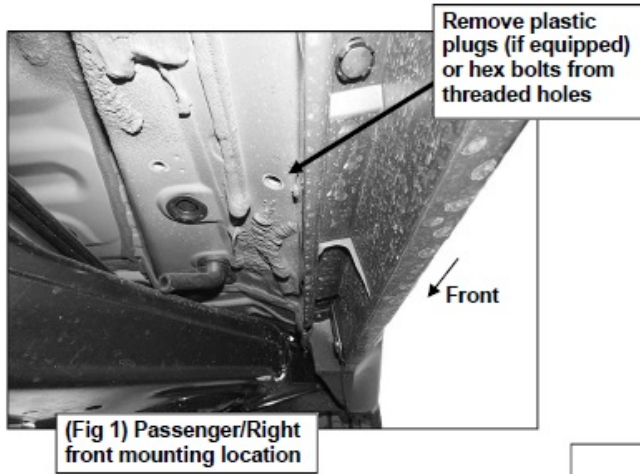


Passenger/Right Side Installation Pictured




(Fig 4) Passenger/Right center (2nd)

(2) 8mm Hex Bolts
(2) 8mm Lock Washers
(2) 8mm Flat Washers



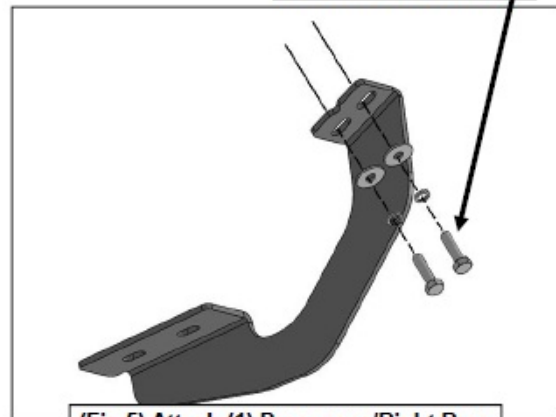


(Fig 5) Attach (1) Passenger/Right Rear Mounting Bracket to the 2nd location

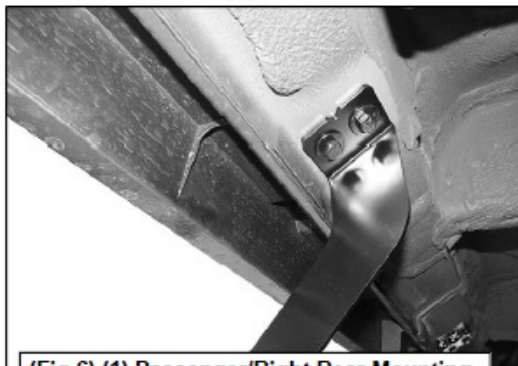

(Fig 6) (1) Passenger/Right Rear Mounting Bracket attached to the 2nd location

Passenger/Right Side Installation Pictured

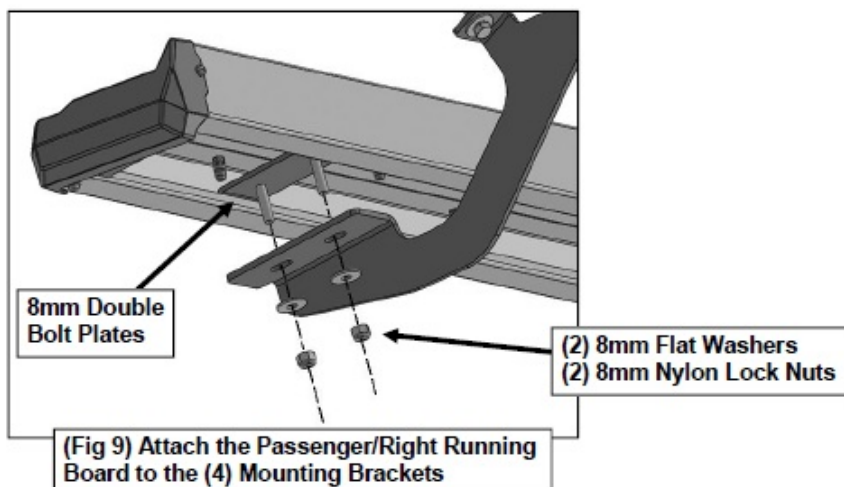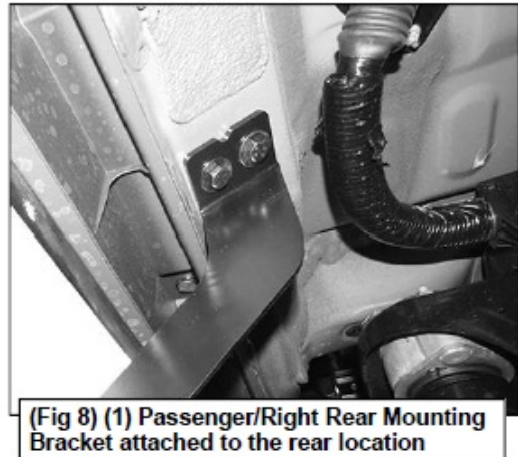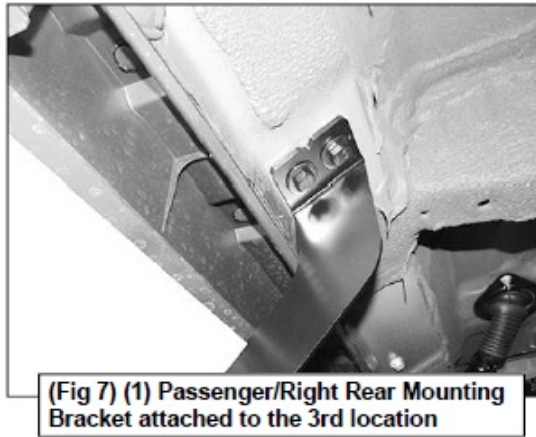


1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. ASSISTANCE IS HIGHLY RECOMMENDED.
2. Starting on the Passenger/Right side of the vehicle and remove the plastic plugs or hex bolts from the factory mounting location along the bottom of the body, (Figures 1 & 4).
3. Select the Passenger/Right Front Mounting Bracket. Attach the Bracket to the front location with (2) 8mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers, (Figures 2 & 3). Do not tighten hardware.
4. Repeat Steps 2 & 3 to attach the (3) Rear Mounting Brackets, (Figures 4—8).
5. Unwrap the Passenger/Right S6 Running Board. Select (4) 8mm Double Bolt Plates, (Figure 9). Insert the Bolt Plates into the channel in the bottom of the Running Board.
6. Place the Running Board on top of the (4) Mounting Brackets. Lift the Running Board up and guide the studs down through the Brackets.

- **IMPORTANT:** Do not slide the Running Board on the Brackets, (front to back or rotate), or the finish on the Running Board may be damaged.
7. Attach the Running Board to the Brackets with (8) 8mm Flat Washers and (8) 8mm Nylon Lock Nuts, (Figure 9). Do not tighten hardware.
 8. Level and adjust the Running Board and tighten all hardware.
 9. Repeat Steps 1—8 to attach the Driver/Left S6 Running Board.
 10. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment: Do not use any type of polish or wax that may contain abrasives that could damage the finish. Use only mild soap to clean the Running Boards.

Documents / Resources

	COMNOVA WB-TS298SD Style Nerf Bars Running Boards [pdf] Instruction Manual WB-TS298SD, WB-TS298BD, WB-TS298SD Style Nerf Bars Running Boards, WB-TS298SD, Style Nerf Bars Running Boards, Nerf Bars Running Boards, Running Boards, Boards
--	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.