



COREtec Smartcore Flooring User Guide

[Home](#) » [COREtec](#) » COREtec Smartcore Flooring User Guide

COREtec Smartcore Flooring User Guide



Contents [[hide](#)]


- [1 TRIM & MOLDING PROFILES](#)
- [2 BABY THRESHOLD](#)
- [3 QUARTER ROUND](#)
- [4 REDUCER](#)
- [5 STAIRNOSE](#)
- [6 T-MOLDING](#)
- [7 TRIM INSTRUCTIONS & DETAILS](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

TRIM & MOLDING PROFILES

SMARTCORE trims and moldings are designed to coordinate effortlessly with your SMARTCORE floor. Each

piece is 94" long and features a waterproof core wrapped in vinyl.

BABY THRESHOLD

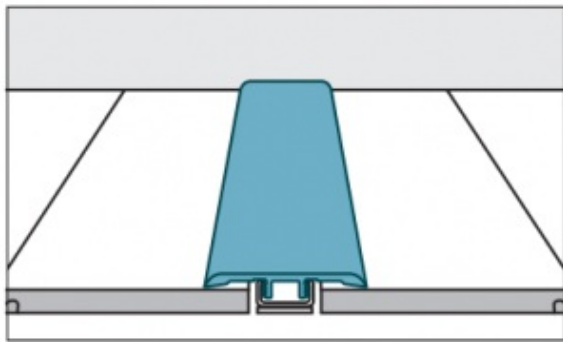


Used for transitioning from a hard surface floor (SMARTCORE) to a thicker floor such as high pile carpet. It can also be used to transition between flooring and doorway thresholds, and/or around hearths and sliding glass doors.

INSTALLATION INSTRUCTIONS:

Measure and cut to fit. Affix Baby Threshold using adhesive, being sure to follow adhesive manufacturer's instructions completely.

QUARTER ROUND

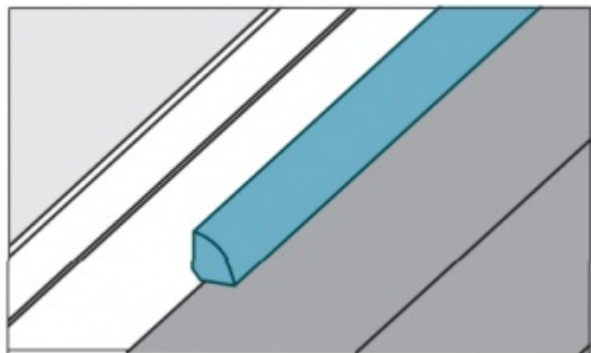


Used to accent the transition from the baseboards to floor surface.

INSTALLATION INSTRUCTIONS:

Measure and cut to fit. Affix Quarter Round using glue, molding tape or nails. When using adhesive, be sure to follow manufacturer's instructions completely.

REDUCER

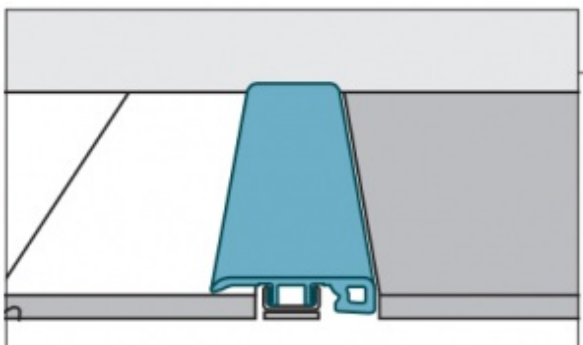


Used to transition from a hard surface floor (SMARTCORE) to a floor with a lower height (ceramic tile, low pile

carpet).

INSTALLATION INSTRUCTIONS:

Cut Reducer and track to same desired length. Secure track to floor with glue, molding tape or nails and press or tap Reducer into track to desired depth using rubber mallet.

STAIRNOSE

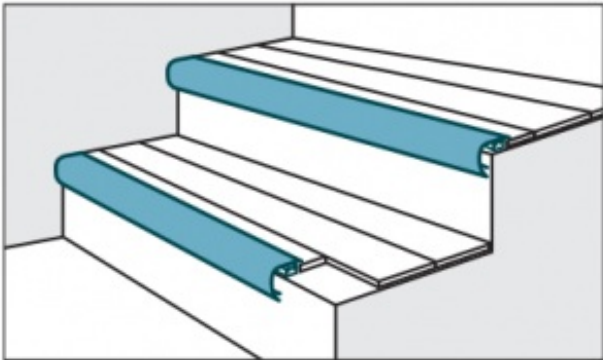


Used to provide the finishing touch to the front stair edge when installing SMARTCORE on stairs.


INSTALLATION INSTRUCTIONS:

Measure and cut to fit. Affix Stairnose using adhesive, being sure to follow adhesive manufacturer's instructions completely.


T-MOLDING

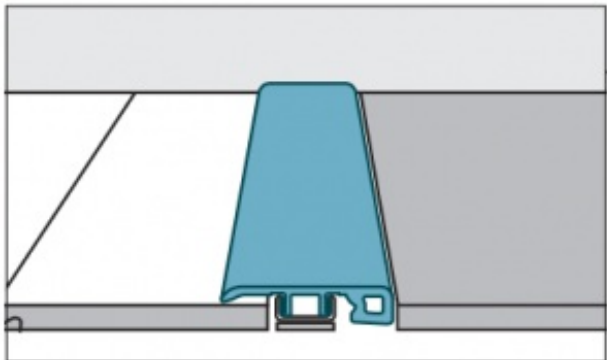


TRIM INSTRUCTIONS & DETAILS

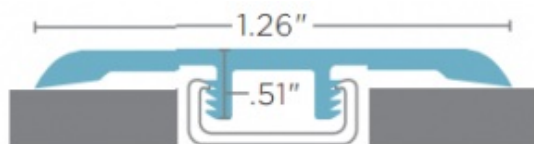

LENGTH: 94"

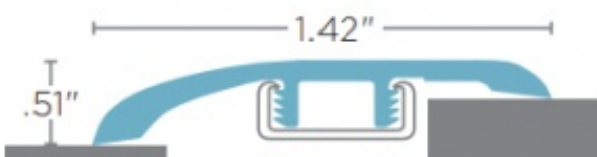


LENGTH: 94"

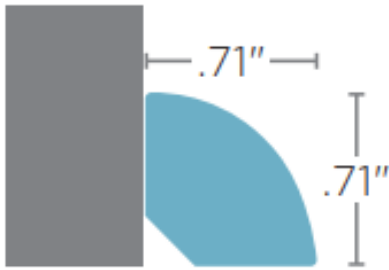


LENGTH: 94"


..... FLUSH

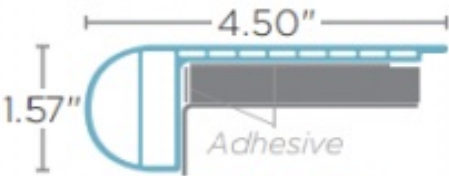

..... OVERLAP

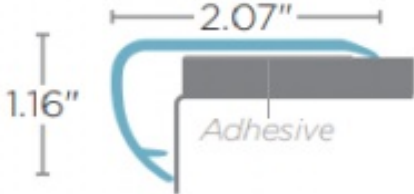

LENGTH: 94"

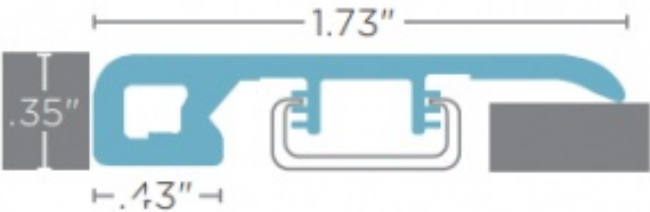

LENGTH: 94"


COLOR	PROD UCT#	BABY THRESH OLD		QUARTER RO UND		REDUCER		STAIRNOSE		T-MOLDING	
		SOE #	MODE L #	SOE #	MODEL #	STOC K/SO E#	MODE L #	SOE #	MODEL #	STOC K/SO E#	MODE L #
Baldwin Oak	13441 75	1524 902	LMTSC 00560	1524 887	LMQSC 00560	13618 73	01C630 0560	OVE RLAP 1361 884	01C880 0560	13618 62	02C550 0560

Hanover Hickory	3627528	3649736	LMTSC07247	3649733	LMQSC07247	3649737	01C6307247	FLUSH 3649735	LX6FS07247	3649734	02C5507247
Arlington Oak	3627529	3649741	LMTSC05149	3649738	LMQSC05149	3649742	01C6305149	FLUSH 3649740	LX6FS05149	3649739	02C5505149
Chatham Stone	1344179	1524906	LMTSC00564	1524891	LMQSC00564	1361877	01C6300564	OVERLAP 1361888	01C8800564	1361866	02C5500564
Hearthside Hickory 3627530		3649746	LMTSC06024	3649743	LMQSC06024	3649747	01C6306024	FLUSH 3649745	LX6FS06024	3649744	02C5506024
Coweta Oak	1329189	1524898	LMTSC00556	1524883	LMQSC00556	1361851	01C6300556	OVERLAP 1361855	01C8800556	1361847	02C5500556
Lanier Hickory	1329191	1524895	LMTSC00553	1524880	LMQSC00553	1361849	01C6300553	OVERLAP 1361853	01C8800553	1361845	02C5500553
Linden Pine	1329193	1524894	LMTSC00552	1524879	LMQSC00552	1361868	01C6300552	OVERLAP 1361879	01C8800552	1361857	02C5500552
Desert Canyon Tile	3627531	3649751	LMTSC05150	3649748	LMQSC05150	3649752	01C6305150	FLUSH 3649750	LX6FS05150	3649749	02C5505150
Monroe Oak	1329192	1524892	LMTSC00550	1524877	LMQSC00550	1361867	01C6300550	OVERLAP 1361878	01C8800550	1361856	02C5500550

Half Moon Stone	3627532	3649756	LMTSC06025	3649753	LMQSC06025	3649757	01C6306025	FLUSH 3649755	LX6FS06025	3649754	02C5506025
Shady Pine	1329195	1524899	LMTSC00557	1524884	LMQSC00557	1361870	01C6300557	OVERLAP 1361881	01C8800557	1361859	02C5500557
Sumter Stone	1344178	1524905	LMTSC00563	1524890	LMQSC00563	1361876	01C6300563	OVERLAP 1361887	01C8800563	1361865	02C5500563
Talbot Oak	1329190	1524893	LMTSC00551	1524878	LMQSC00551	1361848	01C6300551	OVERLAP 1361852	01C8800551	1361844	02C5500551
Tipton Oak	1329188	1524897	LMTSC00555	1524882	LMQSC00555	1361850	01C6300555	OVERLAP 1361854	01C8800555	1361846	02C5500555

LEARN MORE AT [LOWES.COM](https://www.lowes.com)

Documents / Resources

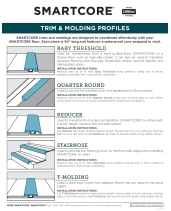	COREtec Smartcore Flooring [pdf] User Guide Smartcore Flooring
---	---