COSTWAY HW56668SL 6 Barriers Delimiting Lanes Separating Code





# **COSTWAY HW56668SL 6 Barriers Delimiting Lanes Separating Code User Manual**

Home » COSTWAY » COSTWAY HW56668SL 6 Barriers Delimiting Lanes Separating Code User Manual



# **Contents**

- 1 COSTWAY HW56668SL 6 Barriers Delimiting Lanes Separating Code
- **2 Product Information**
- **3 Product Usage Instructions**
- **5 POST Assembly Instructions**
- 6 Documents / Resources
  - **6.1 References**



**COSTWAY HW56668SL 6 Barriers Delimiting Lanes Separating Code** 



# **Product Information**

# **Specifications:**

• Product Name: Colonnine Segnapercorso

• Model Numbers: HW59435, HW59436

 Available Regions: Canada, United States, United Kingdom, Spain, Germany, France, Italy, Russia, Japan, Australia

• Website: www.costway.com

# **Product Usage Instructions**

#### **Assembly Instructions:**

- 1. Put c-hook into the slot of the slotted tube.
- 2. The ball top aims at the slot of the slotted tube (post), and press down until ball top is protruded with both side keyhole locked in.
- 3. Place the slotted tube (post) on underneath both sides of the key-hole to revolve until the base of lock lugs is locked in.

#### **Disassembly Instructions:**

- 1. Rotate the slotted tube counterclockwise.
- 2. Pull out upward to disassemble.

### **Additional Information:**


This product is designed to be easy to assemble and disassemble for your convenience. For detailed instructions tailored to your region, refer to the specific language section in the manual provided.

#### FAQ:

- Q: Where can I find more information about product maintenance?
  A: For detailed maintenance instructions and tips, please refer to the maintenance section in the user manual or visit our website for online resources.
- Q: How can I contact customer support for further assistance?
  A: If you require additional assistance or have any questions, please reach out to our customer support team via the contact information provided on our website.

# **POST Assembly Instructions**

- 1. Put c-hook into the slot of the slotted tube.
- 2. The ball top aims at the slot of slotted tube(post), and press down until ball top is protruded with both side keyhole locked in.
- 3. Place slotted tube(post) on underneath both side of the key-hole to revolve until the base of lock lugs is locked in.

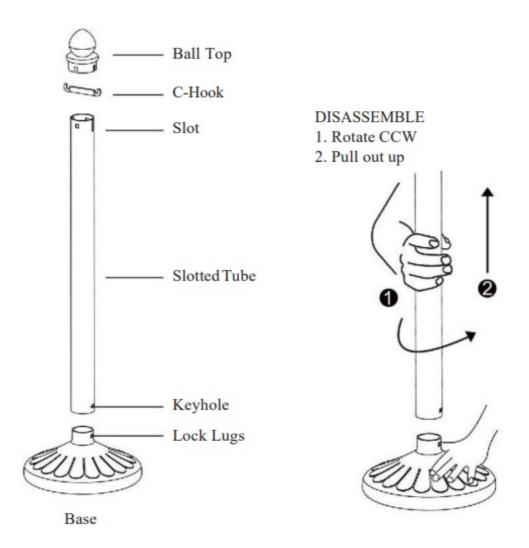

**TIPS:** Your suggestions and comments for COSTWAY are really important to us! We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:





February 24, 2018

Great products so far. Fast delivery, easy setup, and working without any issues. With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!



#### **Documents / Resources**



COSTWAY HW56668SL 6 Barriers Delimiting Lanes Separating Code [pdf] User Manual HW56668SL, HW56668SL 6 Barriers Delimiting Lanes Separating Code, 6 Barriers Delimiting Lanes Separating Code, Delimiting Lanes Separating Code, Lanes Separating Code, Separating Code, Code

#### References

- Costway More Than Just Furniture
- Costway Mehr als einfache Möbel
- Costway Más Que Mobiliario Con Comodidad
- Costway Plus que des Meubles
- Costway Più che semplici mobili
- COSTWAY Umebluj dom po swojemu

# • User Manual

# Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.