

# **CRYSTAL QUEST CQE-CT-00142 Countertop Thunder Reverse Osmosis System User Guide**

Home » CRYSTAL QUEST » CRYSTAL QUEST CQE-CT-00142 Countertop Thunder Reverse Osmosis System User Guide ™





Copyright 2023 Crystal Quest® All rights reserved MADE IN THE USA

#### **Contents**

- 1 INSTALLATION INSTRUCTIONS
- **2 CARE AND OPTIMUM USE**
- **3 TROUBLESHOOTING**
- **4 IMPORTANT INFORMATION**
- **5 CHANGING MEMBRANE**
- **6 QUICK-FITTING**
- **7 ONE-YEAR LIMITED**


**WARRANTY** 

- 8 Documents / Resources
- 9 Related Posts


# **INSTALLATION INSTRUCTIONS**

Remove red cap. Follow the instructions below to install your countertop system.


- 1. Remove the aerator from faucet.
- Determine the need for an adapter.Choose cor rect adapter as needed.

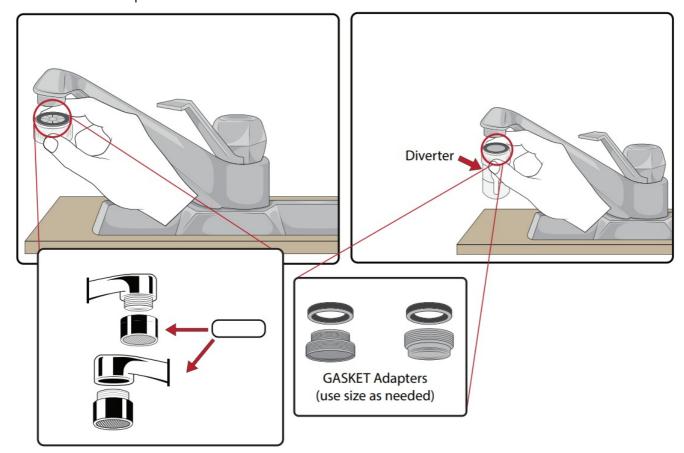


3. Attach the diverter to the faucet and turn until tight.

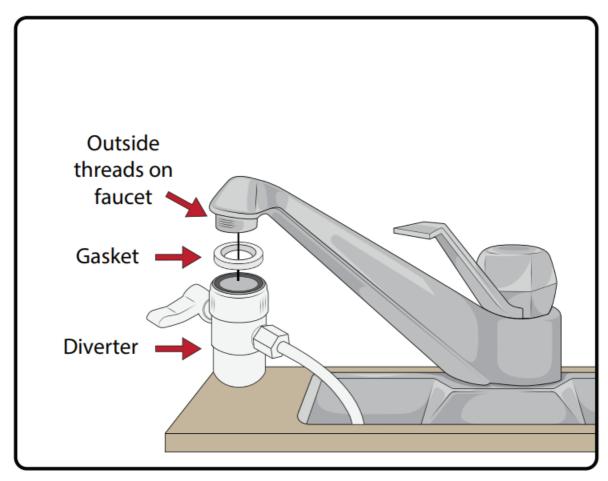

4. Use the la rge clamp to tighten unit hose to the faucet.

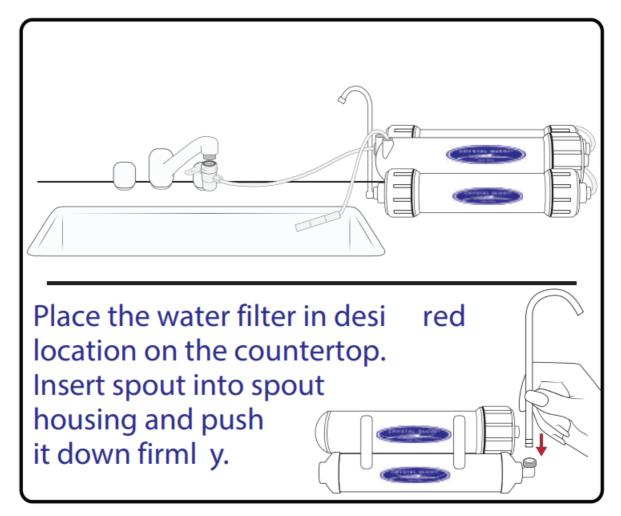

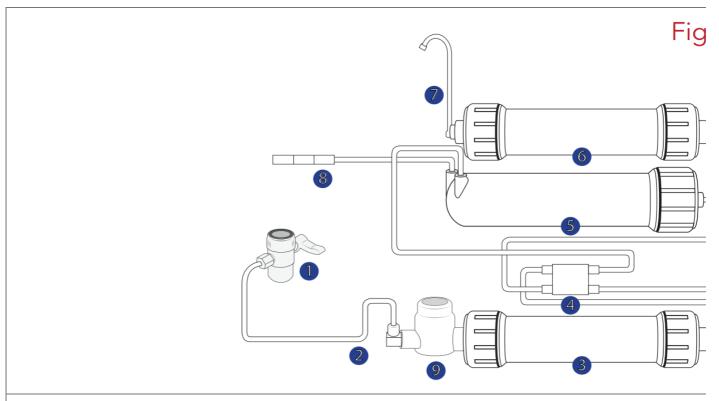

Countertop Thunder® RO System

- 1-Diverter
- 2-Tubing
- 3-Pre-treatment cartridge (activated cartridge)
- 4-Auto shut-off valve
- 5-Membrane
- 6-Post-treatment cartridge
- 7-Spout
- 8-Drain line/flow restrictor
- 9-Pre-filter (optional)

OPERATING SPECIFICATIONS:	
Pressure Range:	45 psi and up
Temperate Range:	40°-85° F (4.4-29.4°C)
Optimum Service Flow:	0.30 gpm at 60 psi

# **CARE AND OPTIMUM USE**

- 1. Use COLD water only. Do not use on hot water. This may damage the cartridges.
- 2. The contaminants or other substances removed or reduced by this water filter are not necessarily in all users' area.
- 3. Soak the diverter in a vinegar and water solution once a month. This will clean deposits that form from feed water and help prevent corrosion of internal diverter mechanisms


# **TROUBLESHOOTING**

1. Low water pressure or no water flow. Very low water temperatures may cause water flow through membrane to slow or stop. Wait for temperature to rise.

- 2. High levels of hardness in feed water. A crystallized layer may form around membrane in feed water with high levels of hardness, causing water to flow improperly.
  - Soak membrane invinegar and water solution for 2 to 3 hours to clean membrane. Rinse thoroughly before using.
- 3. Exhausted filter cartridges. Exhausted cartridges may clog. If steps above do not bring results, filters should be changed.

#### IMPORTANT INFORMATION

Your Countertop Thunder™ Reverse Osmosis Water Filter system cartridges must be replaced at regular intervals to maintain proper performance.

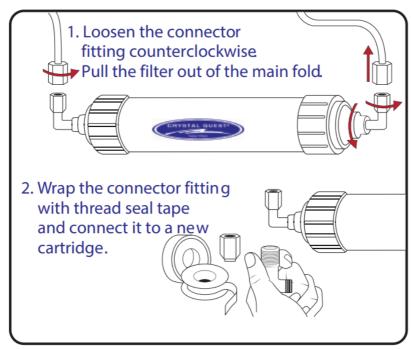


- The filter cartridges have a limited service life.\* Use only factory approved cartridges.
- Changes in taste, odor, and flow of the water being filtered indicate that cartridges should be replaced.
- Do not use non-Crystal Quest® replacement cartridges.
- Do not use non-Crystal Quest® parts or modify/tamper with unit.

#### **CHANGING MEMBRANE**

<sup>\*</sup>Life of the cartridge varies with water consumption and water condition


Loosen the connector fitt ing counter clockwise.	Loosen the connector fitting c ounter clockwise.	3. Remove the membran e with a pincer.	4. Insert the membrane fully pushing the spigot o the socket at the fare e housing until completed.


# **PRE-FILTER INSTALLATION**

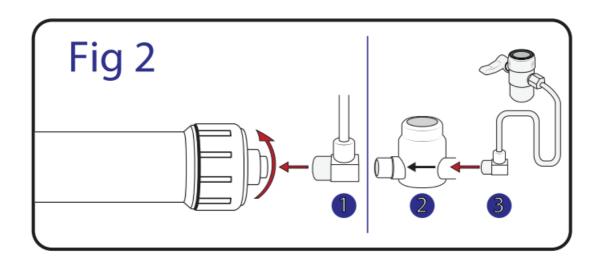


- 1. Remove the water inlet elbow from pre-treatment cartridge by turning counterclockwise (Fig 2).
- 2. Thread male end of pre-filter (Fig 1, #9) into pre-treatment cartridge (Fig 1, #3) and tighten clockwise. You may need to use thread seal tape.
- 3. Thread previous elbow (Fig 2, #3). Thread tape may be needed.
- 4. Turn on water supply and run for 2 minutes prior to first use.

# **QUICK-FITTING**

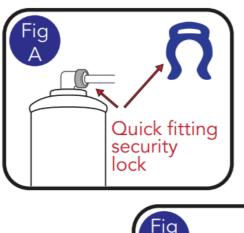

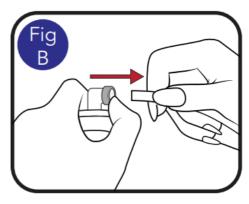

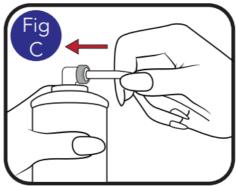

- 1. Remove security lock from quick fitting (Fig A).
- 2. Push and hold collect against body while pulling tube out (Fig B).
- 3. Remove and throw away the used cartridge.
- 4. Insert the new filter cartridge in the clips.
- 5. Push the tubing through collet until it seals firmly at bottom of quick fitting (Fig C).
- 6. Put the quick fitting security lock back.
- 7. Turn on water and check for leaks.
- 8. Flush 4-5 gallons of water through filter before use.

#### **ONE-YEAR LIMITED WARRANTY**

CRYSTAL QUEST® warrants your CRYSTAL QUEST® Thunder™ Countertop Reverse Osmosis Water Filter for one year from the date of purchase against all defects in material

Product design is subject to change without notice.

For further assistance, contact your Crystal Quest dealer or visit us at <a href="www.crystalquest.com">www.crystalquest.com</a>
To view the latest edition of the Countertop Thunder® Reverse Osmosis System Guide, visit <a href="mailto:CrystalQuest.com">CrystalQuest.com</a>
Please note all drawings, pictures, colors and sizes are approximate for illustrative purposes only and may not exactly resemble the end product.





# **Documents / Resources**



CRYSTAL QUEST CQE-CT-00142 Countertop Thunder Reverse Osmosis System [pdf] Use r Guide

CQE-CT-00142 Countertop Thunder Reverse Osmosis System, CQE-CT-00142, Countertop Thunder Reverse Osmosis System, Thunder Reverse Osmosis System, Reverse Osmosis System, Osmosis System

Manuals+,