



275083077587 Custom Dynamics Saddlebag Grommet Instruction Manual

[Home](#) » [Custom Dynamics](#) » 275083077587 Custom Dynamics Saddlebag Grommet Instruction Manual 

Contents

- [1 275083077587 Custom Dynamics Saddlebag Grommet](#)
- [2 Package Contents](#)
- [3 Part Numbers](#)
- [4 Safety First](#)
- [5 Installation](#)
- [6 Specifications](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



275083077587 Custom Dynamics Saddlebag Grommet



We thank you for purchasing the Custom Dynamics® SaddleBag Grommets. Our products utilize the latest technology and high-quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during the installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Package Contents

- Grommet (2)

Part Numbers

- GROMMET-13
- GROMMET-DC
- GROMMET-14

GROMMET-13 FITMENT:

2013-Earlier OEM Harley-Davidson® Saddle Bags with 1/8" Thickness.

GROMMET-14 FITMENT:

2014-Current OEM Harley-Davidson® Saddle Bags with 1/4" Thickness.

GROMMET-DC FITMENT:

2014-Current OEM Harley-Davidson® Saddle Bags with 1/4" Thickness.

ATTENTION

Please read all Information below before Installation

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

Safety First

Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure vehicle is on level surface, secure and cool.

Installation

1. Determine grommet location.
2. Drill 9/16" hole at the determined grommet location.
3. Insert the grommet into the pre-drilled 9/16" hole in Step 2.
4. Pull wire harness through grommet.


Specifications

Grommet-13

- For Hole Diameter (A) 9/16"
- For Material Thickness (B) 1/8"
- ID (C) 1/8"

- Flange Diameter (D) 3/4"
- Overall Height (E) 1/4"

Grommet-14

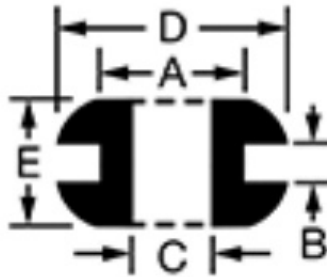

- For Hole Diameter (A) 9/16"
- For Material Thickness (B) 1/4"
- ID (C) 1/8"
- Flange Diameter (D) 3/4"
- Overall Height (E) 3/8"

Grommet-DC

- For Hole Diameter (A) 9/16"
- For Material Thickness (B) 1/4"
- ID (C) 3/16"
- Flange Diameter (D) 3/4"
- Overall Height (E) 3/8"

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Documents / Resources



[Custom Dynamics 275083077587 Custom Dynamics Saddlebag Grommet](#) [pdf] Instruction Manual
 275083077587, Custom Dynamics Saddlebag Grommet, 275083077587 Custom Dynamics Saddlebag Grommet, Dynamics Saddlebag Grommet, Saddlebag Grommet, Grommet