



# Custom Dynamics CD-CVO-MOUNT-B CVO Pate Frame Mount Instruction Manual

[Home](#) » [Custom Dynamics](#) » Custom Dynamics CD-CVO-MOUNT-B CVO Pate Frame Mount Instruction Manual



## Contents

- [1 Custom Dynamics CD-CVO-MOUNT-B CVO Pate Frame Mount](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Installation Instructions](#)
- [5 Package Contents](#)
- [6 Installation](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



## Custom Dynamics CD-CVO-MOUNT-B CVO Pate Frame Mount



## Product Information

The product is a license plate mount kit consisting of two part numbers: CD-CVO-MOUNT-B and CD-CVO-

MOUNT-C. The package contains a Plate Frame Mount and a Rubber Gasket. The mount kit is designed to replace the OEM plate frame mount and provide a new mounting option for license plates on the rear fender of a vehicle. The mount kit has a CVO Mounting Plate that is compatible with license plates and has pre-drilled holes for easy installation.

## Product Usage Instructions

**ATTENTION:** Before installation, remove the license plate from the OEM plate frame mount.

1. Locate the license plate illumination connector cover located on the underside of the rear fender.
2. Remove the nut securing the connector cover to the fender. With the nut removed, pull the cover off of the stud and slide the cover up to remove.
3. Disconnect the 2 pin license plate illumination connector.
4. Remove the OEM plate frame mount from the fender by removing the two mounting bolts.
5. Install the rubber gasket on the back of the CVO Mounting plate.
6. Lay the new CVO Mounting Plate, with the Rubber Gasket installed, onto the fender. Align the mounting holes on the CVO Mounting plate with the holes in the fender.
7. Using the 2 existing mounting bolts, secure the CVO Mounting Plate to the rear fender.
8. Reinstall the connector cover on under side of the rear fender using the existing nut.
9. Gently radius your license plate to match the radius of the CVO Mounting Plate.
10. Using the provided bolts and Threaded Bolt Plates, mount your license plate to the CVO Mounting Plate.

Please read all information carefully before installation. For any questions, call customer service at 1 (800) 382-1388 from Monday to Thursday between 8:30 AM to 5:30 PM or on Friday between 9:30 AM to 5:30 PM EST.

## Installation Instructions

We thank you for purchasing the Custom Dynamics® CVO Plate Frame Mount. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

### Part Numbers:

CD-CVO-MOUNT-B  
CD-CVO-MOUNT-C

## Package Contents

- Plate Frame Mount (1)
- Rubber Gasket (1)



**Fits:** 2014-2022 Harley-Davidson® Street Glide CVO™ (FLHXSE), 2018-2022 Road Glide CVO™ (FLTRXSE) and 2014 Road King CVO™ (FLHRSE) Fit standard 4" x 7" motorcycle license plates.

## ATTENTION

Please read all information below before Installation


**Warning:** Disconnect negative battery cable from the battery; refer to the owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure the negative battery cable away from the positive side of the battery and all other positive voltage sources on vehicle.

**Safety First:** Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure the vehicle is on level surface, secure and cool.

**Important:** This product is designed and intended for use as auxiliary lighting only. It is NOT intended to replace any original equipment lighting installed on the vehicle and should not be used for that purpose. This product must be wired so that it does not interfere with any original equipment lighting.

## Installation

1. Remove the license plate from the OEM plate frame mount.
2. Locate the license plate illumination connector cover located on the underside of the rear fender. Refer to Photo 1.
3. Remove the nut securing the connector cover to the fender. With the nut removed, pull the cover off of the stud and slide the cover up to remove. Refer to Photo 1

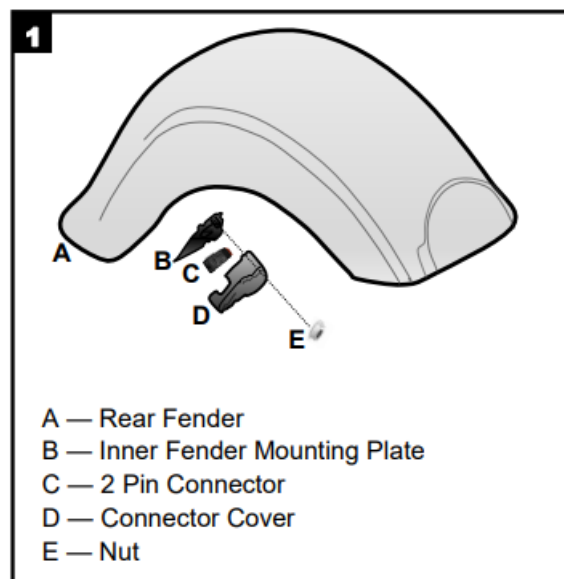


4. Disconnect the 2 pin license plate illumination connector.
5. Remove the OEM plate frame mount from the fender by removing the two mounting bolts. Refer to Photo 2.
6. Install the rubber gasket on the back of the CVO Mounting plate.

7. Lay the new CVO Mounting Plate, with the Rubber Gasket installed, onto the fender. Align the mounting holes on the CVO Mounting plate with the holes in the fender.
8. Using the 2 existing mounting bolts, secure the CVO Mounting Plate to the rear fender.
9. Reinstall the connector cover on under side of the rear fender using the existing nut.
10. Gently radius your license plate to match the radius of the CVO Mounting Plate.
11. Using the provided bolts and Threaded Bolt Plates, mount your license plate to the CVO Mounting Plate.

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

## Documents / Resources

	<p><a href="#">Custom Dynamics CD-CVO-MOUNT-B CVO Pate Frame Mount</a> [pdf] Instruction Manual CD-CVO-MOUNT-B, CD-CVO-MOUNT-C, CD-CVO-MOUNT-B CVO Pate Frame Mount, CD-CVO-MOUNT-B, CVO Pate Frame Mount, Pate Frame Mount, Frame Mount, Mount</p>
---	---

[Manuals+](#).