

[Skip to content](#)

Manuals+

User Manuals Simplified.



Custom Dynamics CD-LP-BCM-R Low Profile BAGZ Saddlebag LED Lights Instruction Manual

[Home](#) » [Custom Dynamics](#) » Custom Dynamics CD-LP-BCM-R Low Profile BAGZ Saddlebag LED Lights Instruction Manual

Contents [hide](#)

[1 Custom Dynamics CD-LP-BCM-R Low Profile BAGZ Saddlebag LED Lights](#)

[2 Documents / Resources](#)

[3 Related Posts](#)



Custom Dynamics CD-LP-BCM-R Low Profile BAGZ Saddlebag LED Lights



Custom Dynamics® Low Profile BAGZ™

Custom Dynamics® Low Profile BAGZ™

Saddlebag LED Lights Installation Instructions

We thank you for purchasing the Custom Dynamics® Low Profile Bagz™ Saddlebag LED Lights. Our products utilize the latest technology and high quality components to ensure the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product, please call Custom Dynamics® at 1(800) 382-1388.

Part Numbers:

CD-LP-BCM-R

CD-LP-BCM-S

Package Contents:

- Low Profile BAGZ™ Saddle Bag LED Light (2)
- BCM Y Harness Adapter w/ Plugs (1)
- 4" Tie Wraps (10)
- Cable Tie Holders (6)

Installation:

1. Test fit the Low Profile BAGZ™ Saddle Bag Lights, on each bag. The light should mount a couple millimeters below the bottom edge of the lid when the lid is closed. Mark location with a grease pencil.
2. Using denatured alcohol, clean the surface mounting area. Allow 1-2 minutes to dry.
3. Remove the red adhesive backing and install the lights on the left and right saddlebags. Press into place making sure the adhesive tape is making contact with the surface.
4. Remove both bags from the bike.
5. Clean the surface area locations for the tie wrap holders with isopropyl denatured alcohol. Remove paper backing from cable tie holders and press into place (see picture below).



Fits: 2014-2022 Harley-Davidson® Street Glide (FLHX), Street Glide Special (FLHXS), Street Glide ST (FLHXST), Street Glide CVO (FLHXSE), Road Glide (FLTRX), Road Glide Special (FLTRXS), Road Glide ST (FLTRXST), Road

Glide CVO™ (FLTRXSE), Road Glide Ultra (FLTRU), Road Glide Limited (FLTRK), Road Glide Limited CVO (FLTRKSE), Ultra Classic (FLHTCU), Ultra Classic Low (FLHTCUL), Ultra Limited (FLHTK), Ultra Limited Low (FLHTKL), Limited CVO™ (FLHTKSE), Road King (FLHR), Road King Special (FLHRXS), 2014 Road King CVO (FLHRSE), 2015-2016 Road Glide Ultra CVO™ (FLTRUSE) and 2019-2022 Electra Glide Standard (FLHT).

Functions as run, brake & turn OR run & turn signal only depending on model .

Refer to page 2 & 3 for diagrams on alternative functions and wiring.

ATTENTION

Disclaimer: Removal of our saddlebag lights after installation, may cause permanent damage to the finished surface area of the saddlebag.

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

Safety First: Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure vehicle is on level surface, secure and cool.

Important: This product is designed and intended for use as auxiliary lighting only. It is NOT intended to replace any original equipment lighting installed on the vehicle and should not be used for that purpose. This product must be wired so that it does not interfere with any original equipment lighting.

Important: Ambient install temperature must be 60 degrees F or higher. Allow 24 hours for tape to cure before washing or prolonged use of vehicle.

6. Route wires from bag light to each tie wrap holder location and secure with closed tie wraps.
7. Remove seat from bike and locate rear main wire harness.
8. Plug BCM Y harness adapter into rear wiring harness.
9. Route the wires on the harness adapter out from under the seat and towards bags.
10. Reinstall saddle bags. Connect 3 pin plugs from bag lights to Y adapter making female with purple wire plugs in male with purple wire, and female with brown wire plug into male with brown wire. (See different configurations on page 2)
11. Secure wires with the included tie wraps, make sure wiring will not come in contact with moving parts or in an area with high heat. Also take care that wires will not get pinched or frayed then reinstall seat.
12. Perform a BCM sync by turning key on, turn 4 way hazards on, turn key off. Allow hazards to run for 3-4 minutes. Turn Key on, Turn Hazards off, Turn Key off.
13. Test operation of running, brake and turn signal lights.

BAGZ™ come with plug and play weatherproof quick disconnect to make future removal of saddlebags quick and easy (see pictures below).




Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Run-Brake Modification

For 2014 CVO™ Road King, 2015-2021 CVO™ Street Glide, 2018-2022 CVO™ Road Glide, 2014-2022 Road King® Standard, 2014-2015 Limited CVO™ & 2015 Road Glide Ultra CVO™ 2022 Road Glide ST, 2022 Street Glide ST.

*Purple and Brown Wires going from the 3 Pin Connectors to the Y Harness

must be cut and moved from the Purple and Brown to the Red Connections can easily be made using Posi-Tap™ connectors (Sold Separately)

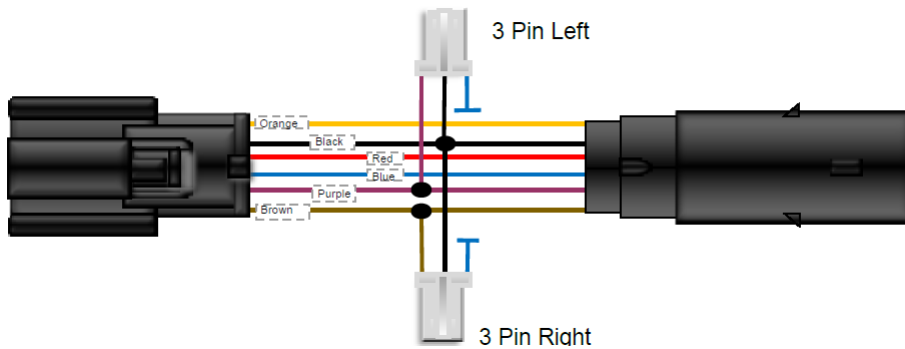


Run-Brake-Turn Modification

For 2014-2022 Road King® Standard, 2014-2015 Limited CVO™ & 2015 Road Glide Ultra CVO™ 2014 CVO™ Road King, 2022 Road Glide ST, 2022 Street Glide ST.

Plug-N-Play with SMART Triple Play® accessory plugs

*SMART Triple Play® with accessory plugs required. The provided BCM Y harness **will not** be used. The two 3 pin connectors that extend from the output side of the Smart Triple Play® module allow for plug and play installation. Simply plug in the left side (purple) and right side (brown) female connectors from the Smart Triple Play® to the corresponding male connectors on the product.

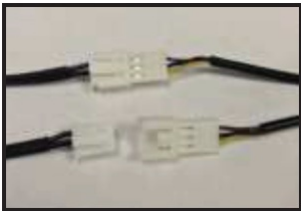


Connect here.

SMART Triple Play® without accessory plugs

*SMART Triple Play® without accessory plugs required. On the BCM Y Harness Adapter, the Blue

wires going to both three pin connectors must be cut and capped off. BCM Y Harness Adapter must be installed on output side of SMART Triple Play®

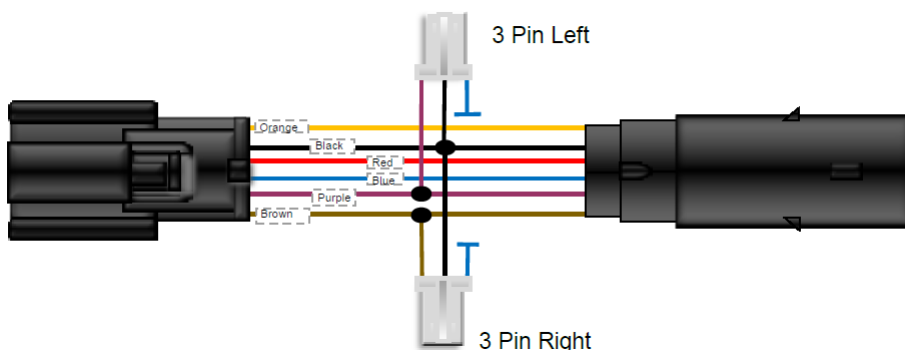

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Run-Brake-Turn modification with GEN-SMART-TPU-14CVO


2014 CVO™ Road King, 2015-2022 CVO™ Street Glide & 2018-2022 CVO™ Road Glide

NOTE 1:

Cut and remove the 3 pin plug from each LED BAGZ™ light to expose the black, yellow, and brown (right side) or purple (left side) wires. Cap off the yellow wire from each BAGZ™ light. Connect the pigtail output wires from the Smart Triple Play® using the supplied Posi-Lock™ connectors to the exposed black and brown (right side) or (left side) purple wires on the Custom Dynamics® BAGZ™ LEDs.

NOTE 2:

Cut the license plate light harness and connect the Blue and Black wires with the Posi-Lock™ installed on the Smart Triple Play® to side of the license plate harness going to the license plate light. Cap off the other side of the license plate harness wires with heat shrink and tuck it into factory conduit.

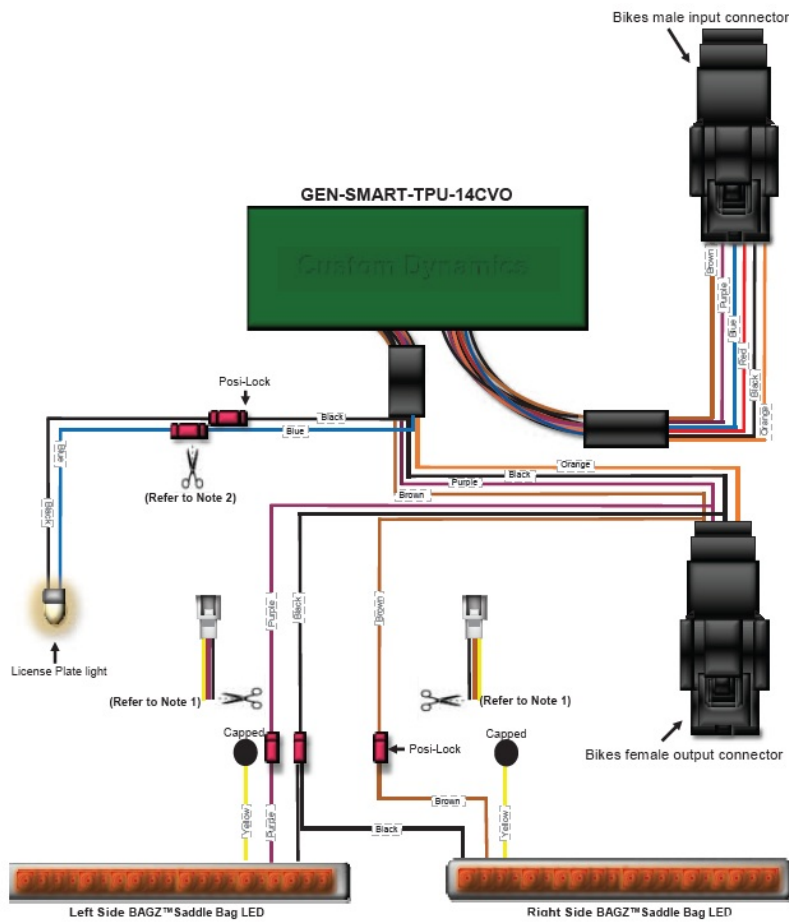

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Documents / Resources



[Custom Dynamics CD-LP-BCM-R Low Profile BAGZ Saddlebag LED Lights](#) [pdf] Instruction Manual

CD-LP-BCM-R, CD-LP-BCM-S, CD-LP-BCM-R Low Profile BAGZ Saddlebag LED Lights, Low Profile BAGZ Saddlebag LED Lights, BAGZ Saddlebag LED Lights, Saddlebag LED Lights, LED Lights

Manuals+

- [home](#)
- [privacy](#)