



Custom Dynamics Plug and Play LED Plugz Instruction Manual

[Home](#) » [Custom Dynamics](#) » Custom Dynamics Plug and Play LED Plugz Instruction Manual 

Contents

- [1 Custom Dynamics Plug and Play LED Plugz](#)
- [2 Package Includes:](#)
- [3 Installation:](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)



Custom Dynamics Plug and Play LED Plugz



We thank you for purchasing the Custom Dynamics® Plug and Play LED Plugz™! Our products utilize the latest technology and high quality components to ensure you the brightest, most reliable LED's on the market. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at **1(800) 382-1388**.

Part Number:

CD-PLUG-RB CD-PLUG-RC
CD-PLUG-SB CD-PLUG-SC

Package Includes:

- Plug and Play LED Plugz™ (pair)
- 4" Wire Ties (8)

Fitment with Optional Adapter (Sold Separately):

- PR-MPR-HD Adapter: 2006-2009 Street Glide & Road Glide Custom
- PR-MPR-SS6 Adapter: 2010-2013 Street Glide®, 2010-2013 Road Glide® Custom
- PR-MPR-BCM Adapter: 2014-2021 Street Glide (FLHX), Street Glide Special (FLHXS), Road Glide (FLTRX), Road Glide Special (FLTRXS), Road King Special (FLHRS),

ATTENTION

Please read all Information below before Installation.

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

Safety First: Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure vehicle is on level surface, secure and cool.


Important: This product is designed and intended for use as auxiliary lighting only. It is NOT intended to replace

any original equipment lighting installed on the vehicle and should not be used for that purpose. This product must be wired so that it does not interfere with any original equipment lighting.



Installation:

1. Remove the saddlebags to allow access to the inside fascia panel.
2. Remove or relocate the factory antenna.
3. Remove the stock rubber plugs and/or grommets from the antenna port holes in the fascia panel (See Figures 1&2)

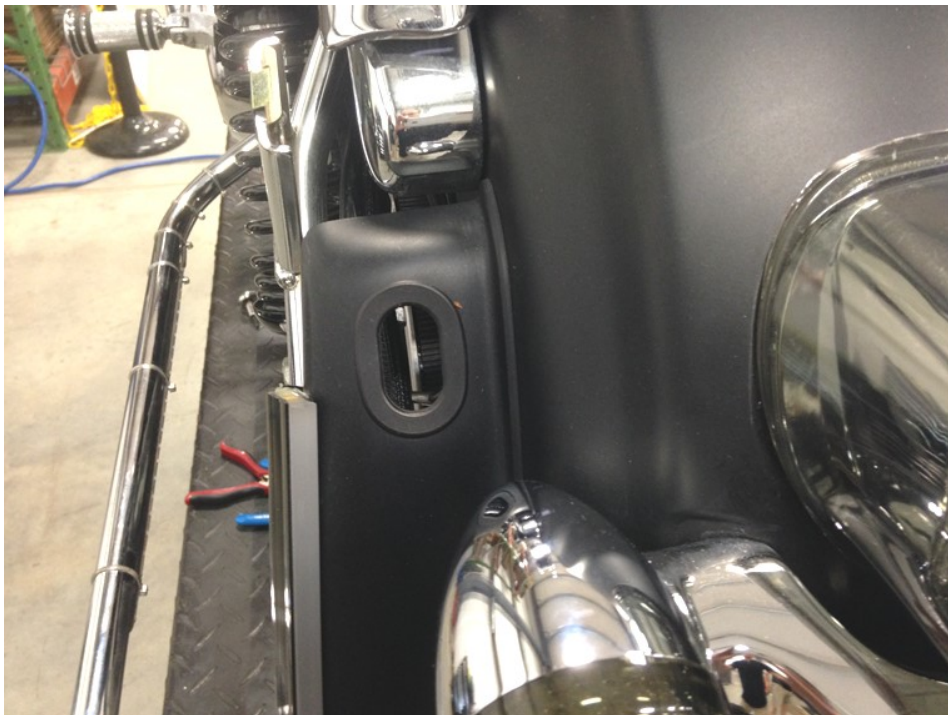



4. Take the LED Plugz™ wires and feed through the holes first, followed by the LEDs, push the units firmly into place.
5. Route wiring harness to the PR-MPR Adapter harness (Sold Separately). Refer to the PR-MPR instructions for location. Secure the wiring harness with the provided tie wraps to prevent it from being pinched, cut, frayed, or coming in contact with any moving or high heat parts.
6. Reinstall the saddlebags.

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Documents / Resources



[Custom Dynamics Plug and Play LED Plugz](#) [pdf] Instruction Manual
Custom Dynamics, Plug and Play, ED Plugz