



Cypress Hills AXCRGREY06 Greystone Rustic Table User Manual

[Home](#) » [Cypress Hills](#) » Cypress Hills AXCRGREY06 Greystone Rustic Table User Manual 

Contents

- [1 Cypress Hills AXCRGREY06 Greystone Rustic Table](#)
- [2 SAFETY INFORMATION](#)
- [3 CARE and MAINTENANCE](#)
- [4 PRE-ASSEMBLY INFORMATION](#)
- [5 ASSEMBLY](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)



Cypress Hills AXCRGREY06 Greystone Rustic Table



IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage. May require 2 people for ease of assembly.

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

CARE and MAINTENANCE

Perhaps the greatest environmental damage to wood furniture comes from wide swings in relative humidity (RH) in our homes. Wood absorbs and desorbs water as relative humidity rises and falls, and in doing so it swells and shrinks. Making matters worse, it expands and contracts unequally along different grain directions. As humidity changes, the components of wooden objects are continually pushing and pulling against each other. This pressure often results in parts of furniture no longer fitting together closely or becoming distorted or breaking from their own internal stresses.

The response to relative humidity changes begins with determining the annual average RH for your particular space. Then try to keep the RH in the space where your furniture is as close to that average as possible, generally within about 10% up or down. De-humidify in the summer and humidify in the winter. Be aware that raising the temperature lowers the humidity and vice versa. Thus, modern heating systems, which can drive down interior RH in the winter, almost invariably cause problems for furniture. To counteract their effect, you can either modify the RH by keeping furniture containing

spaces cooler in the winter or most importantly, have a good working humidifier for your home. A humidistat automatically works to balance the humidity in your home so it is constant. Dry indoor air can suck enough moisture from its surroundings to do permanent damage to wood, causing it to crack or split.












Remember, that not all woods are created equal. Two factors that help determine how rapidly a wood will lose moisture are pore size and surface hardness. A piece made from a dense and hard wood will dry less rapidly than pieces made from softer woods. Furniture that is sealed and lacquered will lose moisture more slowly than an unfinished piece while pieces with veneer finishes are not only stronger, but lose moisture more slowly than other finishes.

To help protect your wood furniture, take these steps:




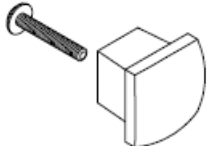

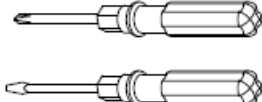
- Use a humidifier, preferably one with an automatic control system that can sense the humidity level and adjust itself accordingly. Don't over-humidify; that can damage wood by causing it to expand and contract.
- Keep furniture out of direct sunlight, which can cause it to dry out, crack and warp.
- If you can avoid it, don't put furniture near heating vents. If you must, keep the piece 3 to 4 inches away from the wall, giving the heat and air space to circulate.
- Dust with soft dry cloth.
- Do not use liquid or aerosol products.
- To avoid marking, do not place rubber on surface (foot, pads, etc.)
- For soil build-up wipe with damp cloth & dry.
- Do not use abrasive cleaners.

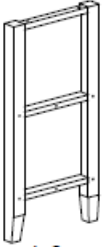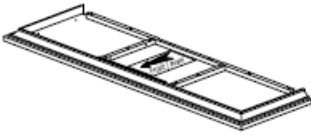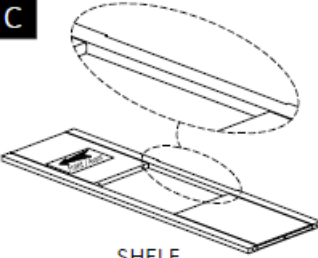PRE-ASSEMBLY INFORMATION

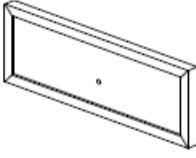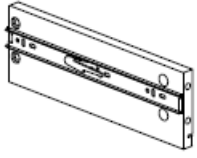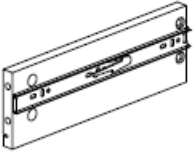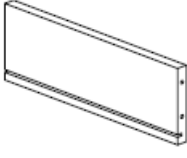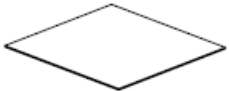
PART DESCRIPTION

A  SIDE (L&R Same) QTY 2	B  TOP QTY 1	C  SHELF QTY 2
DL  LEFT DIVIDER QTY 1	DR  RIGHT DIVIDER QTY 1	E  DRAWER FRONT QTY 4
FL  LEFT DRAWER SIDE QTY 4	FR  RIGHT DRAWER SIDE QTY 4	G  DRAWER BACK QTY 4
H  DRAWER BOTTOM QTY 4	I  BACK PANEL QTY 1	

HARDWARE DESCRIPTION


<p>1</p>  <p>ALLEN KEY SCREW M6 X 30mm QTY 32</p>	<p>2</p>  <p>ALLEN KEY QTY 1</p>	<p>3</p>  <p>CAM LOCK PIN CAM LOCK QTY 28 SETS</p>
<p>4</p>  <p>HANDLE M4 X 25mm QTY 4 SETS</p>	<p>5</p>  <p>PHILLIPS SCREW ROUND HEAD M4 X 15mm QTY 10</p>	 <p>Required - Flathead screwdriver Phillips screwdriver Not Included</p>

COMPONENTS-KEY DIAGRAM MODEL # AXCRGREY06

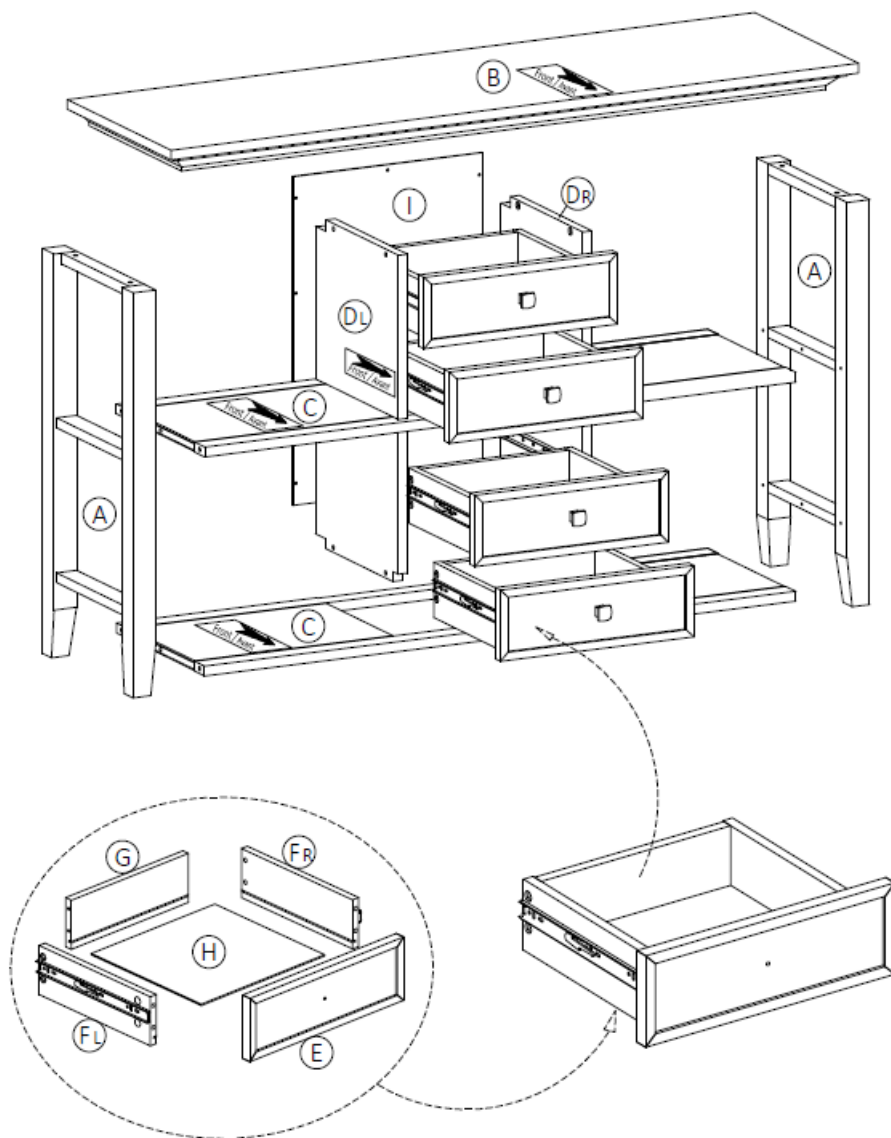


ASSEMBLY

STEP-1

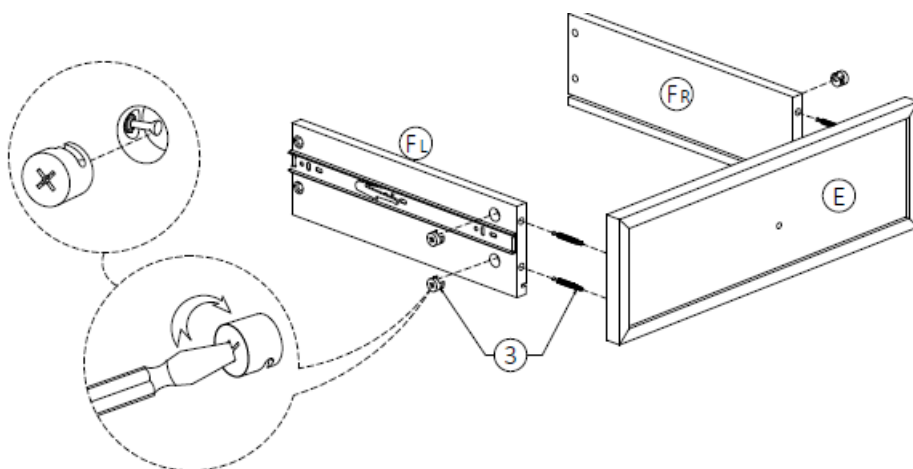


1. Attach four Cam Lock Pins 3 to back of Drawer Front E .
2. Align Cam Lock Pins with pre-drilled holes and attach Drawer Sides FL , FR .
3. Insert two Cam Locks 3 into pre-drilled holes on each Drawer Side FL , FR .
4. Use flathead screwdriver to secure Cam Locks.

STEP-2

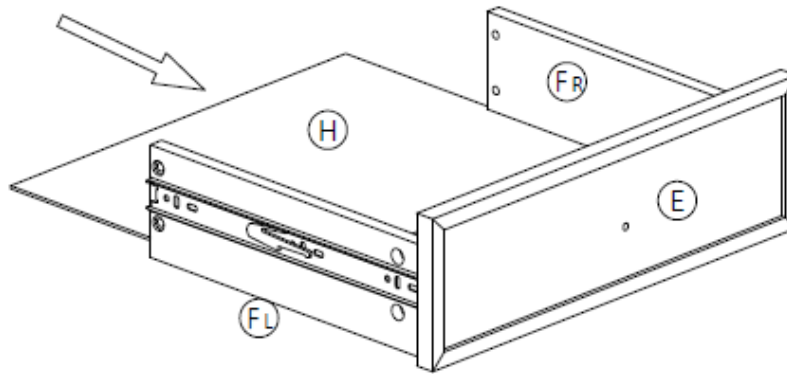


1. Slide Drawer Bottom H firmly into slots on Drawer Sides FL , FR and Drawer Front E .

STEP-3

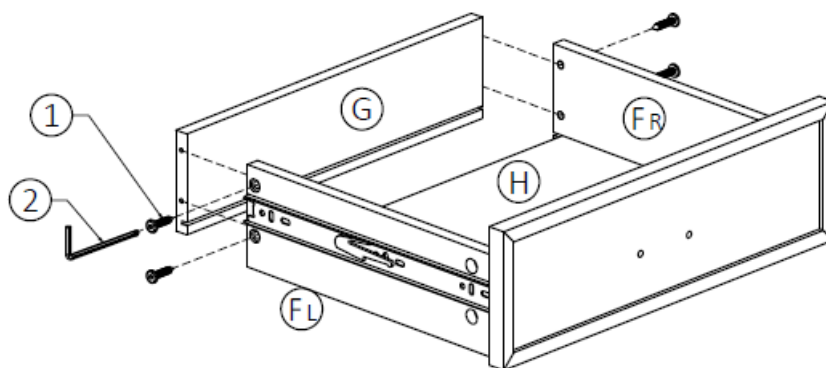

1. Align Drawer Back G with Drawer Bottom H and press firmly into slot.
2. Attach Drawer Back G using two Allen Key Screws 1 through pre-drilled holes on each Side FL , FR .
3. Use Allen Key 2 to tighten Screws. Do not over-tighten.


STEP-4

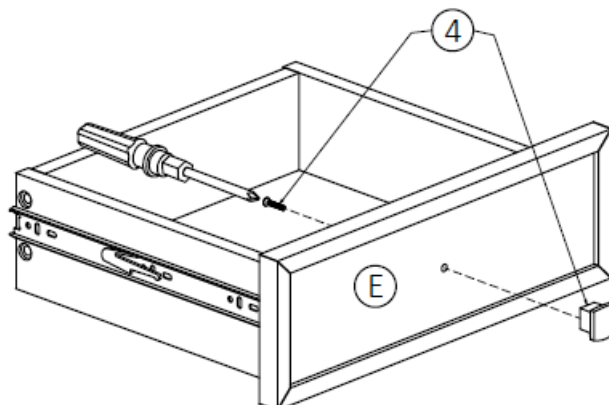


1. Use phillips screwdriver to attach Handle 4 to Drawer Front E .

NOTE: The screwdriver is not included in the hardware pack.

Repeat Step 1 – 4 for other three drawers.

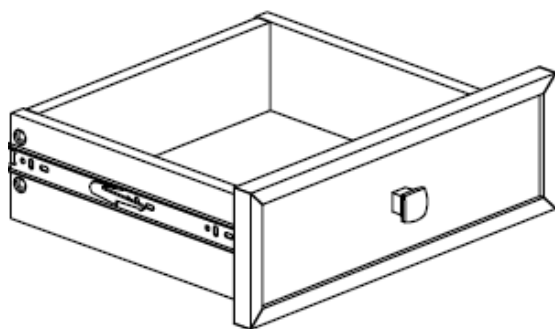


STEP-5

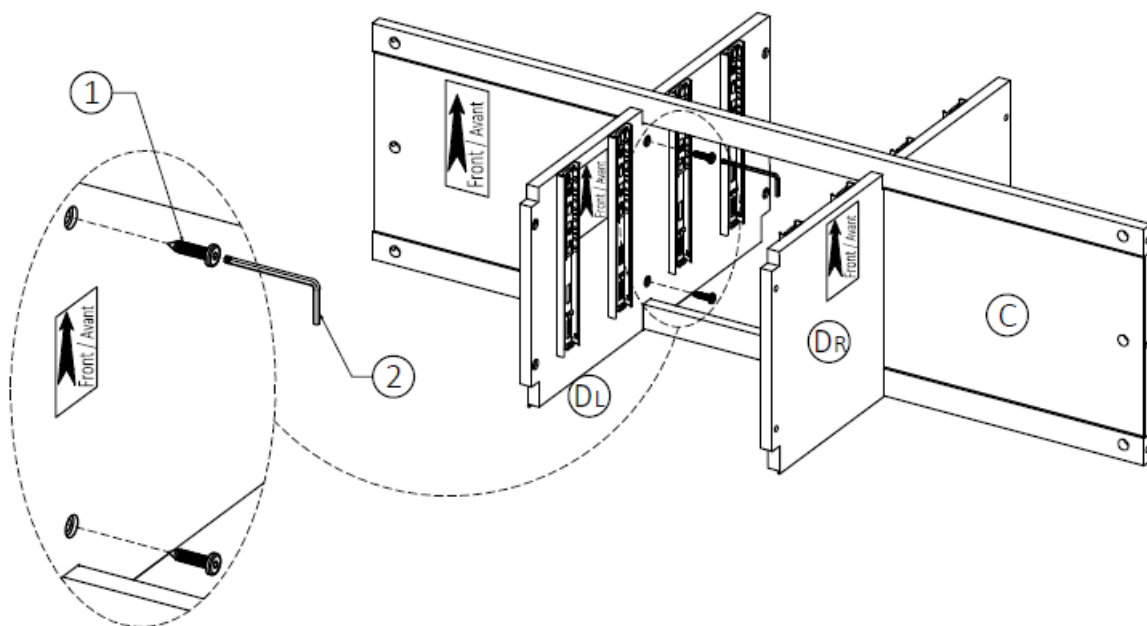


1. Attach Dividers DL , DR to Shelf C using four Allen Key Screws 1 (two screws on each Divider).
2. Use Allen Key 2 to tighten. Do not over-tighten.

STEP-6

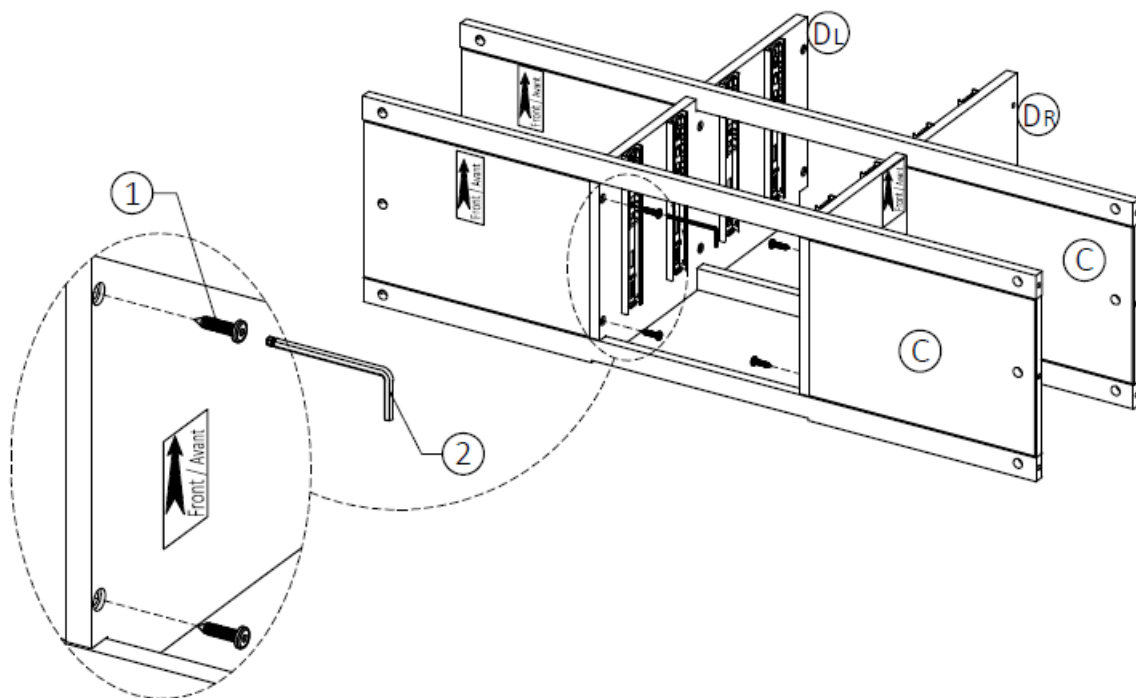


1. Attach other Shelf C to Dividers DL , DR using four Allen Key Screws 1 (two screws on each divider).
2. Use Allen Key 2 to tighten Screws. Do not over-tighten.

STEP-7

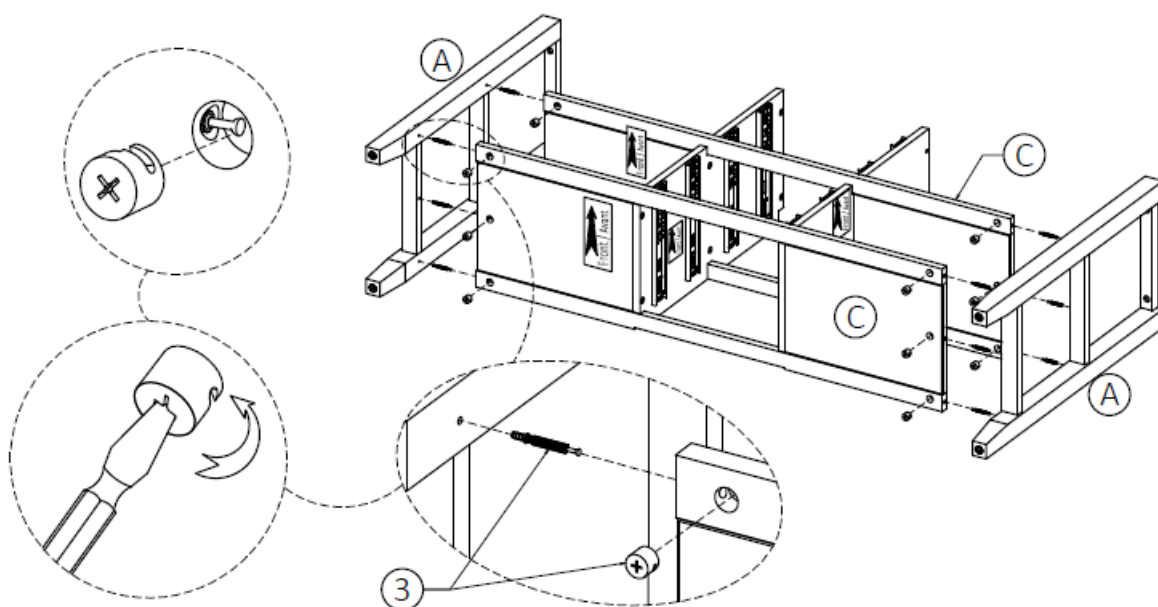


1. Attach six Cam Lock Pins 3 to each Side A .
2. Align Cam Lock Pins with pre-drilled holes and attach Shelves C .
3. Insert six Cam Locks 3 into pre-drilled holes on each Shelf C .
4. Use flathead screwdriver to secure Cam Locks.

STEP-8

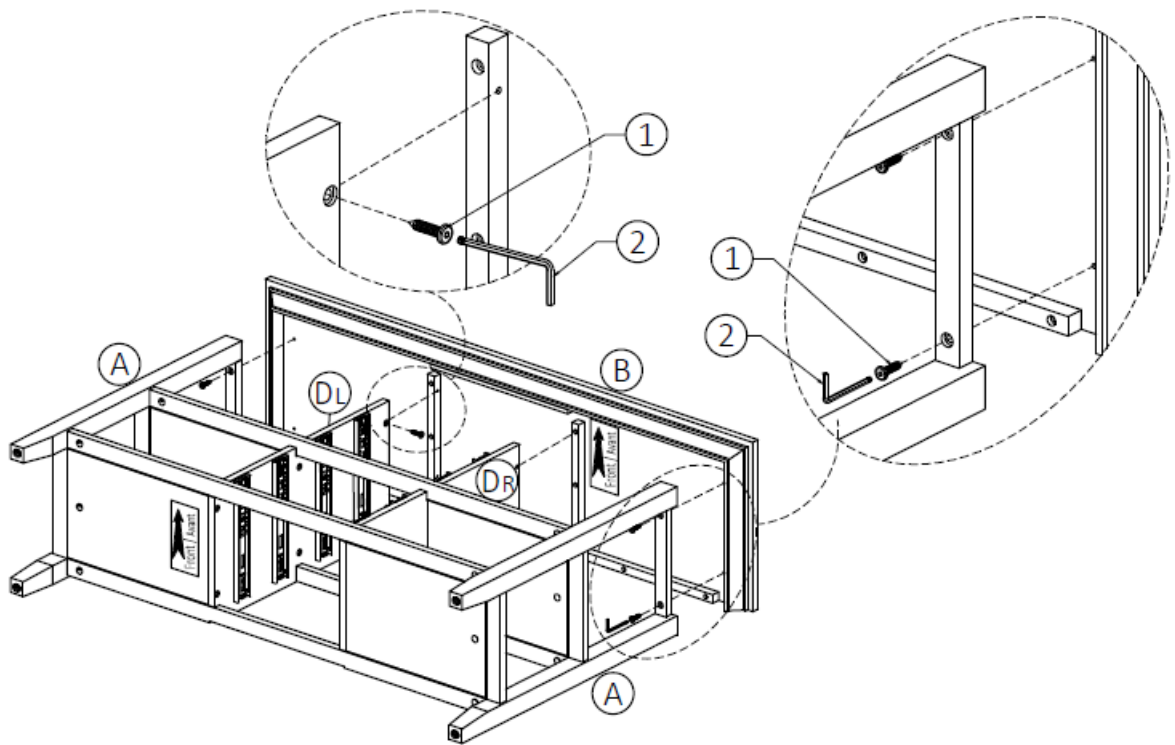


1. Attach Top B to Sides A and Dividers DL , DR using eight Allen Key Screws 1 (two screws on each Side and Divider).
2. Use Allen Key 2 to tighten screws. Do not over-tighten.

STEP-9

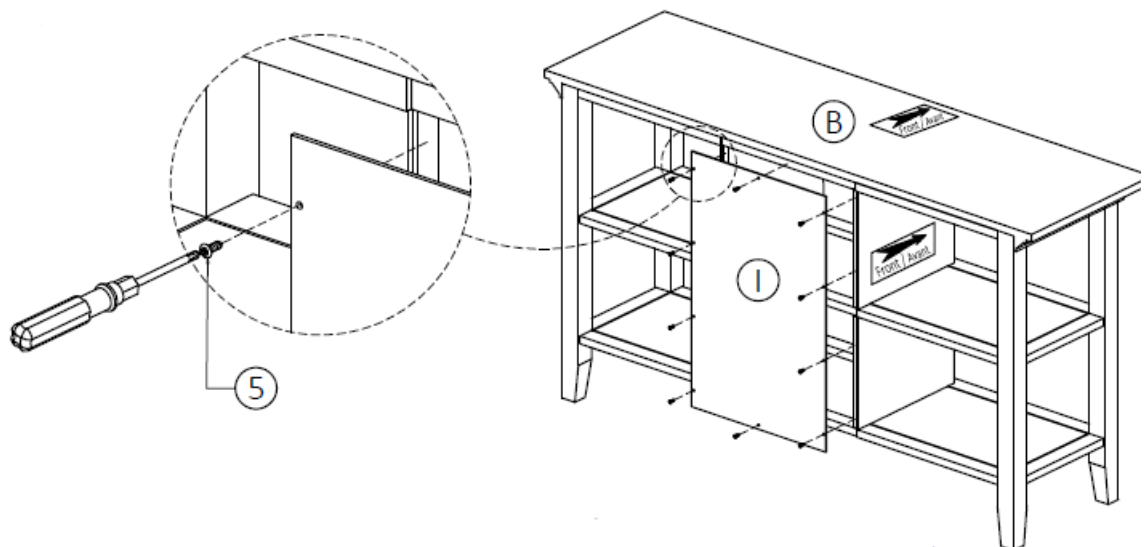

1. Attach Back Panel I to back frame of console table using ten Phillips Screws Round Head 5 through pre-drilled holes.
2. Use Phillips screwdriver to snugly tighten screws.

STEP-10

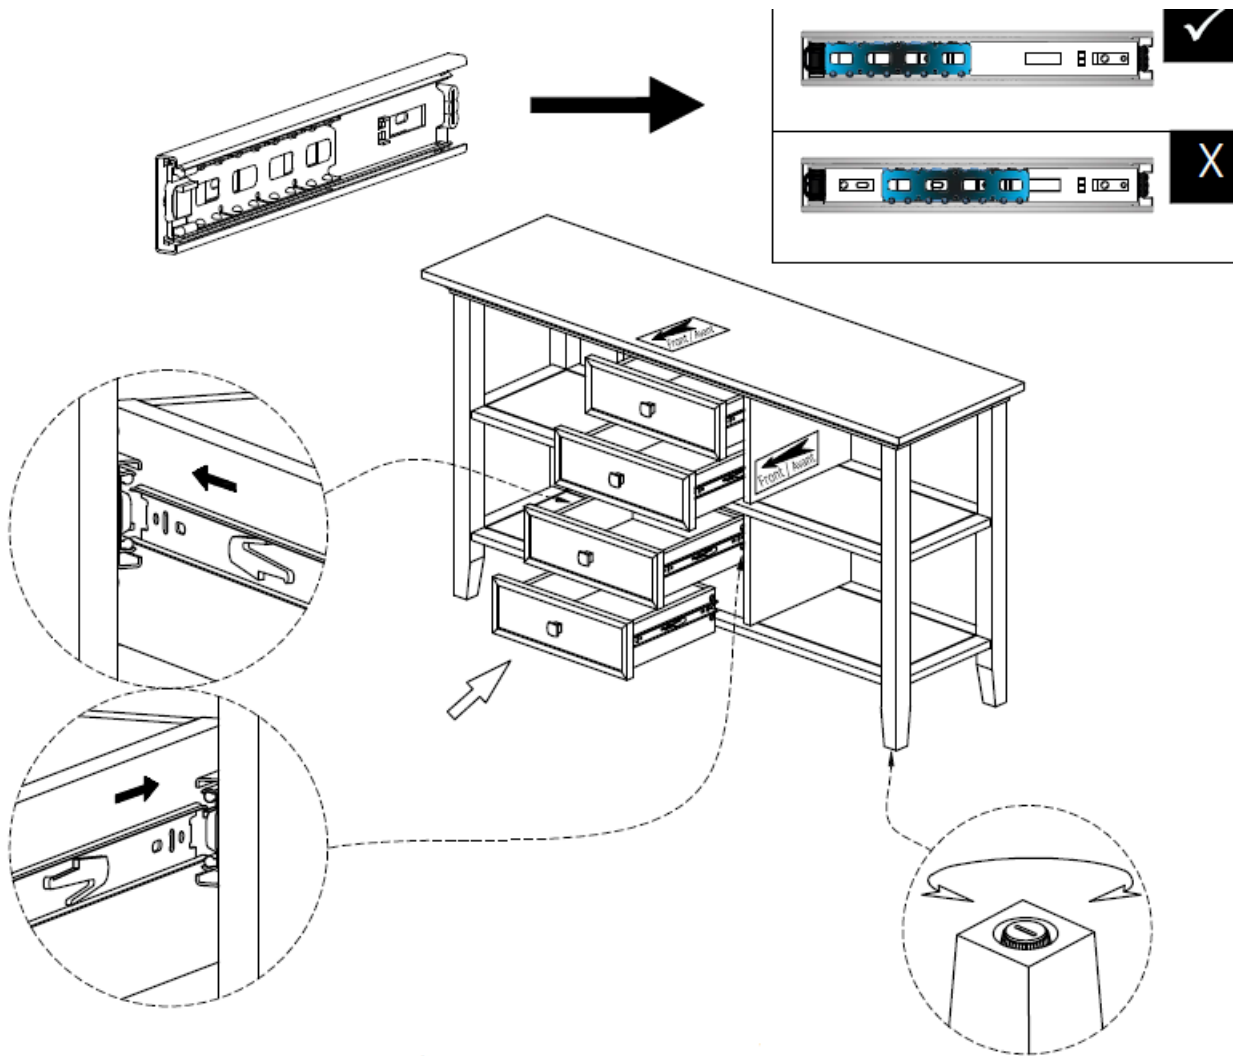


1. Insert assembled drawers into glides on assembled table.

Note: Levelers on bottom of legs can be adjusted if floor is uneven.

CYPRESS HILL

Documents / Resources

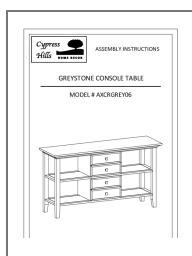

[Cypress Hills AXCRGREY06 Greystone Rustic Table \[pdf\]](#) User Manual
AXCRGREY06, Greystone Rustic Table