



DECKED DF5 In Vehicle Storage Systems Instruction Manual

[Home](#) » [DECKED](#) » DECKED DF5 In Vehicle Storage Systems Instruction Manual 


DECKED DF5 In Vehicle Storage Systems Instruction Manual



Contents

- 1 ASSEMBLY OVERVIEW
- 2 AMMO CAN DRAIN HOLES
- 3 PREP BED
- 4 ASSEMBLY
- 5 GET YOUR DECK ON
- 6 Remember what we said about power tools? GET THE REST OF YOUR DECK ON
- 7 DRAWERS: BRACKETS + WHEELS
- 8 INSTALL: DRAWER HANDLE
- 9 INSTALL: DRAWERS
- 10 INSTALL: THE FUN STUF
- 11 INSTALL: J-HOOKS
- 12 DECKED Products – Limited Lifetime Warranty
- 13 Documents / Resources
- 13.1 References
- 14 Related Posts

ASSEMBLY OVERVIEW

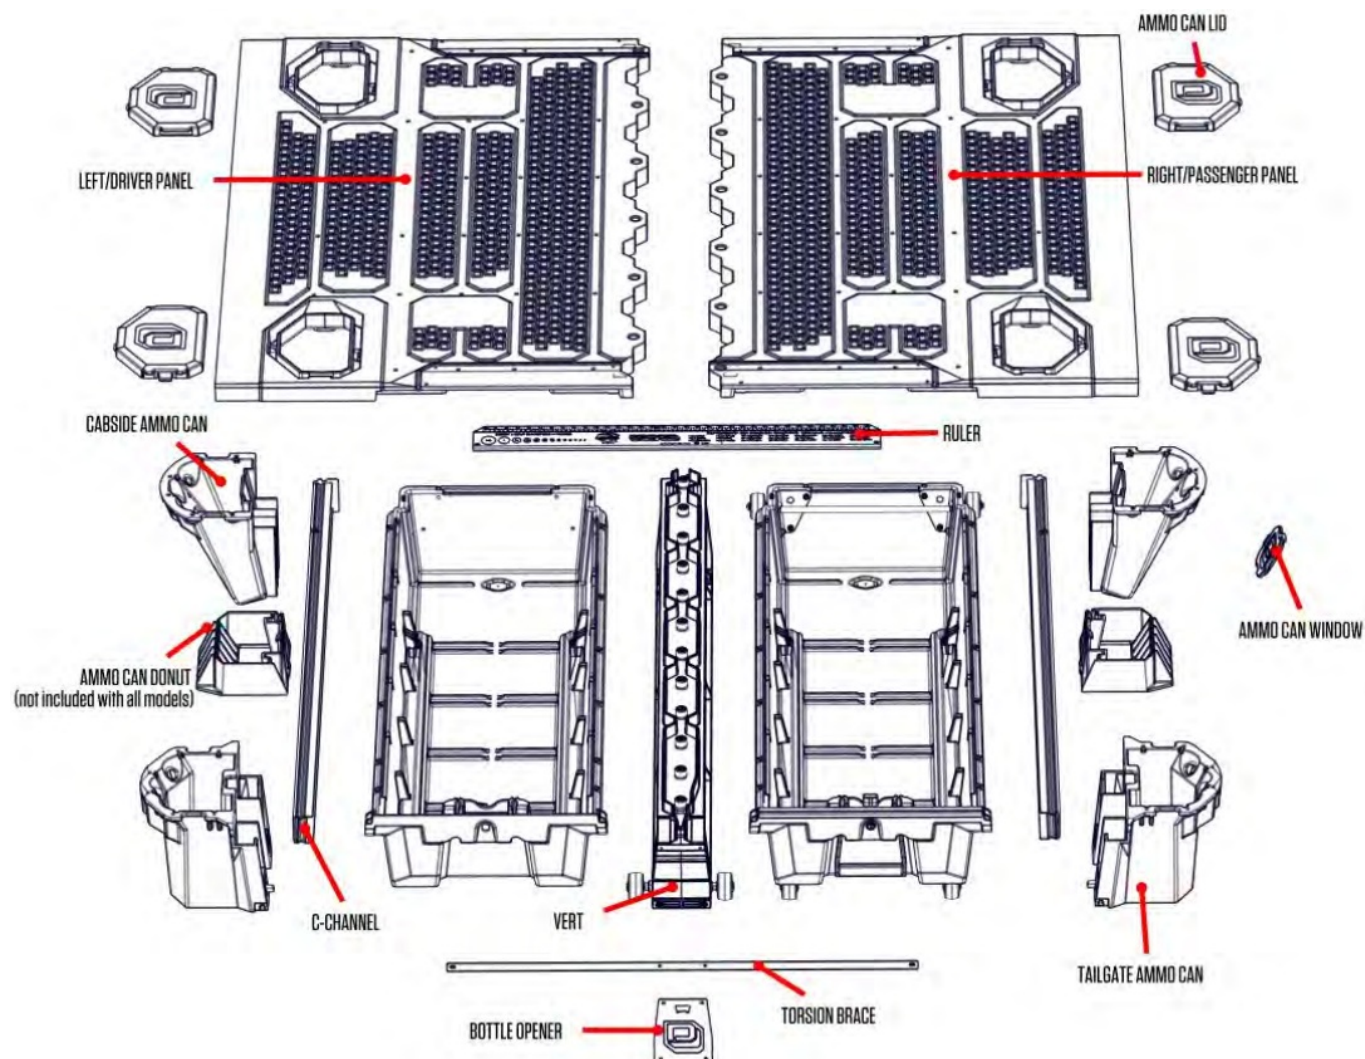

components in the carton




HARDWARE box contents



•

LOOSE HANDLE – 1 (we installed one already)

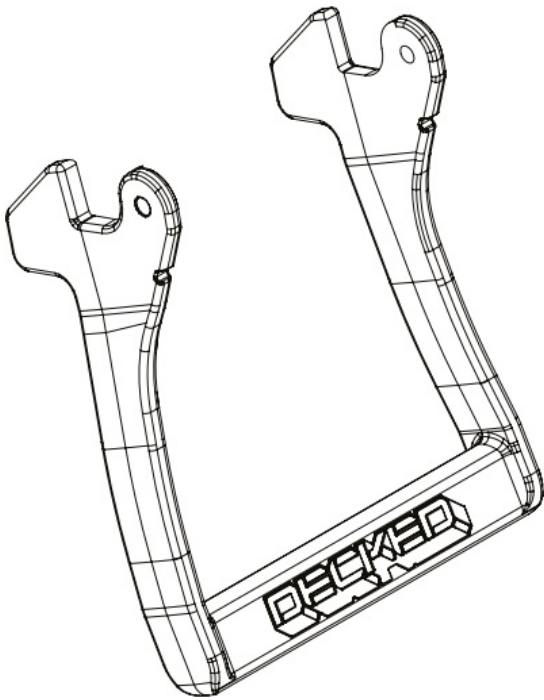

IMPORTANT: If installing a Cargo Glide along with this drawer system, **DO NOT** install the drawer system into your truck yet – **SEE INSTRUCTIONS.**


▼ HEY! TORQUE BOY: READ BEFORE YOU INSTALL THE DECKED DRAWER SYSTEM ▼

- DON'T go rogue on us, please read the instructions.
- Start all bolts with your fingers to avoid cross-threading – you don't want to spin out any inserts.
- DON'T over tighten bolts, get em' hand-tight...or you will spin out the inserts.
- DON'T use power tools.
- If you don't follow directions and do use power tools, please set the clutch at a very low setting.
- Over-torquing or using an impact wrench will spin out the inserts – we're warning you!
- If you blow it, you can screw the inserts back in from the opposite side with a slotted screwdriver.
- If you really blow it, we've included some repair inserts in the PREP-EXTRA bag – install with a 7/32" hex wrench. Call us if you need more.
- You'll need a buddy for exactly two steps.
- Torque ratings are suggestions – tighten all fasteners until snug.
- Prevent expletive-filled language, watch our detailed installation video or give us a call. We're happy to help

AMMO CAN DRAIN HOLES

(TO DRILL OR NOT TO DRILL.)

- Do you use a tonal or shell over your DECKED system?
There is no need to drill holes, unless you leave your tonal open in a deluge.
- Does your DECKED system live outside?
The ammo cans will get water in them. You'll need to drill holes in the ammo cans.
There are two dimples in the bottom of each ammo can. Drill a 1/2" hole at each dimple.
A smaller hole will get clogged. Depending on the system, we may have drilled these for you already.

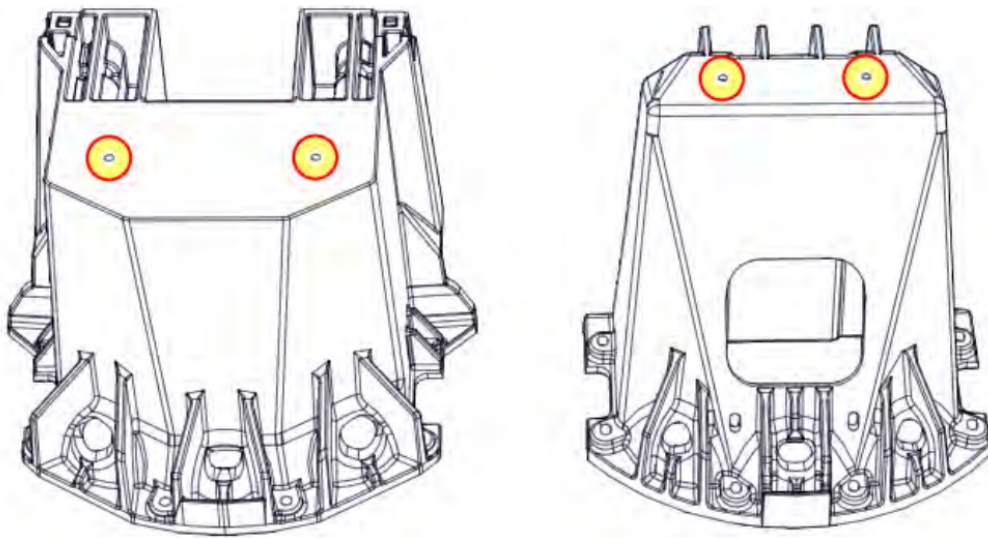


PREP BED

(JUST LIKE YOUR MOMMA TAUGHT YOU.)

Grab your bag: PREP F150L


- Remove the cab side factory tie-downs on both sides of the truck bed (T30 Torn driver).
- **SAVE THE BOLTS. DETAIL A.**
- Aluminum and coated steel don't like each other, so the Aluminum Ford F150's require a shim between both DECKED cab side ammo can brackets and the truck – shown in green below.
- Install the DECKED cab side ammo can brackets on both sides of the truck with the soft rubber shim placed between the bracket and the sidewall.

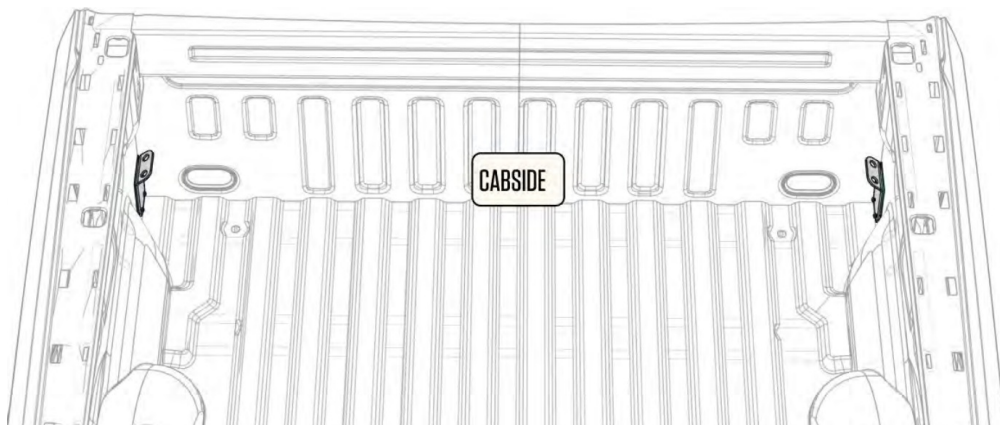

DETAIL A: Remove factory cab side tie down bracket



DETAIL B: Install DECKED cab side bracket

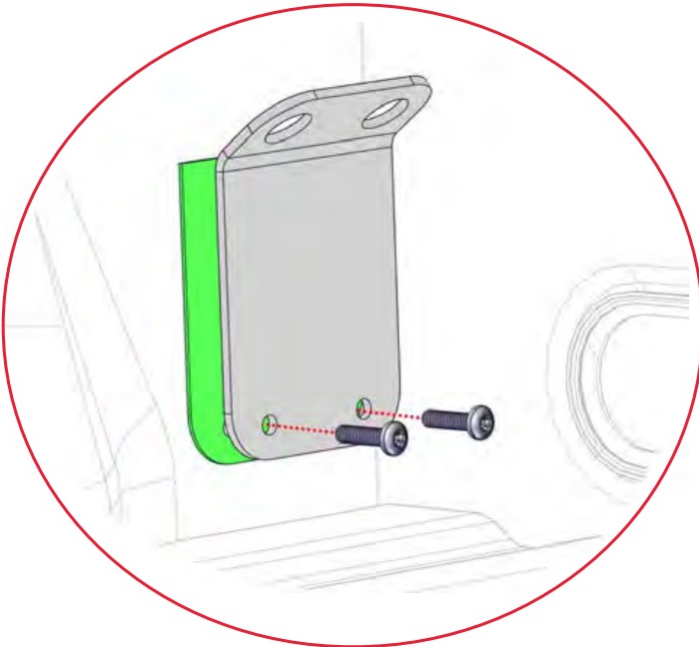


ASSEMBLY

(Now the fun begins!)

LAY IT OUT


1. Snap the cab side ammo can donuts onto the bottom of the cab side ammo cans.
2. Arrange all components on a flat surface as shown, not in your truck.
3. Make sure all wheel axles we installed for you are on the tailgate side. Read this again. Don't mess this up.
4. Place the C-channels on the ledges of the ammo cans.
5. The C-channel end plates must be on the cab side of the assembly.

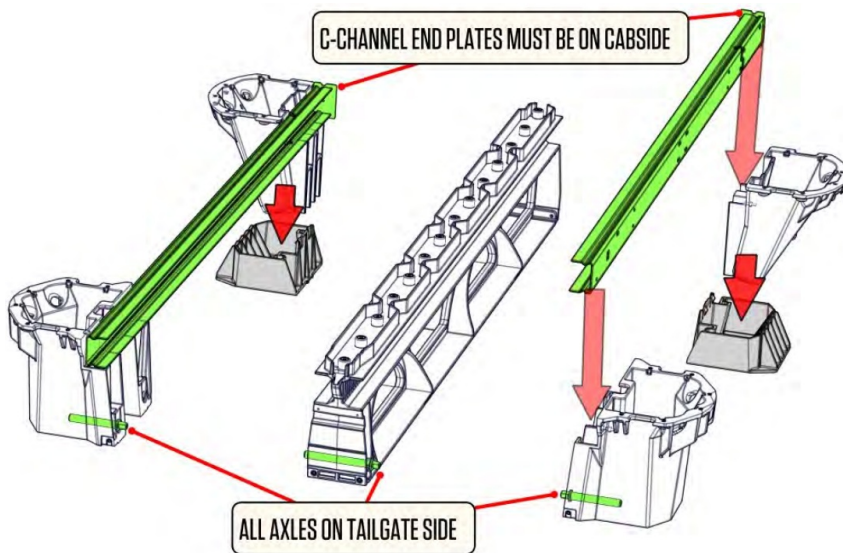

HOOK IT UP:


Grab your bag: C-CHNL

1. Install two (2) 1" black bolts through the INSIDE of the C-channel and into any ammo can. The bolt head must be on the C-channel side.
2. Fasten with a flanged nut on inside of ammo can, but do not tighten.
3. Repeat the same procedure for the other three ammo cans. DON'T TIGHTEN YET.

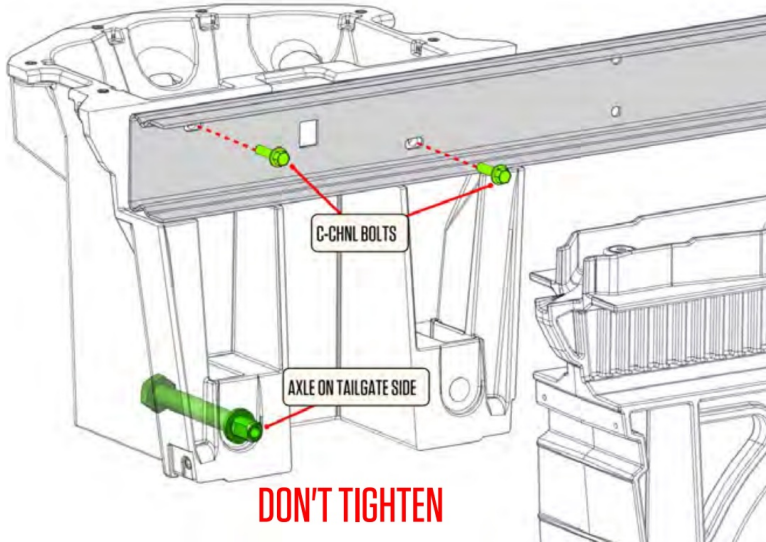

Note: 4 things you could have messed up:

1. C-channel bolt heads are inside ammo cans and not C-channels – wheels ain't gonna roll.
2. Wheel axles on ammo cans and vert aren't all the way at the tailgate side – you won't get full drawer extension.
3. C-channel end caps are on the tailgate side – things ain't gonna fit.
4. You tightened the C-channel to ammo can bolts when I told you not to.

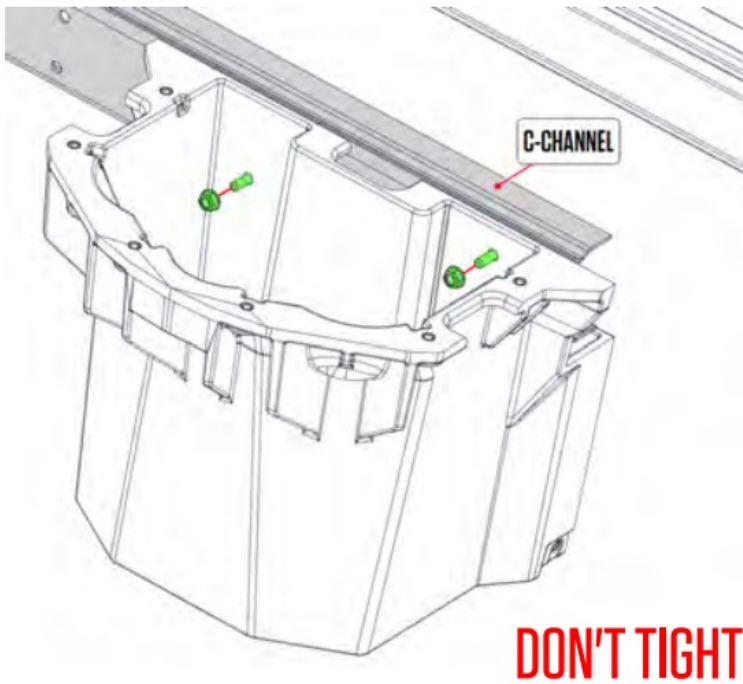


GET YOUR DECK ON

LAY IT ON:

Grab your bag: CSAC, BOLTS L


- Seat the passenger side panel on the vert and the ammo cans. You may have to move the ammo cans around a bit – did you leave the
- channel fasteners loose like I told you to?
- The panel label must be on the TAILGATE side.
- Use six (6) of the CSAC bolts and flanged nuts to install the panel to the cab side ammo can. Tighten just until snug. 27 in-lb. **DETAIL A.**

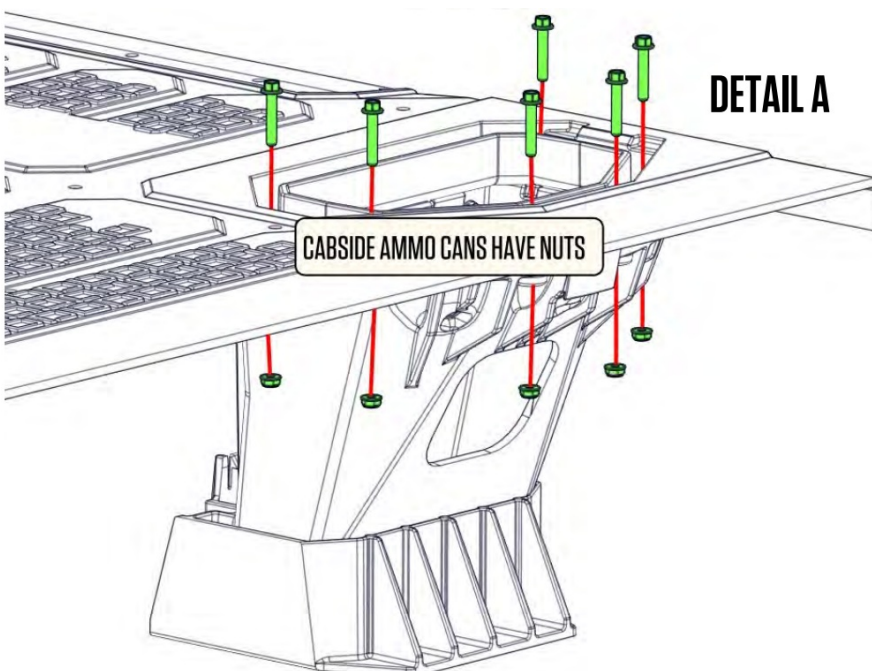

- The BOLTS L bag contains two type of bolts: 12 have blue RIMLEX sealant applied under the baldhead and 14

are plain.


- Use six (6) of the blue RIMLEX-coated BOLTS L bolts to install the panel to the tailgate ammo can – no nuts here. Tighten just until snug. 27 in-lb. **DETAIL B.**

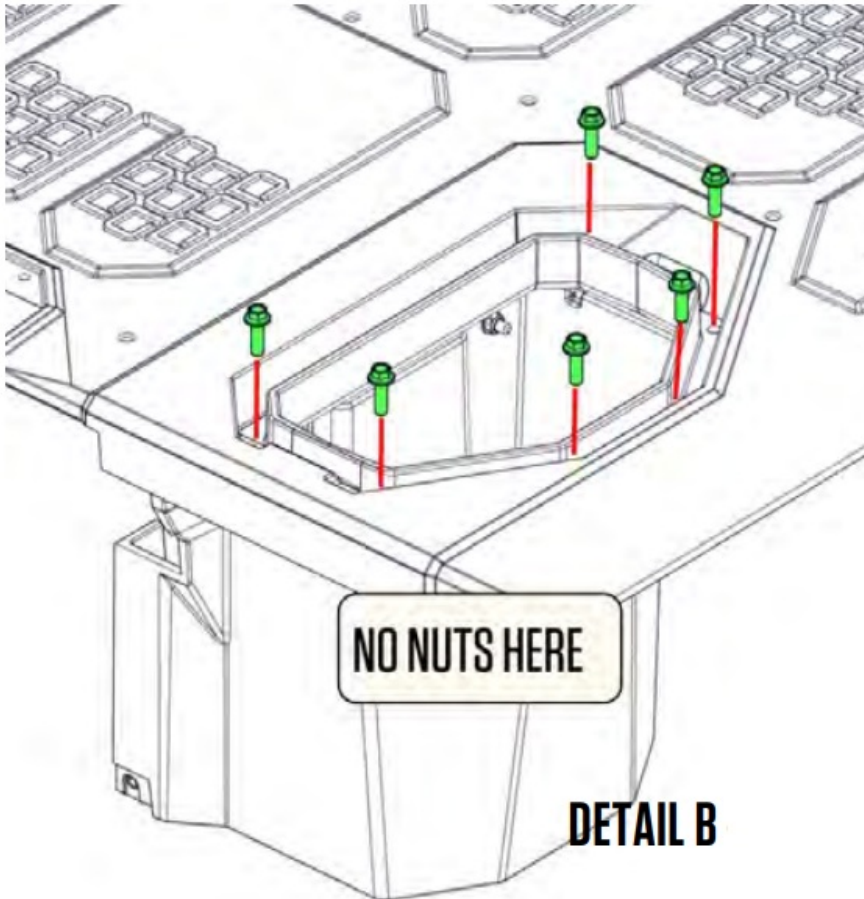

- Use six (6) of the plain BOLTS L bolts to fasten the passenger side panel to the center vert – just until snug. 27 in-lb. **DETAIL C**


Remember what we said about power tools?

DETAIL C - BOLTS L PLAIN

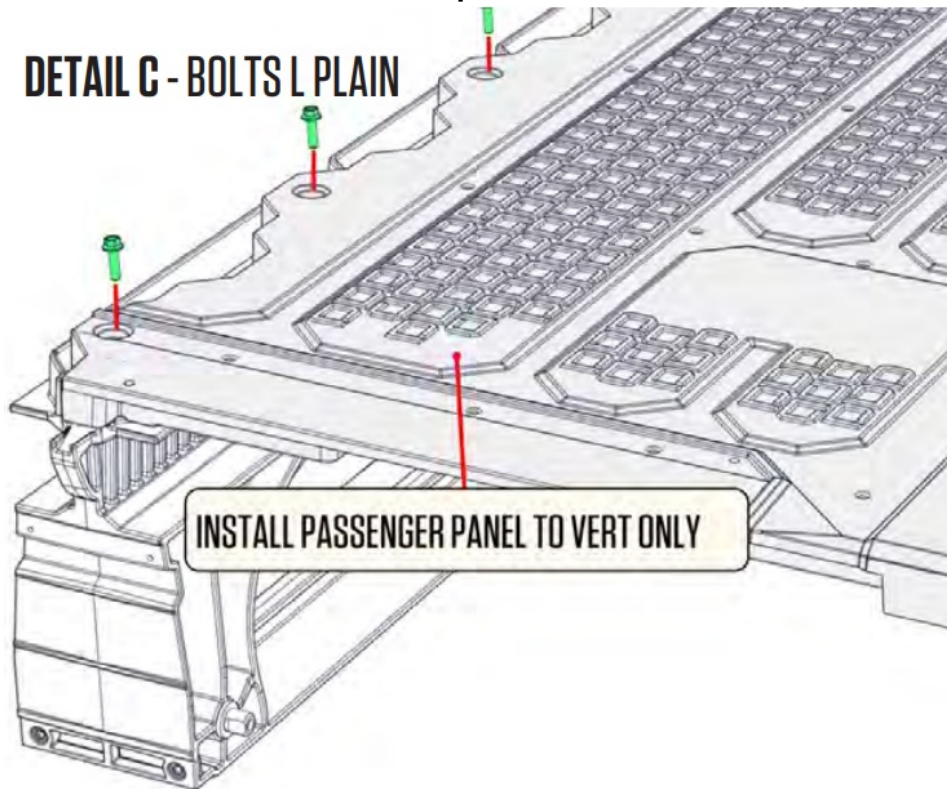

GET THE REST OF YOUR DECK ON

1. Seat the driver side panel on the ammo cans and center vert.
2. Attach the panel to both ammo cans, repeating steps 4 and 5 from the previous page.
3. Do not attach the driver side panel to the center vert. Do I have to repeat myself?
4. Now you can tighten the eight (8) C-CHNL to ammo can bolts. Don't forget unless you like rattles.

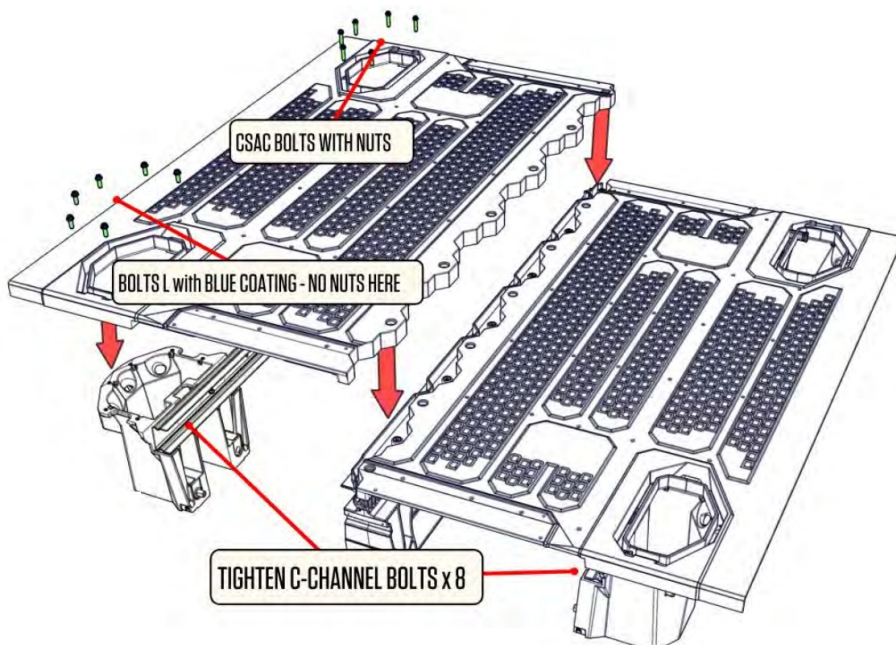

If you will be installing a Cargo Glide onto the DECKED drawer system, now is the time to grab your Cargo Glide instructions. Do not put the drawer system in your truck.

5. Gently remove the driver side assembly from the vert and put aside. If you attached the driver side panel to the vert, see #3 above, smack your hand and carefully remove the bolts.
6. Find a friend to help you lift and place the passenger side assembly into the bed of your truck. Nicely ask the

- same friend to lift and place the driver side assembly into the bed and seat the panel onto the center vert.
7. Install the driver side panel to the center vert using the remaining plain BOLTS Bolts. 27 in-lb.


DRAWERS: BRACKETS + WHEELS

(easier than falling off a log)

Grab your bag: DRAWER 1, DRAWER 3, WHEELS

1. Each drawer has a left and a right wheel bracket.
2. Place the brackets into the drawers as shown.
3. Install two 3/4" bolts into the bottom two bracket holes. Secure with nuts but leave loose.


DETAIL A.

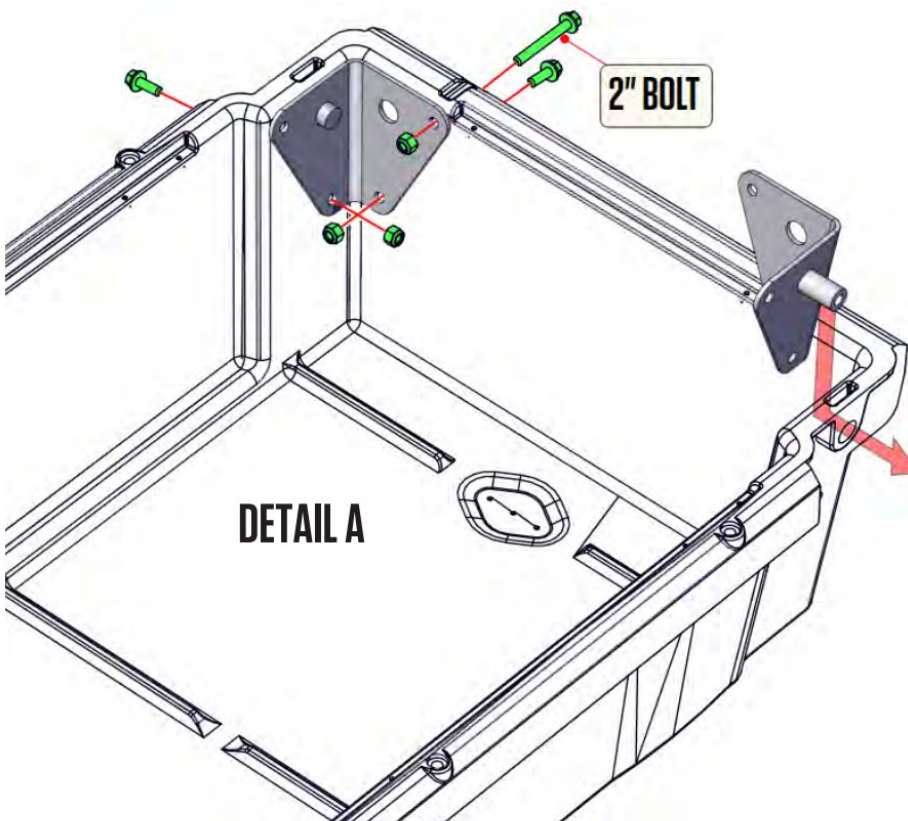

4. Install the 2" bolt into the back mounting hole where shown. Secure with a nut. 27 in-lb.


DETAIL A. Tighten above nuts until snug. 27 in-lb.

5. Use two 3/4" bolts to install the tube brace in the DRAWER 3 bag. 27 in-lb. **DETAIL B.**

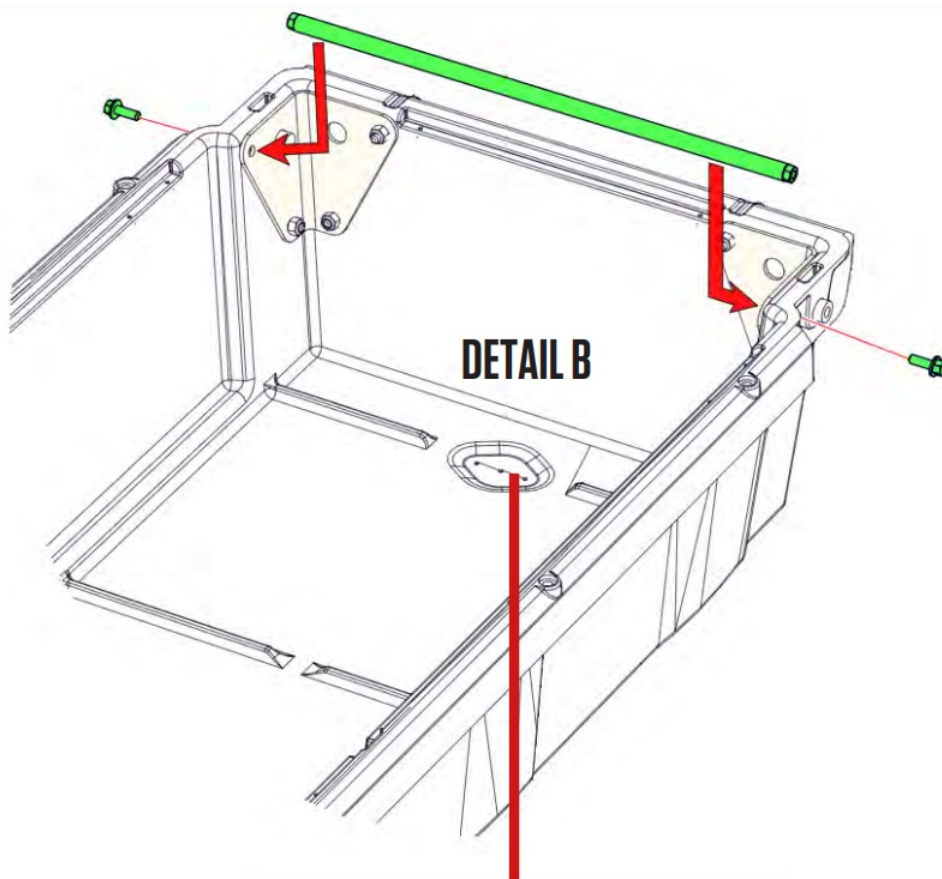

HELPFUL TIP: If you purchased drain plugs, install now (instructions are included with drain plugs).

6. Install the wheels with a $7/32$ " hex wrench. 90 in-lb. **DETAIL C.**

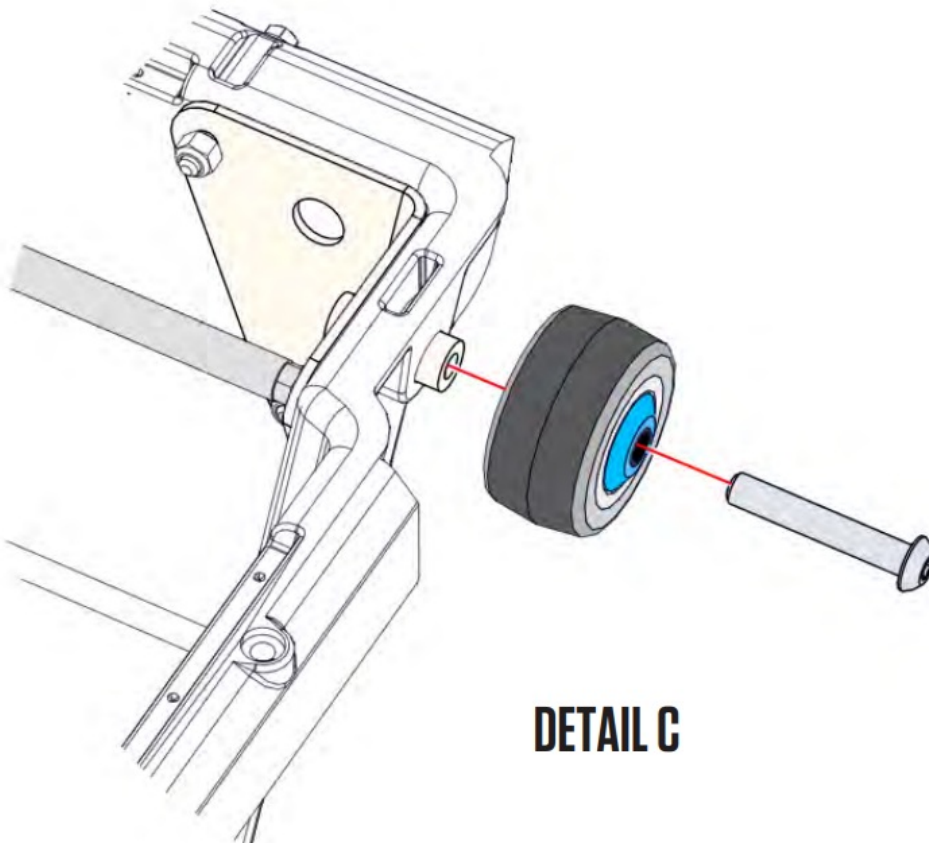


7. Repeat all steps for the other drawer.

INSTALL: DRAWER HANDLE


Grab your bag: HANDLE

1. OK, Sparky, one drawer handle assembly needs to be installed by you. We did the other one. Save yourself the headache, watch this short installation video: **How to Install DECKED Drawer Handle**

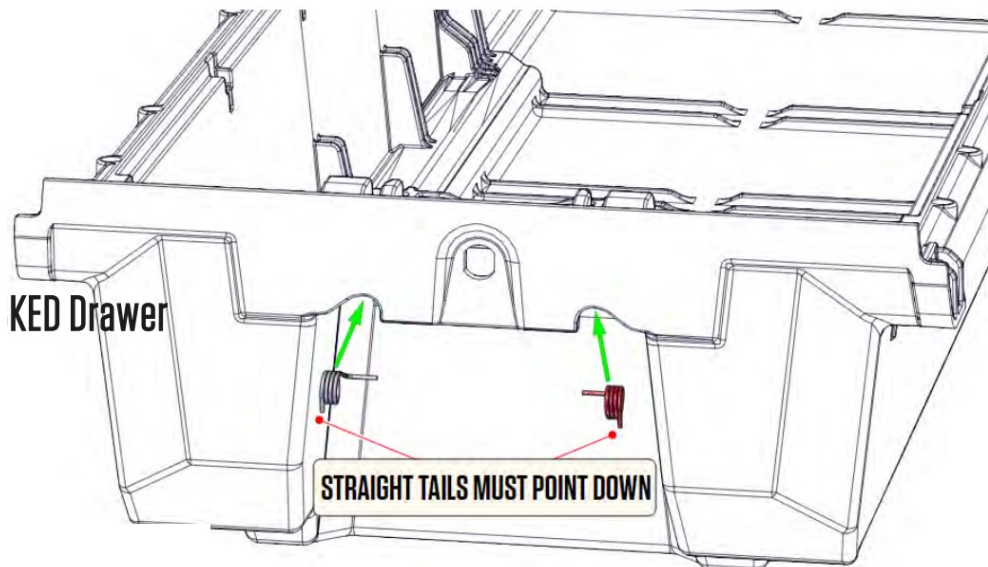


2. From the front face of the drawer, place the springs up and into the cavities on either side of the handle slots, red spring=right spring.


NOTE: Each spring arm should point inward, with the straight tails facing you and pointing down.

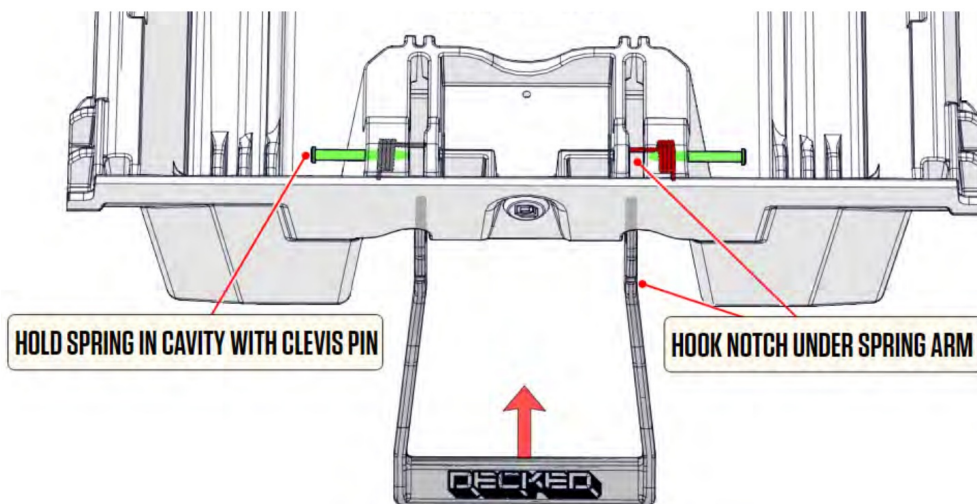


3. Install a clevis pin through each outside drawer hole and through the spring to hold the spring in place. Do not push through 2nd hole.
4. With the DECKED logo facing outward, insert the handle ends behind the spring arms. Hook the spring arms into the handle notches and rotate the arms of the handle toward the clevis pins, which will pull the spring arm downward and load the spring.
5. When the handle hole is aligned to the clevis pin, push the pin through the handle hole and through the inside drawer hole. Repeat on the other side of the handle.
6. Install a hair pin through each clevis pin. Check function.

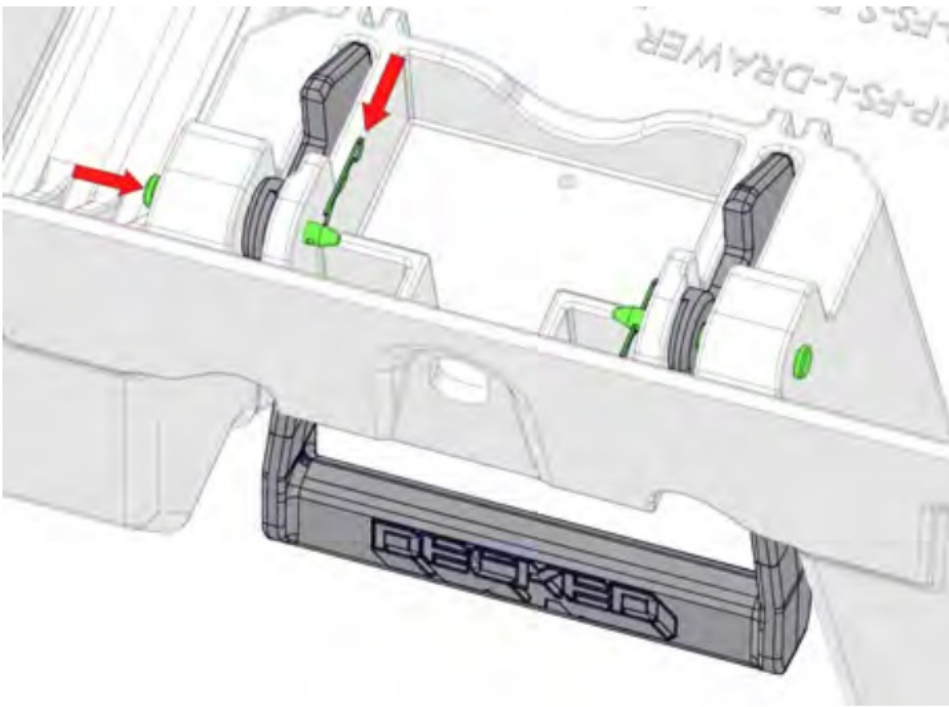

INSTALL: DRAWERS

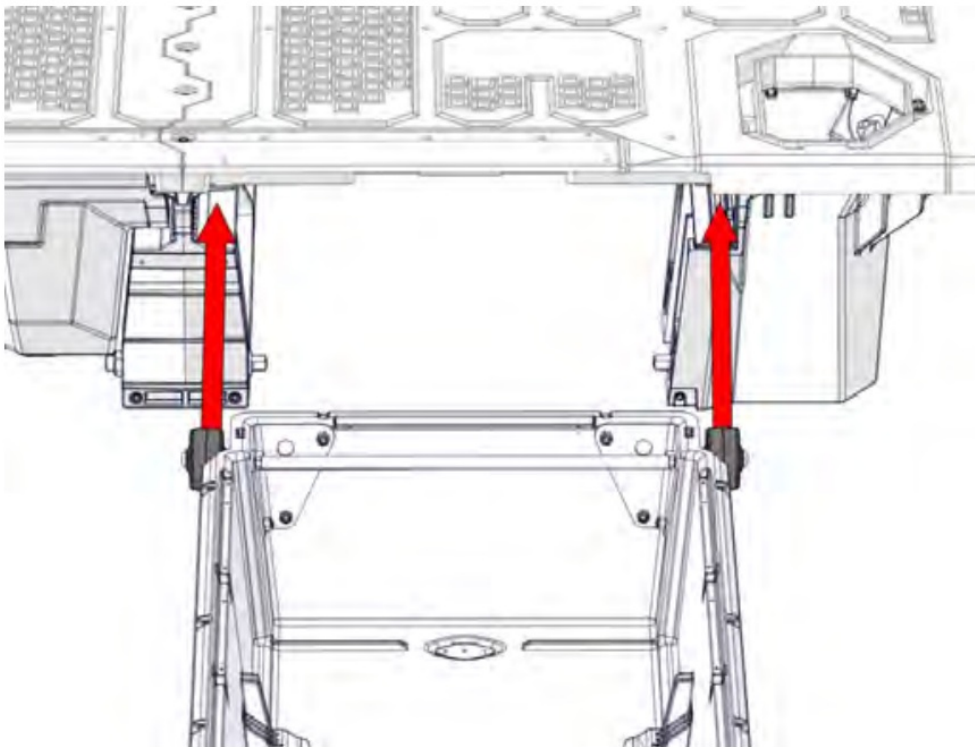

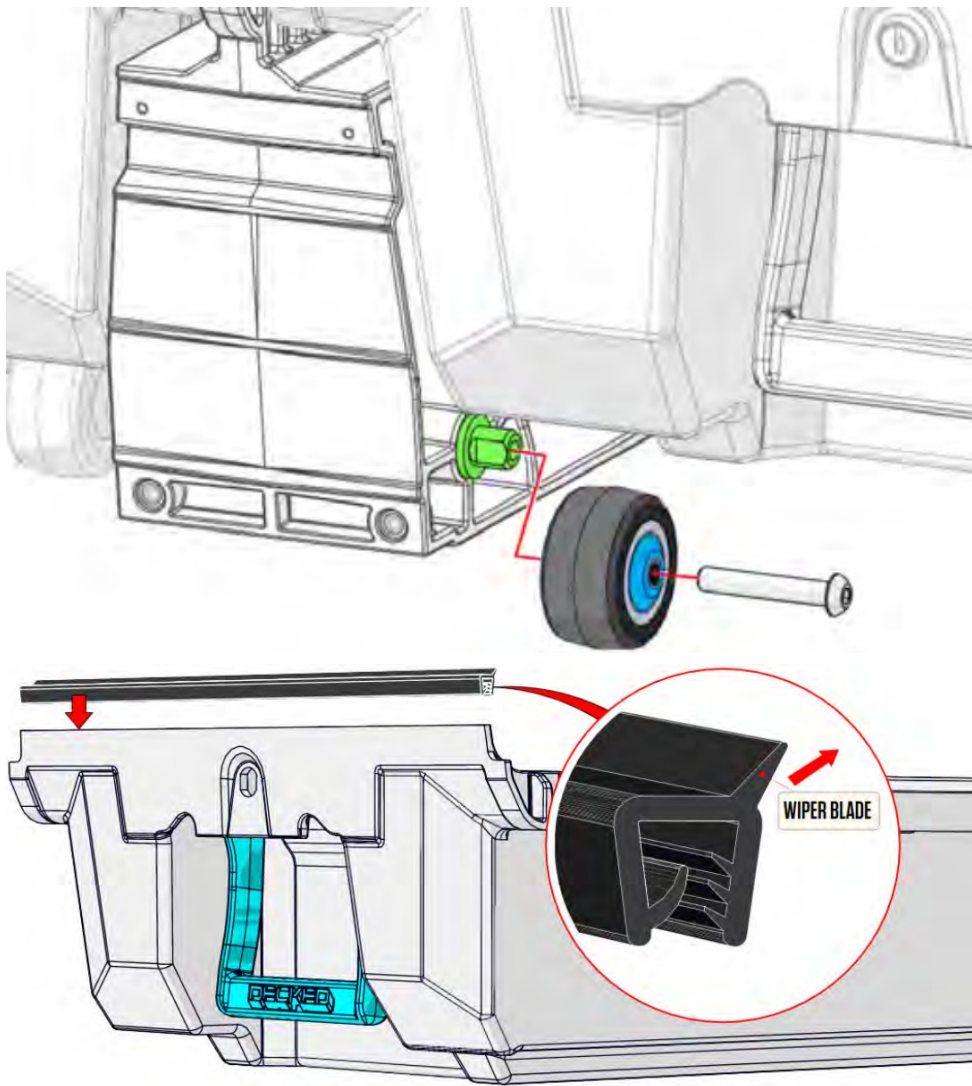

Grab your bag: WHEEL


1. Save yourself the headache, watch this short installation video: **How to Install DECKED Drawers and Tailgate Drawer Wheels**
2. Install the drawer by sliding wheels into their two channels C-channel and center vert) and slide the drawer all the way forward until closed.
3. Install the remaining tailgate side wheels onto their axles. 90 in-lb. Install the weather-strips AFTER you install the wheels. NOTE: Placing a spacer under the drawer to raise it into position makes this easier (ammo can lids work well or a small piece of 2x2 or 2x4).
4. Install the weather strips on the tailgate side drawer edge: With the weather-strip wiper facing cab side, line up the wiper with the side of the drawer and place on the top-drawer edge, firmly pressing down on the weather-strip as you move along the drawer edge.

NOTE: Facing the weather stripping the wrong way will funnel water into drawer: BAD.

INSTALL: THE FUN STUFF

Grab your bag: FINAL FS

1. Slide torsion brace under center vert and tailgate ammo cans. The side without the holes slides UNDER the center vert and tailgate ammo cans. Place bottle opener on the outside of the torsion brace.
2. Loosely install (start with your fingers to avoid cross-threading):
 - Two 1/2" black bolts through the upper holes in the bottle opener into the center vert – leave loose.
 - Two 1" black bolts through the bottom bottle opener holes and torsion brace into the center vert inserts – leave loose.
 - Two 1" black bolts through the end holes in torsion brace into the tailgate ammo can inserts – leave loose.
3. Align bottle opener to edges of center vert and tighten the four bottle opener bolts.
4. Tighten end bolts into tailgate ammo cans.
5. Install lock core plugs into the drawer lock holes or install locks if purchased. (Instructions included with locks)
6. Align the ruler plate on the tailgate end of the panels. Use an 1/8" hex wrench to install the six ruler screws into the panel inserts – do not overtighten these.

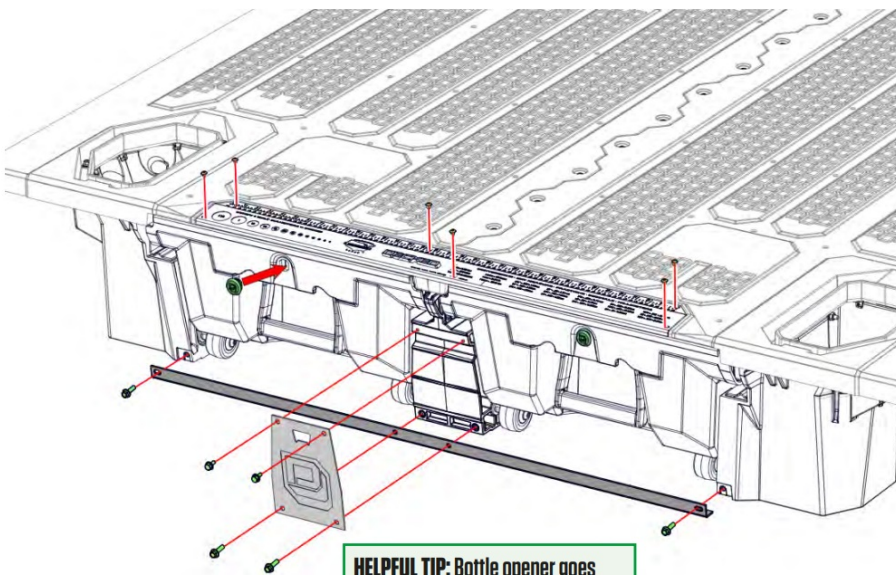


INSTALL: J-HOOKS

Grab your bag: J8, J5


- Insert the J8 J-hook through the tailgate hole on the driver side tailgate ammo can and loop J-hook through tie down in bed.

DETAIL A.

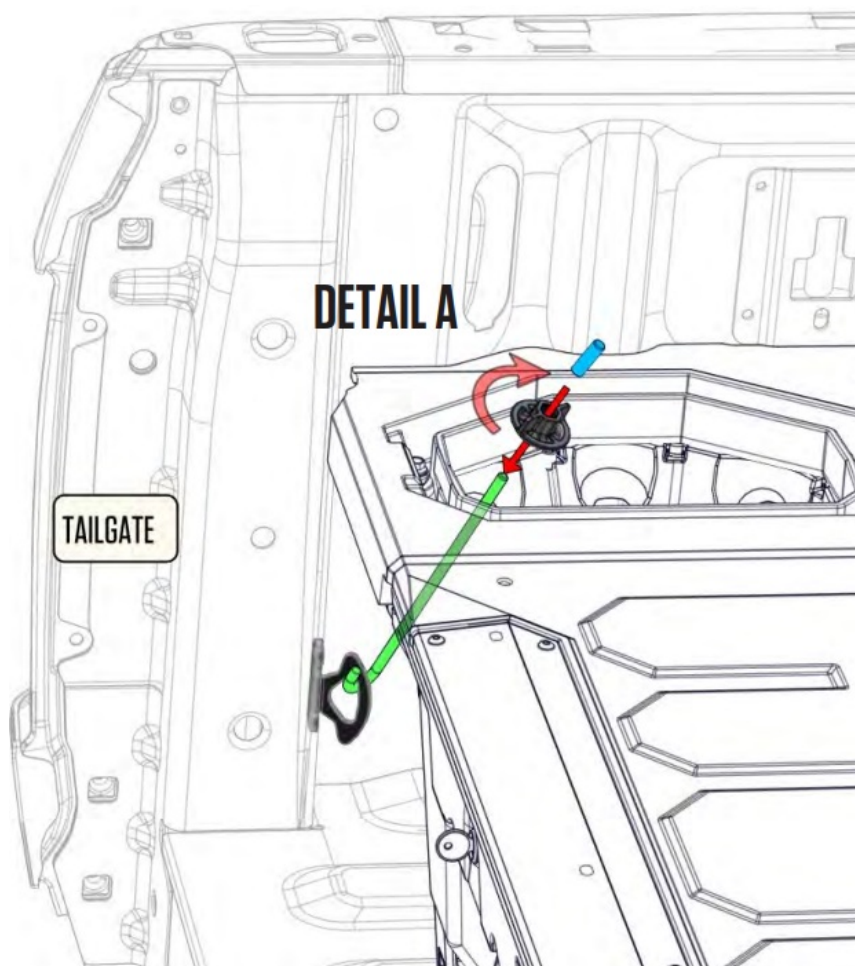

- Screw on the winged-spherical nut-washer, round side down, on the J-hook and fasten until finger tight. Don't tighten yet. If you do, you won't be able to center the system properly in your bed.
- Insert the J5 J-hook through cab side hole on the driver side cab side ammo can and loop J-hook through the mounting bracket in bed.


DETAIL B.

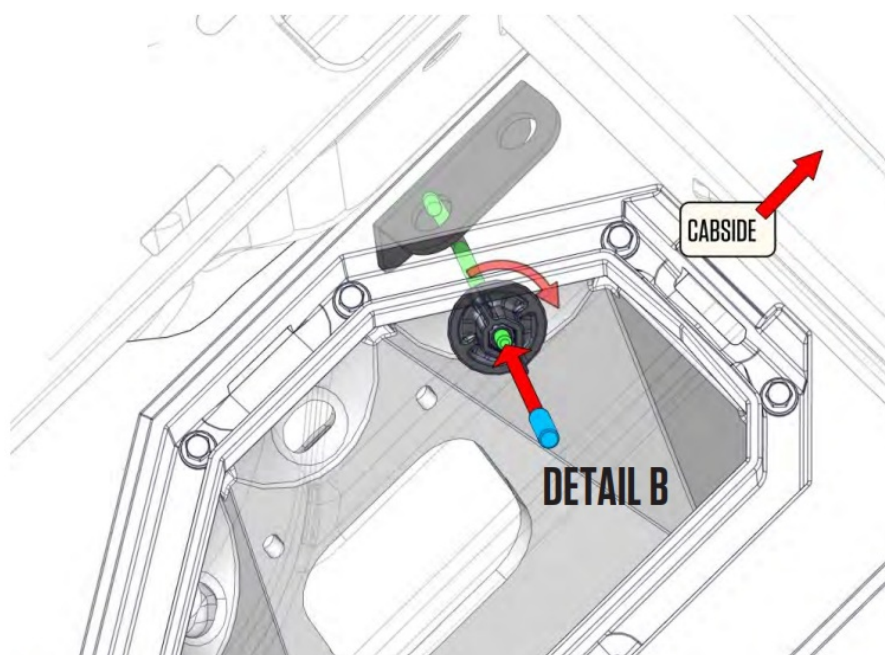

IMPORTANT: Grab your favorite beverage, crack 'er open in the bottle opener and make a toast to your truck. You did it. Immediately post a photo of your significant other, child or canine (in no order of significance - please someone show us your pet alligator) appreciating your accomplishment. Add hashtag #DECKEDUSA | @DECKEDUSA.

- Screw on the winged-spherical nut-washer, round side down, on the hook and fasten until finger tight. Don't tighten yet.
- Repeat with J-hooks and ammo cans on passenger side.
- Alternately and gradually tighten all J-hooks, making sure the system stays centered in the bed.
- **IMPORTANT:** Make sure to center the vert in the center of your bed. Don't worry about side gaps, center the vert on the center rib or valley of the bed.
- Install bolt thread protectors on to J-hook ends.
- Install cabside ammo can windows.

DETAIL C.

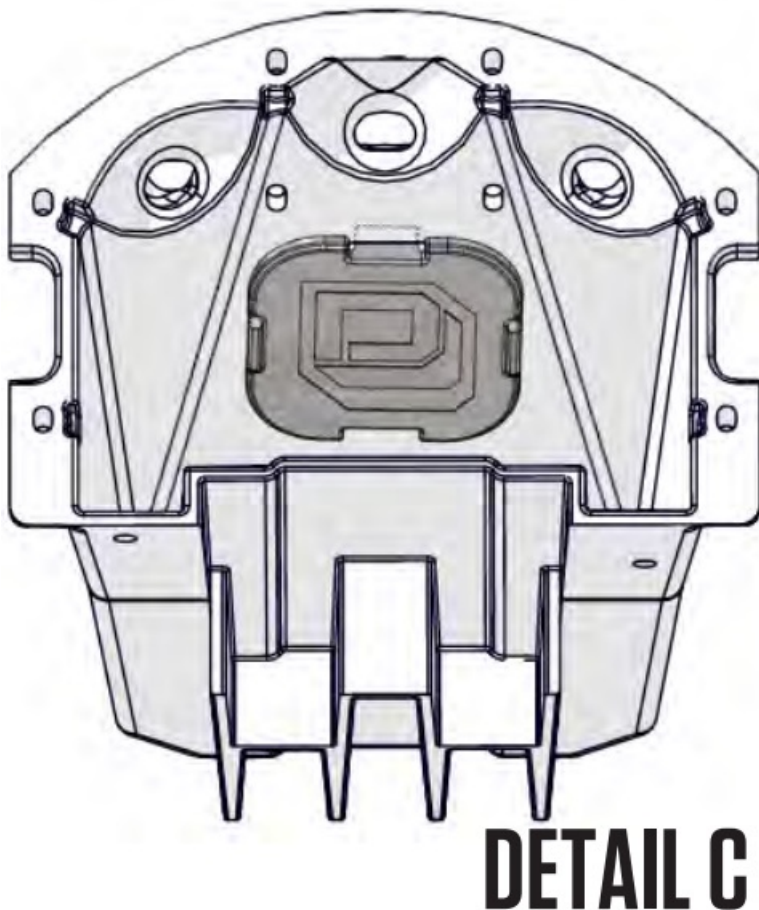

- Install ammo can lids onto deck panels.

DECKED Products – Limited Lifetime Warranty

(Valid on DECKED Products purchased on or after 8/1/2021)

DECKED LLC, (the “Manufacturer”) warrants the original purchaser only that DECKED Truck and Van Products (The “DECKED” Product) will be free from defects in material and workmanship from the date of purchase and continuing for the expected lifetime of the DECKED Product. The DECKED Product must be registered by the original purchaser with

DECKED, LLC via its website at, www.decked.com/register, and a copy of the original sales receipt must be supplied to the Manufacturer at the time a warranty claim is made.

This warranty terminates if the original purchaser transfers the DECKED Product to any other person or vehicle.

WHAT IS COVERED

All DECKED Products identified above on or after August 1, 2021

DECKED's Limited Lifetime Warranty applies to US and Canadian customers only. International shipments are covered by DECKED's 3 Year Limited Warranty.

WHAT WE WILL DO TO CORRECT PROBLEMS

Subject to the limitations and exclusions described in this limited warranty, the Manufacturer will remedy defects in workmanship or materials by providing one of the following remedies at its option and without charge to the original purchaser for parts: (a) repairing the defective portion of the DECKED Product or (b) replacing the entire DECKED Product.

In addition, the Manufacturer may elect at its option not to repair or replace the DECKED Product, but rather issue to the original purchaser a refund equal to the purchase price paid for the DECKED Product or a credit to be used towards the purchase of a new DECKED Product.

WHAT IS NOT COVERED

This limited warranty expressly excludes:

- Damage or defects caused by normal wear and tear, cosmetic rust, scratches, accidents, unlawful vehicle operation, installation in a non-supported vehicle or installed in a vehicle which doesn't match the DECKED Product's SKU-intended fitment or use, or modification of the product, or any types of repair of a DECKED Product other than those authorized or provided by the Manufacturer.
- Damage or defects resulting from conditions beyond the Manufacturer's control and specifications including, but not limited to modification, misuse, overloading, or failure to assemble, install or use the DECKED Product in accordance with the Manufacturer's written instructions or guidelines included with the DECKED Product or separately made available to the original purchaser.
- Damage to the contents of the DECKED Product or vehicle.
- TO THE EXTENT PERMITTED BY LAW, IN NO EVENT SHALL THE MANUFACTURER BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, INCLUDING ECONOMIC LOSS, WHETHER RESULTING FROM NONPERFORMANCE, USE, MISUSE, OR INABILITY TO USE THE DECKED PRODUCT OR THE MANUFACTURER'S NEGLIGENCE.

NO OTHER EXPRESS WARRANTY APPLIES

This Limited Lifetime Warranty is the sole and exclusive warranty for DECKED Products. No employee, agent, dealer, or other person is authorized to alter this warranty or make any other warranty on behalf of DECKED LLC.

NOTIFICATION PROCEDURES

If the DECKED Product does not conform with the terms of this limited warranty, the original purchaser must promptly notify the Manufacturer in writing upon discovery of the nonconformity. In order to receive remedies under this limited warranty, a warranty claim must have been registered with DECKED LLC by the original purchaser, must describe the nature of the products nonconformity, include a copy of the original sales receipt, invoice, or other proof of purchase and be accompanied with photos or video. Repairs or modifications made to

the DECKED Product by other than the Manufacturer or its authorized agent will nullify this limited warranty. Coverage under this limited warranty is conditioned at all times upon the owner's compliance with these required registration, notification, and repair procedures.



Documents / Resources

References

- [!\[\]\(4c660a3c4ce1da3313488b7854f55083_img.jpg\) Register Your DECKED Truck Bed Organizer System | DECKED Accessories](#)
- [User Manual](#)

Manuals+,