



DECKED DT1 In-Vehicle Storage Systems Instruction Manual

[Home](#) » [DECKED](#) » DECKED DT1 In-Vehicle Storage Systems Instruction Manual 



Installation Instructions:
DT1/DT2
TOYOTA TUNDRA
5'7" BED LENGTH
6'7" BED LENGTH
2007-CURRENT
TOOLS REQUIRED

<ul style="list-style-type: none">• 3/8" socket• 7/16" socket• Wire cutters	<ul style="list-style-type: none">• 1/8" hex wrench• 7/32" hex wrench• 1/2" drill bit• T40 Torx driver
---	---



 **SCAN ME**
REGISTER YOUR SYSTEM


<https://qrco.de/bbbw8K>

Contents


- 1 CONTENTS
- 2 ASSEMBLY OVERVIEW
- 3 HEY! TORQUE BOY: READ BEFORE YOU INSTALL DECKED
- 4 SHIMS
- 5 ASSEMBLY: PASSENGER'S SIDE DECK
- 6 INSTALL: DRAWER HANDLES
- 7 INSTALL: DRAWERS
- 8 INSTALL: J-HOOKS
- 9 DECKED Products – Limited Lifetime Warranty
- 10 Documents / Resources
 - 10.1 References
- 11 Related Posts

CONTENTS


Hardware box – unbagged components (inside DECKED carton):

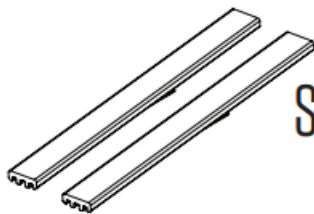

SHIMS TOYOTA 55/65 - 4

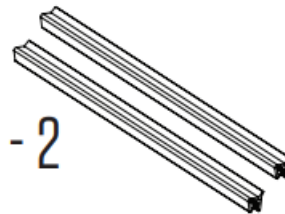


WEATHER STRIPS - 2

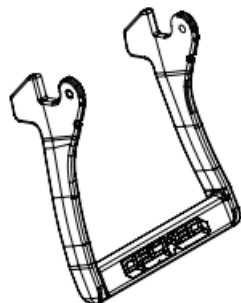

HANDLE - 1

DECKED carton	HARDWARE
LEFT/DRIVER DECK HALF – 1 RIGHT/PASSENGER DECK HALF – 1 CENTER VERT – 1 DRAWER – 2 CAB SIDE AMMO CAN – 2 TAILGATE SIDE AMMO CAN – 2 AMMO CAN LID – 4 AMMO CAN WINDOW – 2 C-CHANNEL – 2 RULER – 1 HARDWARE BOX – 1 TORSION BRACE – 1 BOTTLE OPENER – 1	PREP SD/ C-CHANN BOLT 1 F CS AMMC J3 – 2 J5 – 2 DRAWER DRAWER HANDLE - WHEELS PREP-EXT WASHERS PREP TBC

ASSEMBLY OVERVIEW

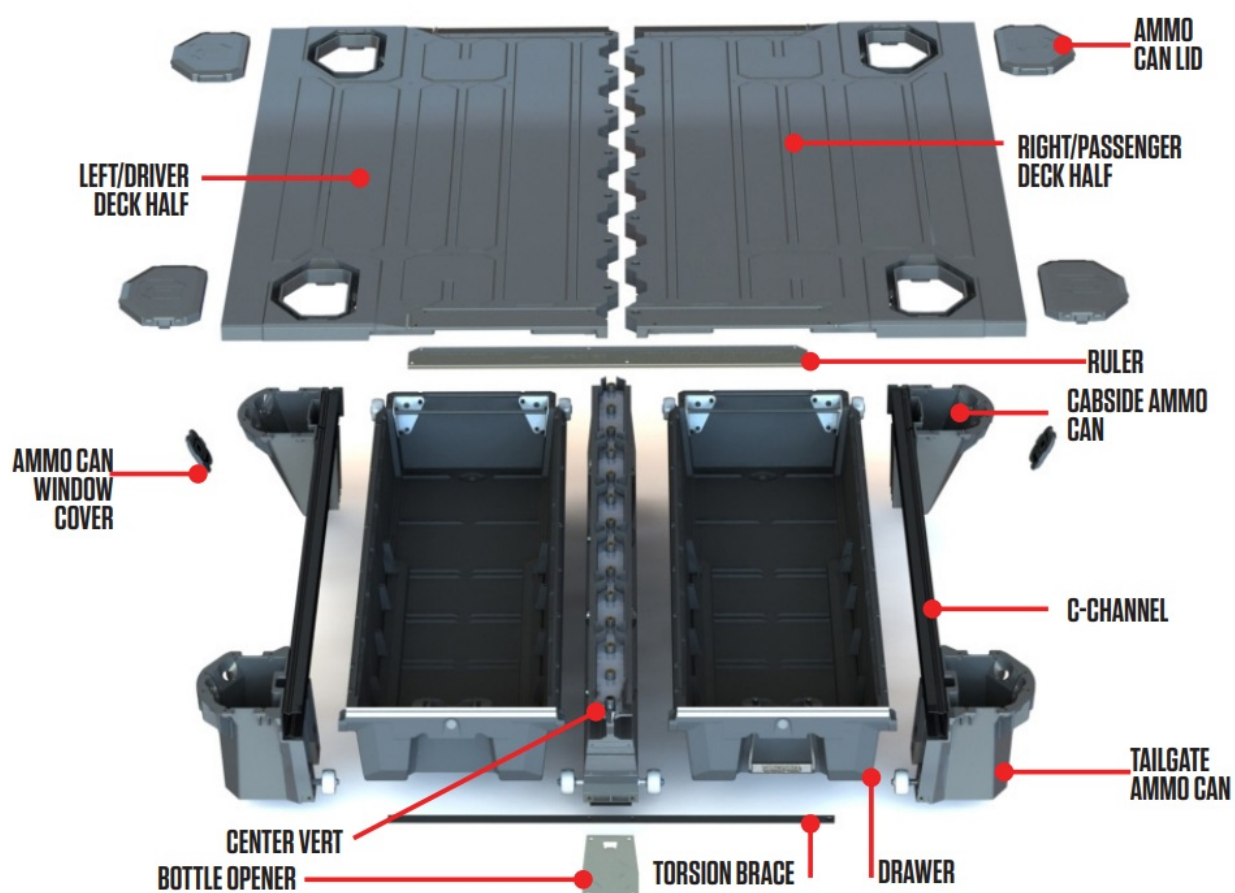

HEY! TORQUE BOY: READ BEFORE YOU INSTALL DECKED

1. Don't go rogue on us, please read the instructions.
2. Don't over-tighten bolts, get 'em' hand-tight.
3. Don't use power tools.
4. If you don't follow directions and do use power tools:
 - 1). Set clutch at a very low setting.
 - 2). If you blow it, see NOTE.*
5. Start all bolts with fingers to avoid cross-threading.
6. Don't over-tighten J-hooks during installation.

Just get 'em good and snug; enough to keep the system from moving in the bed.

7. Nice job if you're still reading.

NOTE* Two extra threaded inserts are included in BAG PREP-EXTRA. That's all you get unless you call us and ask for more. The inserts will replace any stripped inserts in the tailgate ammo cans or front face of the center vert at the bottle opener, but **NOT THE TOP OF THE CENTER VERT**, so hand tightens until snug only! You can also screw the inserts back in if dislocated. There is a straight screwdriver slot on the underside of the threaded insert. TAILGATE ammo cans have wide bottoms; CAB SIDE ammo cans have narrow bottoms.

NOTE: You will need a buddy to help with exactly two steps.

Prevent embarrassing, expletive-filled language, watch our detailed installation video or give us a call. We're happy to help!

208.806.0251 | [DECKED.COM/INSTALLVIDEO](https://www.decked.com/installvideo) AMMO CAN DRAIN HOLES (TO DRILL OR NOT TO DRILL.)


- Do you use a tonneau or shell over your DECKED system?

There is no need to drill holes unless you leave your tonneau open in a deluge.

- Does your DECKED system live outside?

The ammo cans will get water in them. You'll need to drill holes in the ammo cans.

There are two dimples at the bottom of each ammo can. Drill a 1/2" hole at each dimple. A smaller hole will get clogged.

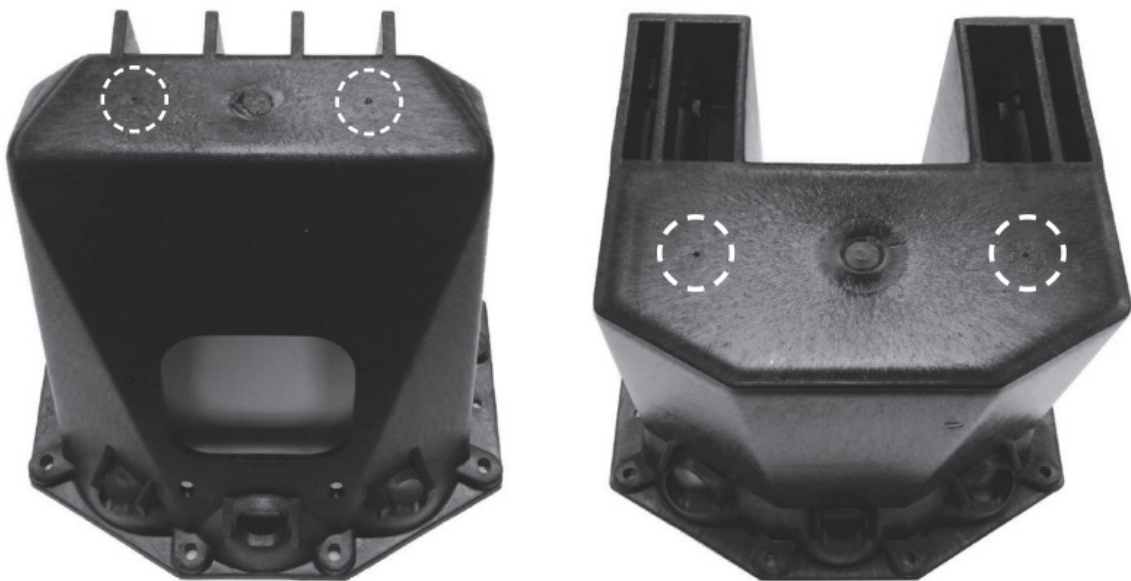

SHIMS

- There are 4 SHIMS provided:
- Using the information in the respective circular detail views:
 - a) Clean the surfaces thoroughly where the shims will be located (isopropyl alcohol is recommended).
 - b) Remove the layer of tape on the bottom of the shim to expose the adhesive surface.
 - c) Place the shim and apply with pressure.

NOTE: Repeat details A and B on the passenger side.



DETAIL A

Place shim 5 1/2" from tailgate side of floor. Center shim between floor beads shown. **Repeat opposite side.**



DETAIL B



Place shim 3" from cabside panel. Center shim between floor beads shown. **Repeat opposite side.**

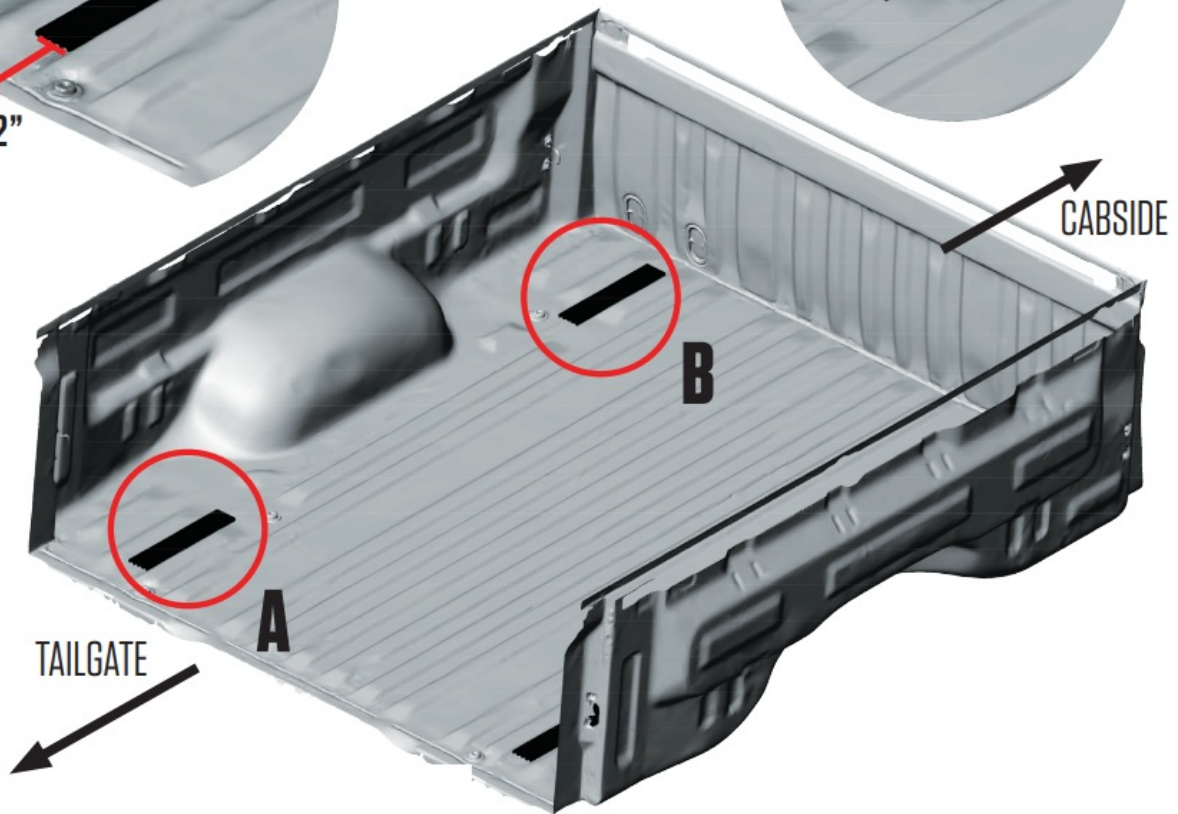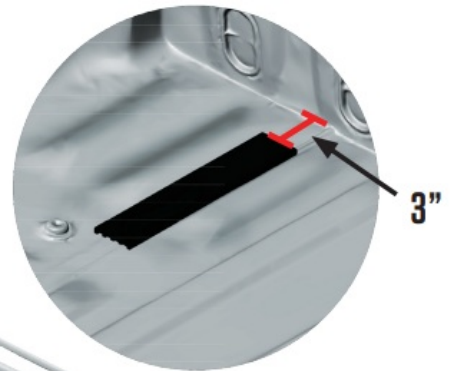

PREP BED

(JUST LIKE YOUR MOMMA TAUGHT YOU.)

- Remove all factory tie-downs on both sides of the truck bed (T40 Torx driver required).
Make sure to **SAVE THE FACTORY TUNDRA BOLTS**, as you will need them for the **DECKED** brackets.
- Install **DECKED** tie-down brackets on both sides of the truck using bolts from the step above; **BAG PREP SD/TUN**.

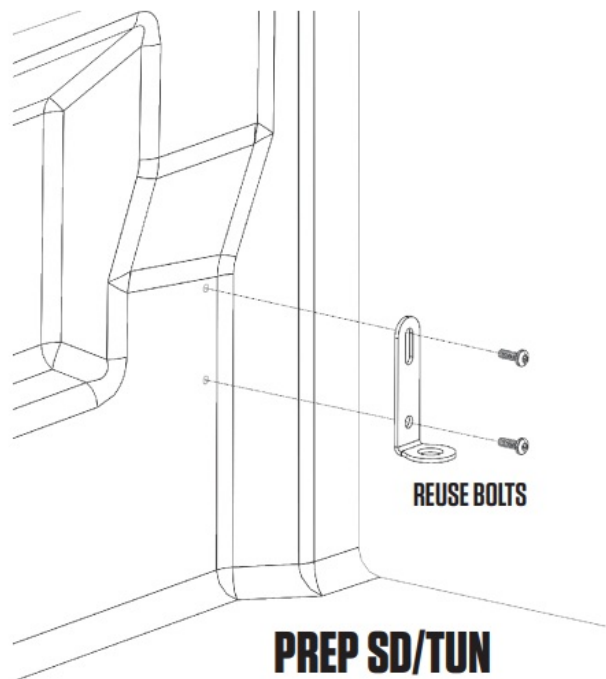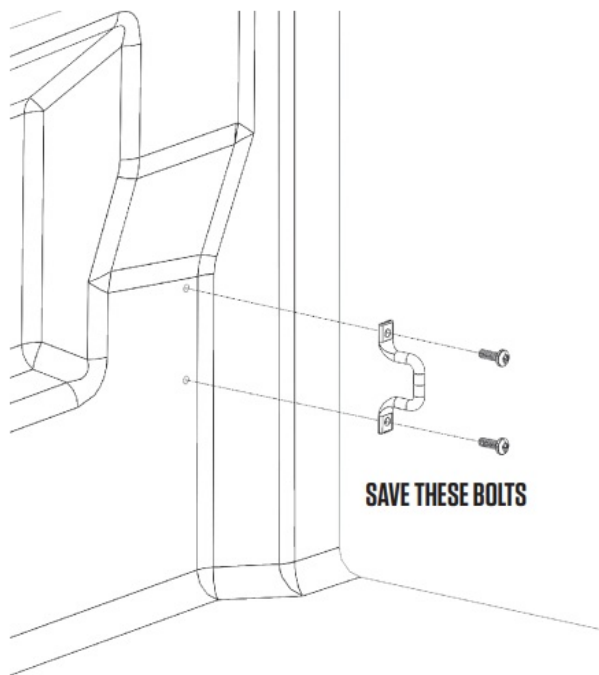


RECOMMENDED TORQUE: Bolts in labeled bag PREP SD/TUN – 27 in-lb.

FACTORY TUNDRA TIE-DOWN BRACKETS	DECKED TIE-DOWN BR
----------------------------------	--------------------

ASSEMBLY: DRIVER'S SIDE DECK (LET'S DO THIS!)

- There are three pre-installed gaskets – one on the center vert, one on each underside of the decks where they rest on the center vert. Do yours look weird? (They should be flat.) See them here: [DECKED.COM/GASKETS](https://www.decked.com/gaskets)
- Place a C-channel on the inside ledges of a cabside ammo can and tailgate ammo can.
- The end of the C-channel with the endplate must rest on the cab side ammo can.
- Verify that the tailgate ammo can's axle is closest to the tailgate; if not, grab the other tailgate ammo can.
- Install nylon washers onto all bolts in BAG C-CHANNEL, WASHERS.
- Loosely bolt C-channel to the two ammo cans. Make sure the bolt head is in the C-channel, not inside the ammo can; BAG C-CHANNEL. Don't tighten yet. Houston, come in Houston, do you copy? Don't tighten yet.
- Line up the driver's side deck (sticker or mark on the end of deck panel indicates LEFT/DRIVER) on top of the C-channel/ammo can assembly and the center vert bosses. Hey Sparky: Tailgate end of the center vert has an axle installed; the center vert axle and ammo can axles must be on the tailgate end (not the cab side end) of the assembly.
- Use WASHERS bag to install nylon & rubber washers on all CS AMMO CAN bolts. Install the same washers on 12 B1 bolts.
- Use the above bolts to bolt the deck to the ammo cans; BAG B1 for the tailgate ammo can, BAG CS AMMO CAN for the cab side ammo can.
- Now tighten the loose bolts connecting the ammo cans to the C-channel.
- Bolt the deck to the center vert; BAG B1 (no washers). If you must use power tools, use them with caution!


**Set drill clutch to LIGHT.
DRIVER SIDE DECK HALF**

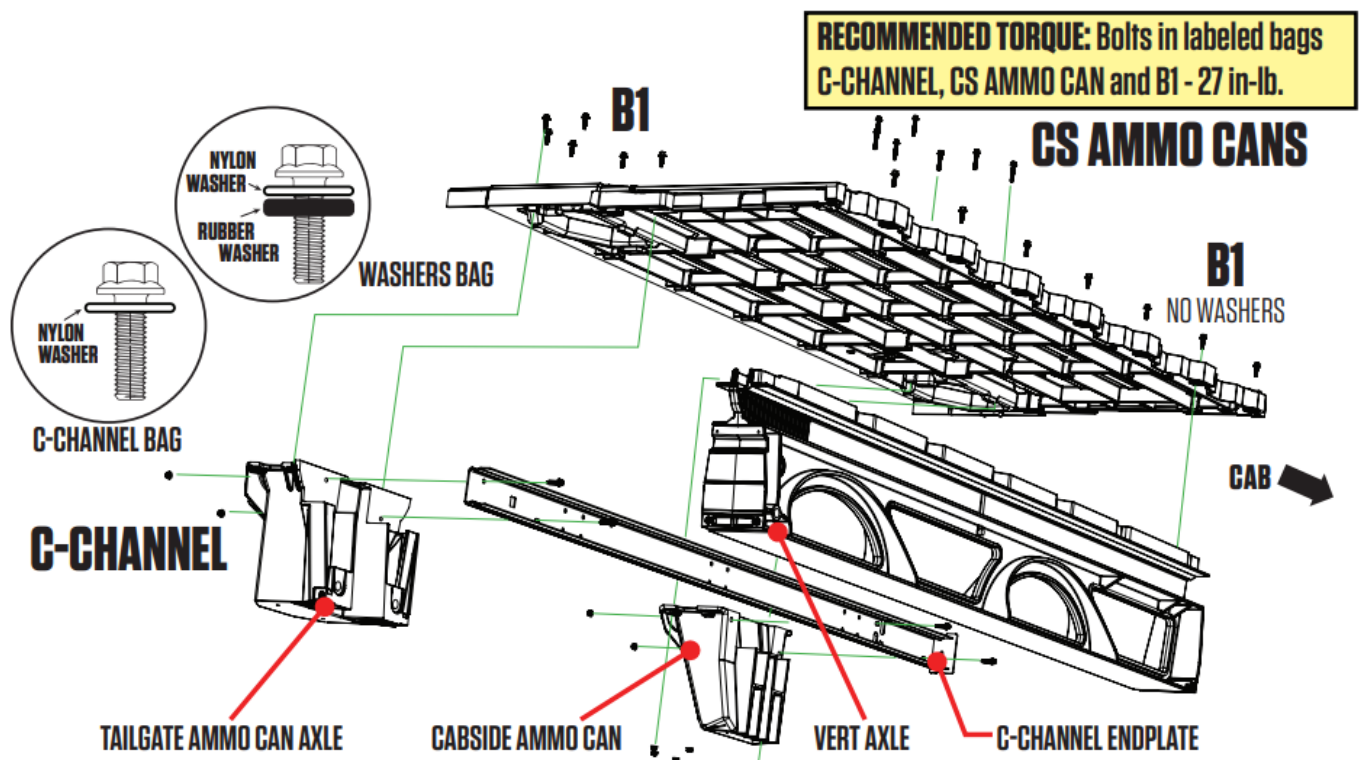

ASSEMBLY: PASSENGER'S SIDE DECK


- Using the assembly just built as support, assemble the passenger side.
- Place C-channel on the inside ledges of a cabside ammo can and tailgate ammo can.
- The C-channel endplate must rest on the cab side ammo can.
- You should have the correct tailgate ammo can for this step. The axle will be on the tailgate side of the system. If not, swap the tailgate ammo cans now.
- Loosely bolt C-channel to the two ammo cans. Make sure the bolt head is in the C-channel, not inside the ammo can; BAG C-CHANNEL (with nylon washers). Deja vu, don't tighten yet.
- Line up the passenger's side deck (sticker or mark on the end of deck panel indicates RIGHT/PASSENGER) on top of the C-channel/ammo can assembly.
- Bolt the deck to the ammo cans; BAG B1 (with nylon and rubber washers) for the tailgate ammo can, BAG CS AMMO CAN (with nylon and rubber washers) for the cab side ammo can.
- DO NOT bolt passenger deck to center vert. Do not pass GO! Do not collect \$ 200...
- Now tighten the loose bolts connecting the ammo cans to the C-channel.
- Grab your buddy to help you lift the driver-side assembly into the driver's side of the truck bed. Lift the passenger side assembly into the passenger side of the truck bed and seat the passenger side deck on the upstanding, cylindrical vert bosses.
- Bolt the passenger side deck half to the center vert; BAG B1 (no washers). Make sure all bolts connecting the deck to the center vert are snug. Remember our warning about power tools?

PASSENGER SIDE DECK HALF

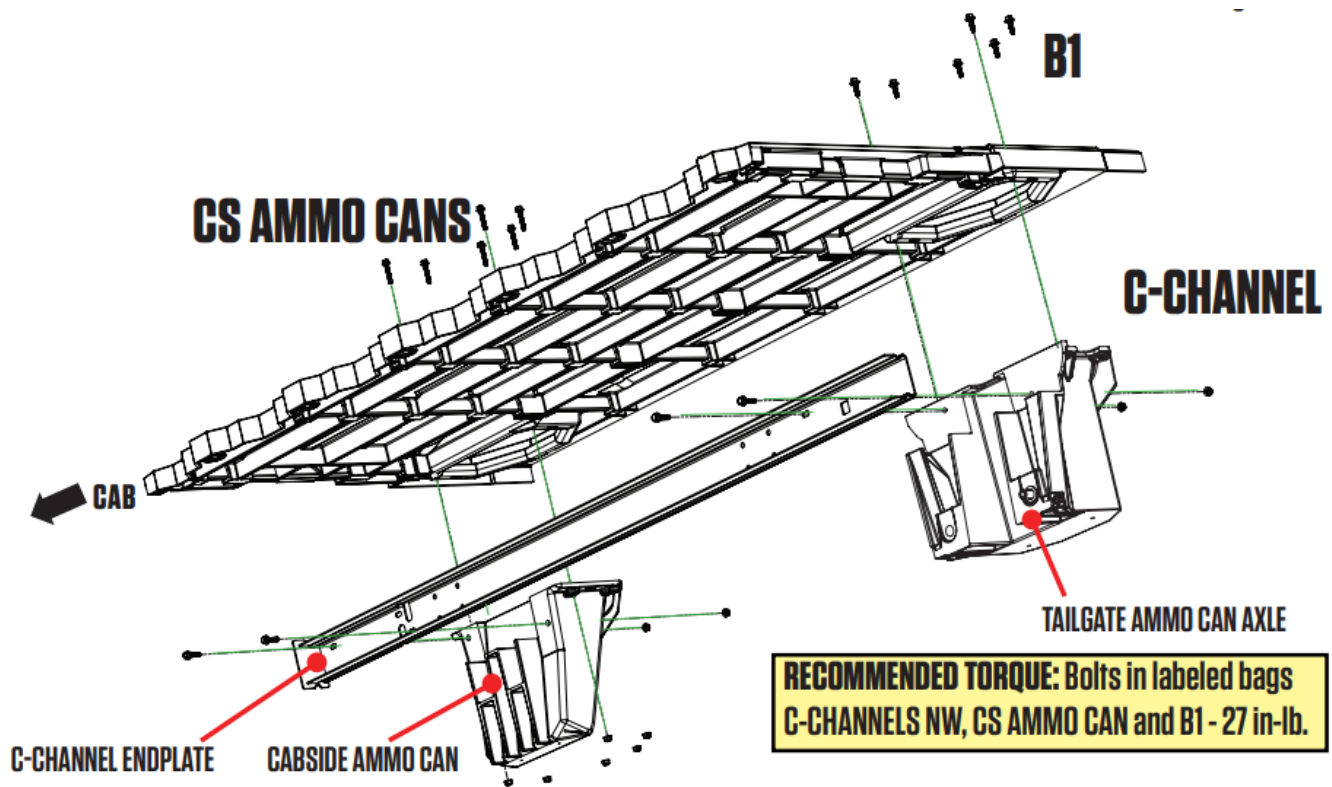



DRAWERS: BRACKETS + WHEELS (EASIER THAN FALLING OFF A LOG)

- Each drawer has a left and a right bracket. Bolt the brackets into place via the bottom two holes in the bracket with 3/4" length bolts. Use the 2" length bolt for the upper cab side wall hole in the bracket; BAG DRAWER 1.
- Install a tube brace in each drawer with two 3/4" length bolts; BAG DRAWER 1, BAG DRAWER 3.
- Attach wheels onto the drawer brackets with a 7/32" hex wrench; BAG WHEELS.

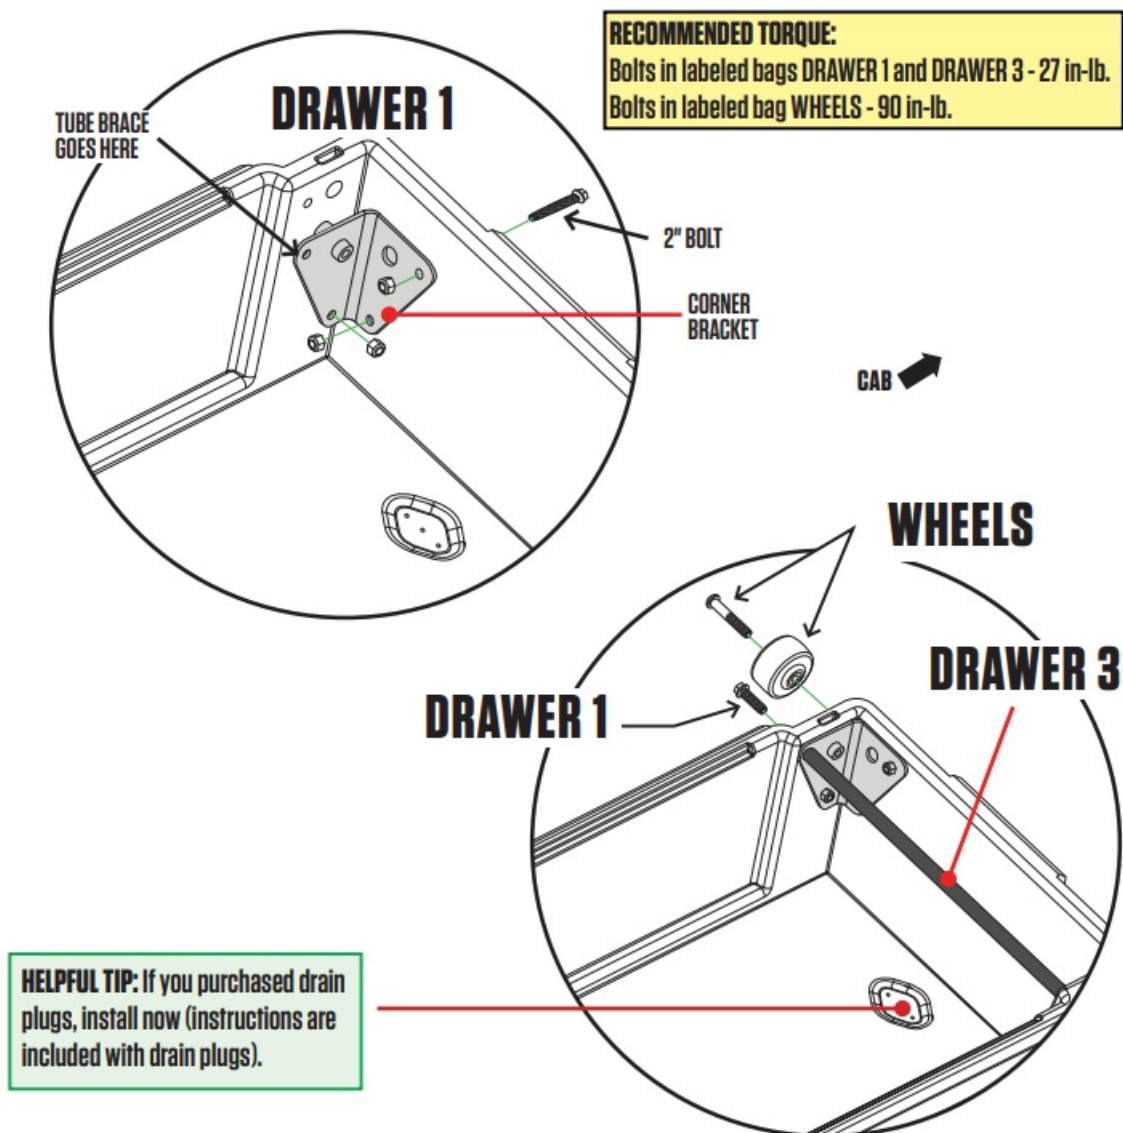


INSTALL: DRAWER HANDLES

- OK, Sparky, one drawer handle assembly needs to be installed by you. We did the other one.
- Save yourself the headache, watch this short installation video: [DECKED.com/videohandle](https://www.decked.com/videohandle).
- From the underside of the drawer, place the springs into the cavities on either side of the handle slots, red spring=right spring; BAG HANDLE. NOTE: Each spring arm should point inward, not outward.
- Install a clevis pin through each outside drawer hole and through the spring; BAG HANDLE.
- With the DECKED logo facing outward, insert the handle ends behind the spring arms. Rotate the arms of the handle toward the clevis pins, pulling the spring arm downward. When the handle hole is lined up with the clevis pin, push the pin through the handle hole and through the inside drawer hole. Repeat on the other side of the handle.
- Install a hairpin through the clevis pin; BAG HANDLE.

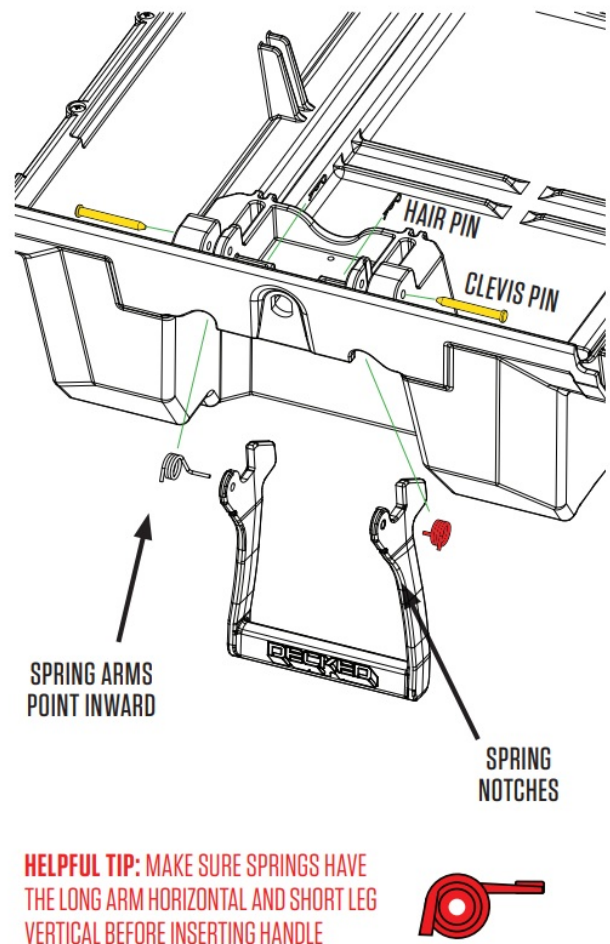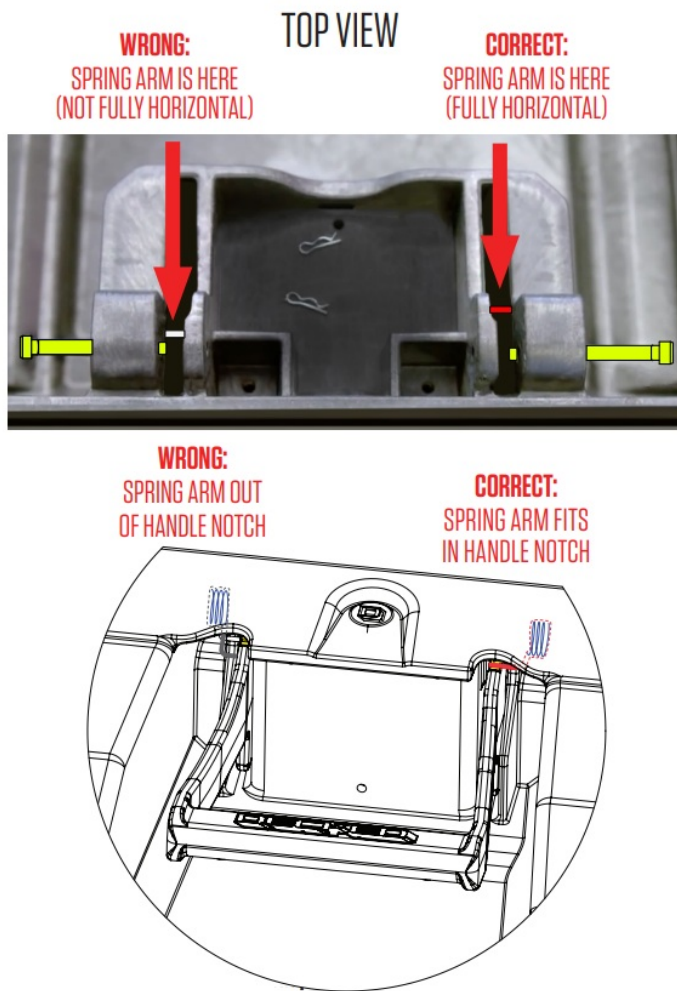


INSTALL: DRAWERS

- Save yourself the headache, watch this short installation video: [DECKED.com/video/tailgatewheels](https://www.decked.com/video/tailgatewheels).
- Install the drawer by sliding wheels into their two channels (C-channel and center vert), and slide the drawer all the way forward until closed.
- Install the remaining tailgate side wheels onto their axles; **BAG WHEELS**.
NOTE: Placing a spacer under the drawer to raise it into position makes this easier (ammo can lids work well, or a small piece of 2×2 or 2×4).
- Install the weather strips on the tailgate side drawer edge: With the weatherstrip wiper facing the cab side, line up one end with the side of the drawer and place on the top drawer edge, firmly pressing down on the weatherstrip as you move along the drawer edge.
NOTE: Facing the weather stripping the wrong way will funnel water into the drawer: **BAD!**
- When the weatherstrip is fully seated along the top edge, trim off any material that extends beyond the drawer edge with wire cutters. Watch out for the stainless wire coil inside; it's sharp!

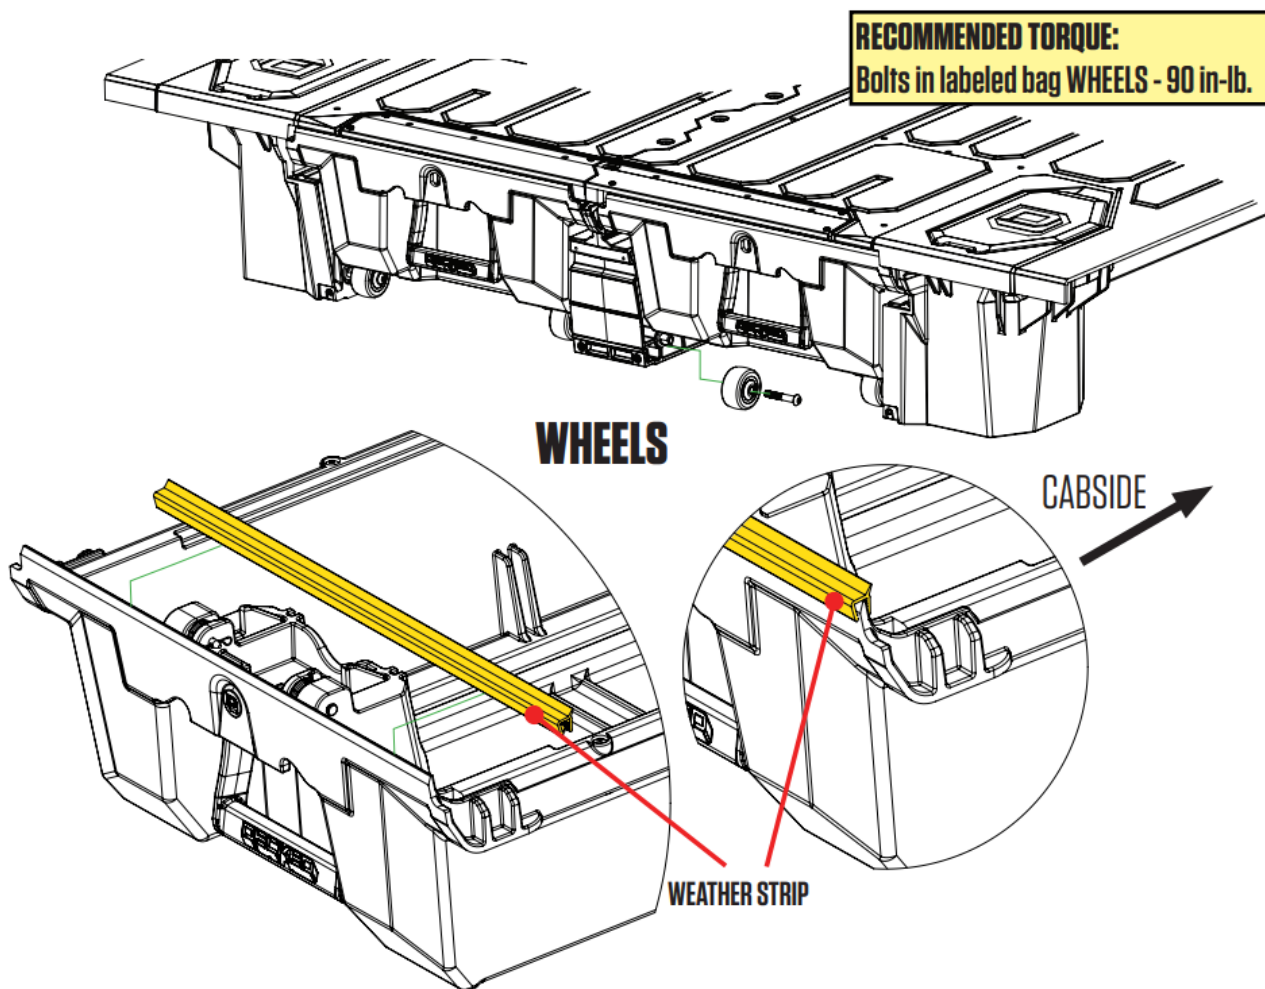

INSTALL: THE FUN STUFF

- Use the WASHERS bag and PREP TBO bag for the following steps.
- Slide torsion brace under center vert and tailgate ammo cans. Place the bottle opener on the outside of the torsion brace.
- Loosely install (start with your fingers to avoid cross-threading):
- Two 1/2" bolts through upper holes in the bottle opener into the center vert – no washers needed; leave loose.
- Two 1" bolts with nylon washers through the end holes in torsion brace into tailgate ammo cans; leave loose.
- Two 1" bolts with nylon washers through the bottom bottle opener holes and torsion brace into center vert; leave loose.
- Align bottle opener to edges of center vert and tighten four bottle opener bolts.
- Tighten end bolts into tailgate ammo cans.

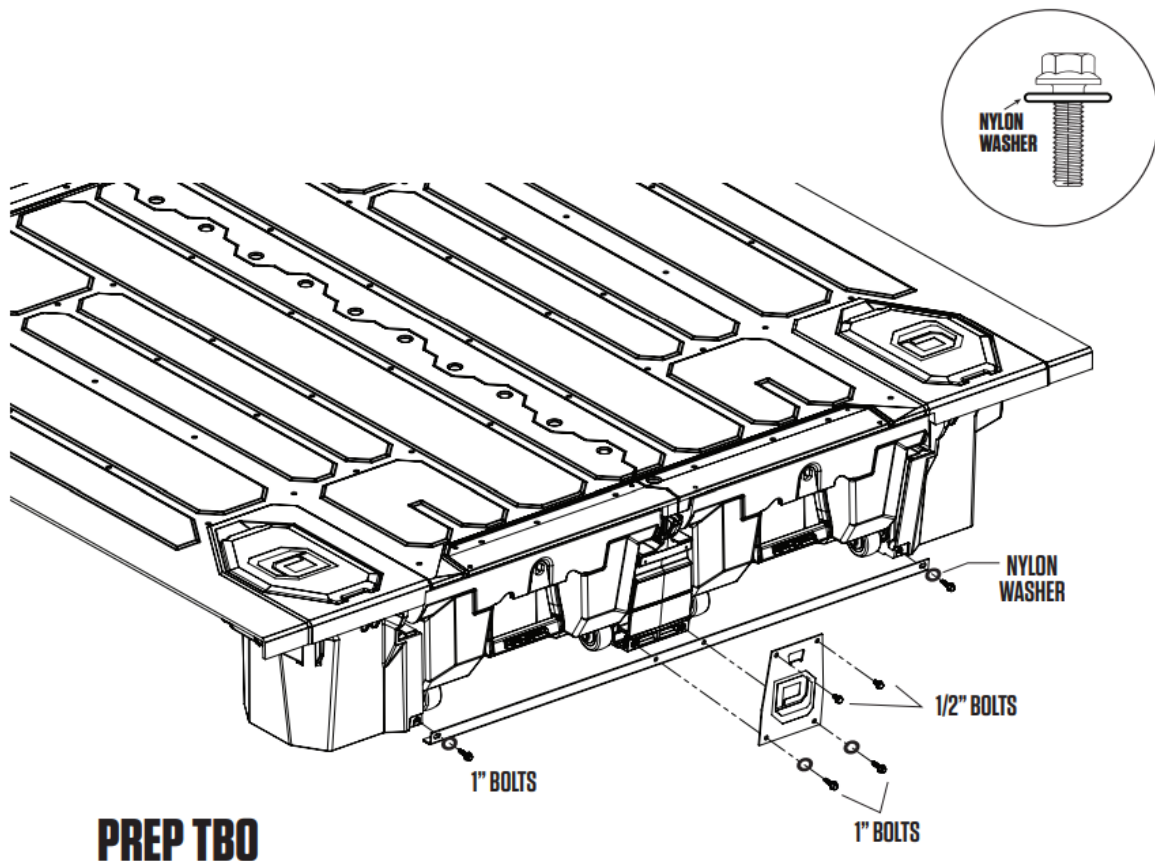

PREP TBO


HELPFUL TIP: The bottle opener goes on the outside of the torsion brace.

RECOMMENDED TORQUE: 1" Bolts – 27 in-lb. | 1/2" Bolts – 18 in-lb.

INSTALL: J-HOOKS

- Insert the J-hook through the tailgate hole on the passenger side tailgate ammo can and loop J-hook through tie down or mounting bracket in the bed. Screw on the winged-spherical nut-washer, round side down, on the J-hook and fasten until finger tight; BAG J3. Don't tighten yet. If you do, you won't be able to center the system properly in your bed.
- Insert the J-hook through the curbside hole on the passenger side cab side ammo can and loop J-hook through tie down or mounting bracket in the bed. Screw on the winged-spherical nut-washer, round side down, on the J-hook and fasten until finger tight; BAG J5. Don't tighten yet.
- Repeat with J-hooks and ammo cans on the driver's side.

IMPORTANT: Leave all J-hook nuts loose.

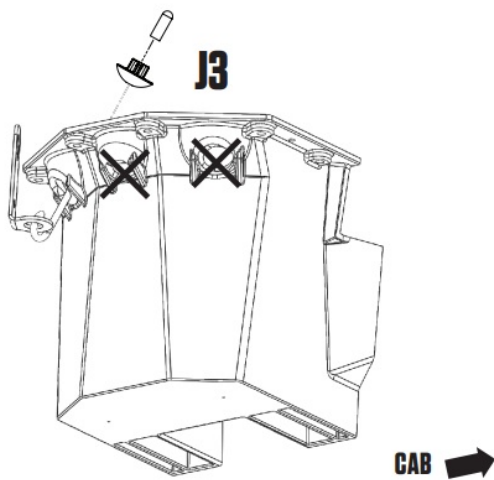


PASSENGER SIDE
TAILGATE AMMO CAN



PASSENGER SIDE
CABSIDE AMMO CAN

TIGHTEN: J-HOOKS

- Finally, tighten the J-hooks, gradually and alternatively. DO NOT OVER-TIGHTEN.
IMPORTANT: Make sure to center the vert in the center of your bed. Don't worry about side gaps, center the vert on the center rib/trough of the bed.
- Install thread bolt protectors on J-hook ends; BAG PREP TBO.
- Install the ruler by aligning the ruler holes with the inserts in the decks. Use your fingers to start the 1/4" screws to avoid cross-threading. Tighten just until snug with a 1/8" hex wrench.
- Insert lock core plugs, or install locks if purchased.
- Nice job. Your mother and I are very proud of you.

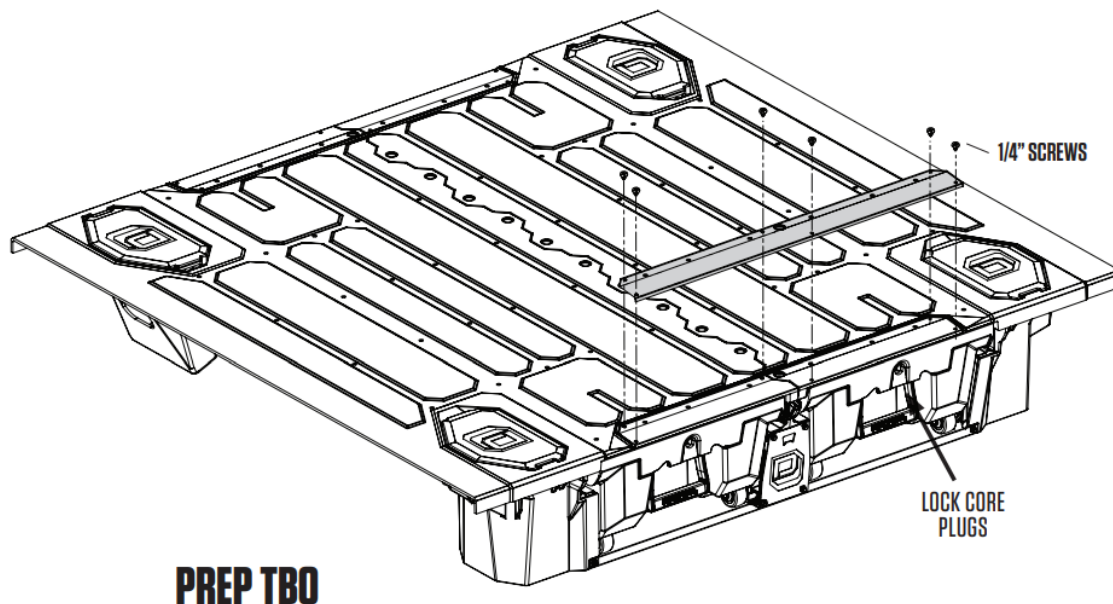

RECOMMENDED TORQUE: J-hooks - 9 in-lb.

IMPORTANT: Grab your favorite beverage, crack ‘er open in the bottle opener and make a toast to your truck. You did it. Immediately post a photo of your significant other, child, or canine (in no order of significance – please someone show us your pet alligator) appreciating your accomplishment. Add hashtag #DECKEDUSA | @DECKEDUSA.

DECKED Products – Limited Lifetime Warranty

(Valid on DECKED Products purchased on or after 8/1/2021)

DECKED LLC, (the “Manufacturer”) warrants the original purchaser only that DECKED Truck and Van Products (The “DECKED” Product) will be free from defects in material and workmanship from the date of purchase and continuing for the expected lifetime of the DECKED Product. The DECKED Product must be registered by the original purchaser with DECKED, LLC via its website at, www.decked.com/register and a copy of the original sales receipt must be supplied to the Manufacturer at the time a warranty claim is made.

This warranty terminates if the original purchaser transfers the DECKED Product to any other person or vehicle.

WHAT IS COVERED

All DECKED Products identified above on or after August 1, 2021

DECKED’s Limited Lifetime Warranty applies to US and Canadian customers only. International shipments are covered by DECKED’s 3 Year Limited Warranty.

WHAT WE WILL DO TO CORRECT PROBLEMS

Subject to the limitations and exclusions described in this limited warranty, the Manufacturer will remedy defects in workmanship or materials by providing one of the following

remedies at its option and without charge to the original purchaser for parts: (a) repairing the defective portion of the DECKED Product or (b) replacing the entire DECKED Product.

In addition, the Manufacturer may elect at its option not to repair or replace the DECKED Product, but rather issue to the original purchaser a refund equal to the purchase price paid for the DECKED Product or a credit to be used towards the purchase of a new DECKED Product.

WHAT IS NOT COVERED

This limited warranty expressly excludes:

- Damage or defects caused by normal wear and tear, cosmetic rust, scratches, accidents, unlawful vehicle

operation, installation in a non-supported vehicle or installed in a vehicle that does match the DECKED Product's SKU-intended fitment or use, or modification of the product, or any types of repair of a DECKED Product other than those authorized or provided by the Manufacturer.

- Damage or defects resulting from conditions beyond the Manufacturer's control and specifications including, but not limited to the modification, misuse, overloading, or failure to assemble, install or use the DECKED Product in accordance with the Manufacturer's written instructions or guidelines included with the DECKED Product or separately made available to the original purchaser.
- Damage to the contents of the DECKED product or vehicle.
- TO THE EXTENT PERMITTED BY LAW, IN NO EVENT SHALL THE MANUFACTURER BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, INCLUDING ECONOMIC LOSS, WHETHER RESULTING FROM NONPERFORMANCE, USE, MISUSE, OR INABILITY TO USE THE DECKED PRODUCT OR THE MANUFACTURER'S NEGLIGENCE.

NO OTHER EXPRESS WARRANTY APPLIES

This Limited Lifetime Warranty is the sole and exclusive warranty for DECKED Products. No employee, agent, dealer, or other person is authorized to alter this warranty or make any other warranty on behalf of DECKED LLC.

NOTIFICATION PROCEDURES

If the DECKED Product does not conform with the terms of this limited warranty, the original purchaser must promptly notify the Manufacturer in writing upon discovery of the nonconformity. In order to receive remedies under this limited warranty, a warranty claim must have been registered with DECKED LLC by the original purchaser, must describe the nature of the nonconformity of the product, and include a copy of the original sales receipt, invoice, or other proof of purchase and be accompanied with photos or video. Repairs or modifications made to the DECKED Product by other than the Manufacturer or its authorized agent will nullify this limited warranty. Coverage under this limited warranty is conditioned at all times upon the owner's compliance with these required registration, notification, and repair procedures.

Product registration may be performed at: <https://decked.com/register>

Warranty claims must include reciprocal contact information and may be made via certified mail or email to:

DECKED Warranty and Claims

Contact info:

DECKED LLC

PO Box 885

Ketchum, ID 83340

warranty@decked.com

208-806-0251

DECKED.COM | #DECKEDUSA | @DECKEDUSA



Full size Drawer System: PATENT PROTECTED: US9527454-B2, USD719905 S, US9168874 B2, CA2969118A1

Midsized Drawer System: PATENT PROTECTED: US10988087B2, 112017005448.6

DECKED Tool Box: PATENT PROTECTED: US20210062581A1

For more information on DECKED's patents visit: [DECKED.com/patents](https://decked.com/patents)



DT1/DT2 | v.8

Watch short installation videos at www.decked.com/video

Register your system at www.decked.com/warranty




VERSION 8










DECKED.COM | 208.806.0251

RC416

Documents / Resources

	<p>DECKED DT1 In-Vehicle Storage Systems [pdf] Instruction Manual DT1, DT2, In-Vehicle Storage Systems, Storage Systems, DT1, In-Vehicle Storage</p>
--	--

References

-  [DECKED Truck Bed Storage, Tool Boxes & Truck Accessories](#)
-  [GASKETS – DECKED](#)
-  [Patents – DECKED, LLC CASES](#)
-  [Handle Installation Video - DECKED](#)
-  [Install Drawers and Tailgate Wheels – DECKED](#)
-  [Register Your DECKED Truck Bed Organizer System | DECKED Accessories](#)
-  [Truck Bed Storage and Organizer Videos from Decked](#)
-  [DECKED® Lifetime Warranty](#)
-  [Register Your DECKED Truck Bed Organizer System | DECKED Accessories](#)