



**DESIGN ML-662**  
Anthracite Oak  
Look



## DESIGN ML-662 Anthracite Oak Look Installation Guide

[Home](#) » [DESIGN](#) » DESIGN ML-662 Anthracite Oak Look Installation Guide 

### Contents

- [1 DESIGN ML-662 Anthracite Oak Look](#)
- [2 Product Usage Instructions](#)
- [3 Installation](#)
- [4 PARTS](#)
- [5 Installation STEP](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)



### DESIGN ML-662 Anthracite Oak Look



## Product Specifications

- Ax1
- Bx1
- Cx1
- Dx1
- Ex2
- Fx1
- Gx1
- Hx1
- Ix2
- Jx1
- Kx4
- Lx6
- Mx2
- Nx2
- Ox2
- Px4
- Qx6
- Rx16
- Sx10
- M4x10mm
- Tx9
- Ux30
- Vx2
- Wx4
- Xx4
- Yx1
- Zx1
- M4x14mm

## Product Usage Instructions

### Step 1

Assemble the following components:

- Bx1
- Cx1
- Dx1
- Lx6

### Step 2

Follow these instructions:

- Bx1
- Sx2
- Rx4
- Jx1
- lx2

### Step 3

Proceed with the assembly by using:

- Bx1
- Ax1
- Ux2

### Step 4

Continue with the assembly using:

- Dx1
- Cx1
- Ux4

### Step 5

Assemble the following components:

- Ex2

### Step 6

Progress with the assembly by adding:

- Fx1
- Tx9

### Step 7

Next, add the following components:

- Kx4
- Hx1
- Gx1

### **Step 8**

Continue with the following steps:

1. Mx2 (Left)

2 (Right)

### **Step 9**

Add the following components:

- Nx2
- Ox2
- Sx4
- Px4


### **Step 10**

### **Frequently Asked Questions (FAQ)**






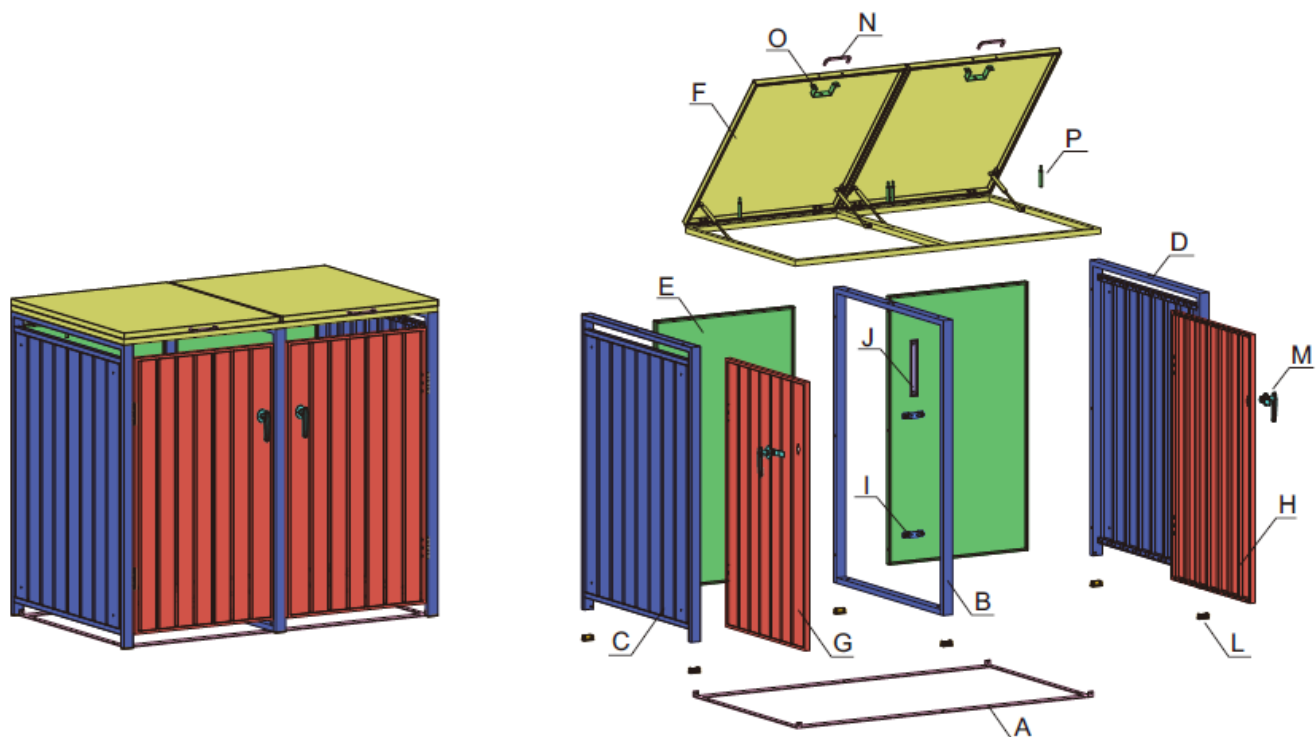






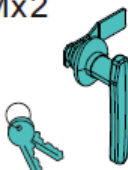






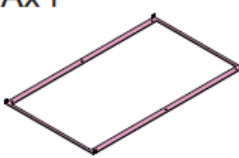






#### **Q: What should I do if I have leftover parts after assembly?**

A: If you have extra parts after completing the assembly, refer back to the manual to ensure all steps were followed correctly. If you are still unsure, please contact customer support for assistance.

### **Installation**



## PARTS

Ax1 	Bx1 	Cx1 	Dx1 	Ex2 		
Fx1 	Gx1 	Hx1 	Ix2 	Jx1 	Kx4 	Lx6 
Mx2 	Nx2 	Ox2 	Px4 	Qx6 	Rx16  M4x10mm	Sx10  M4x20mm
Tx9  M4x30mm	Ux30  M4x14mm	Vx2 	Wx4 	Xx4 	Yx1 	Zx1 


**NOTES:** If you want to purchase the similar cube, use parts S,W,X.

## Installation STEP


### 1. STEP 1




2. STEP 2

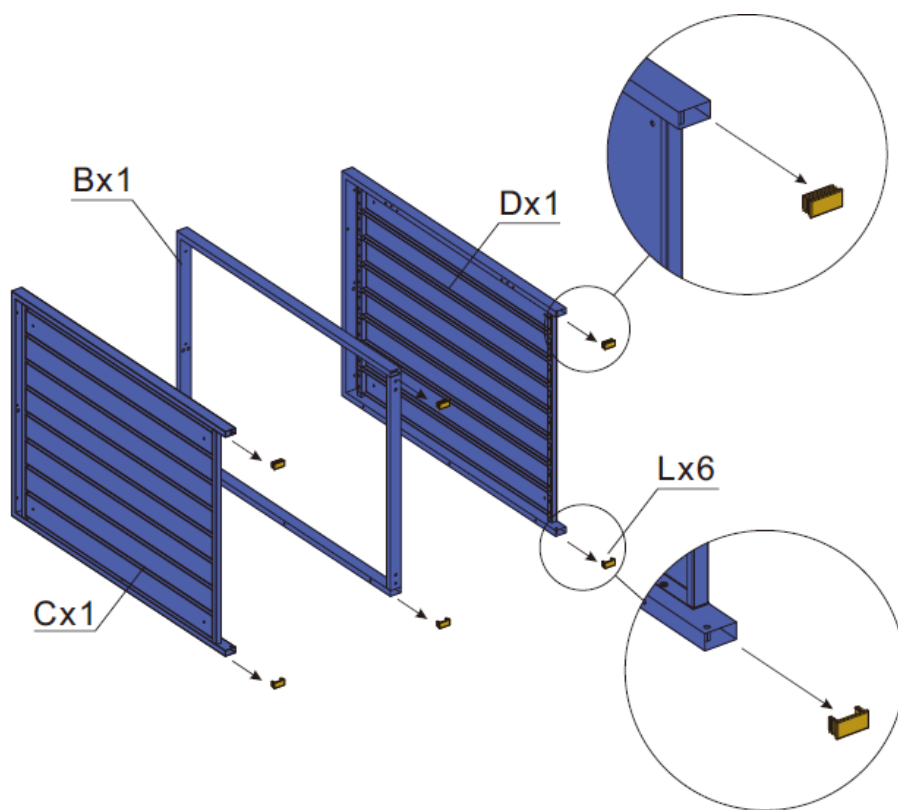


3. STEP 3

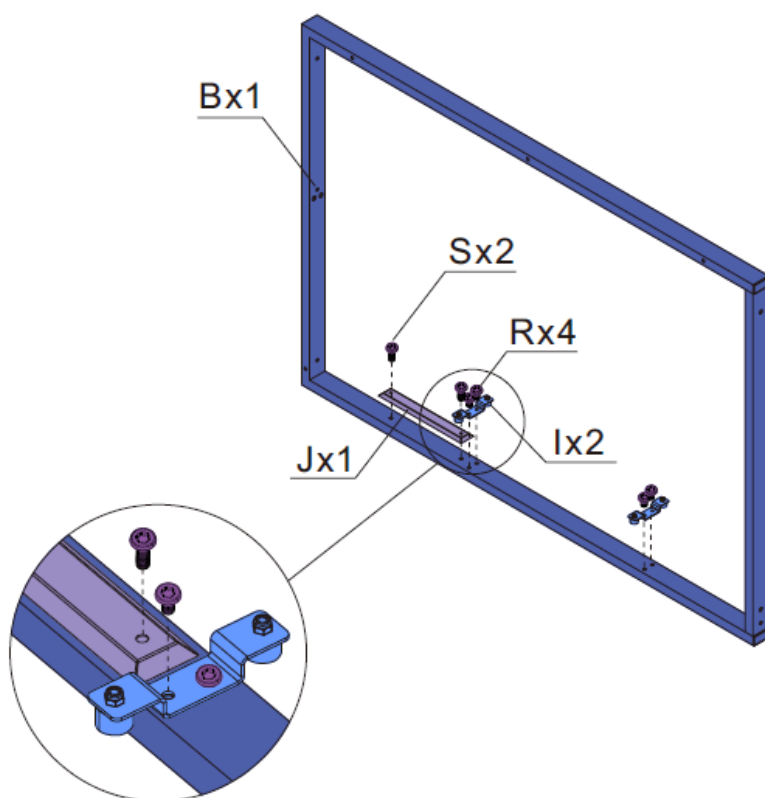

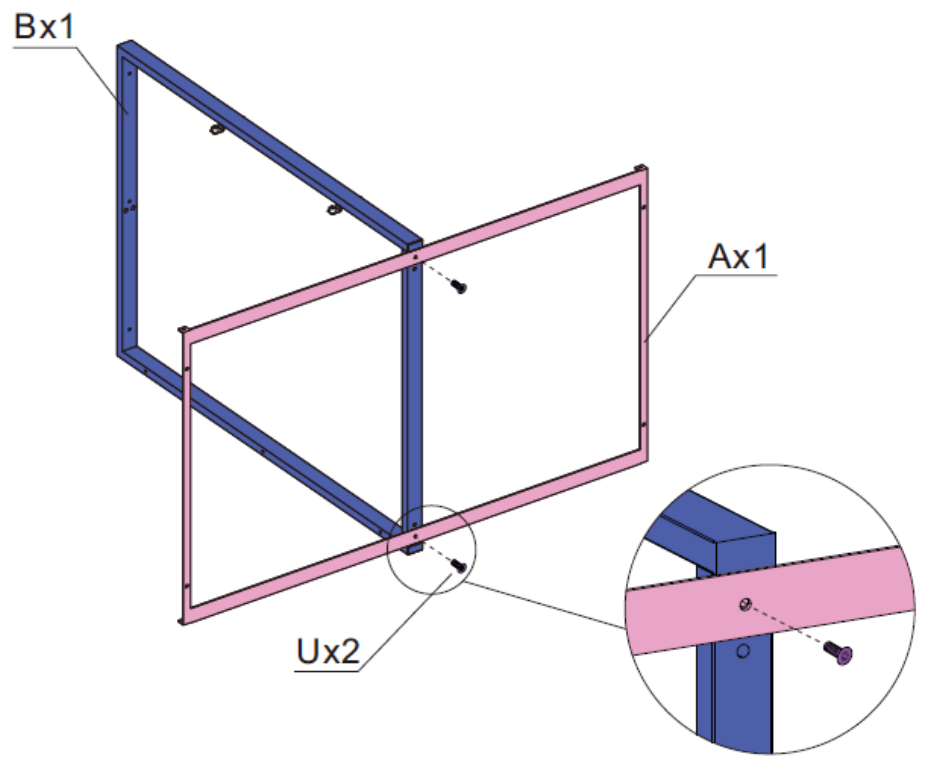



4. STEP4

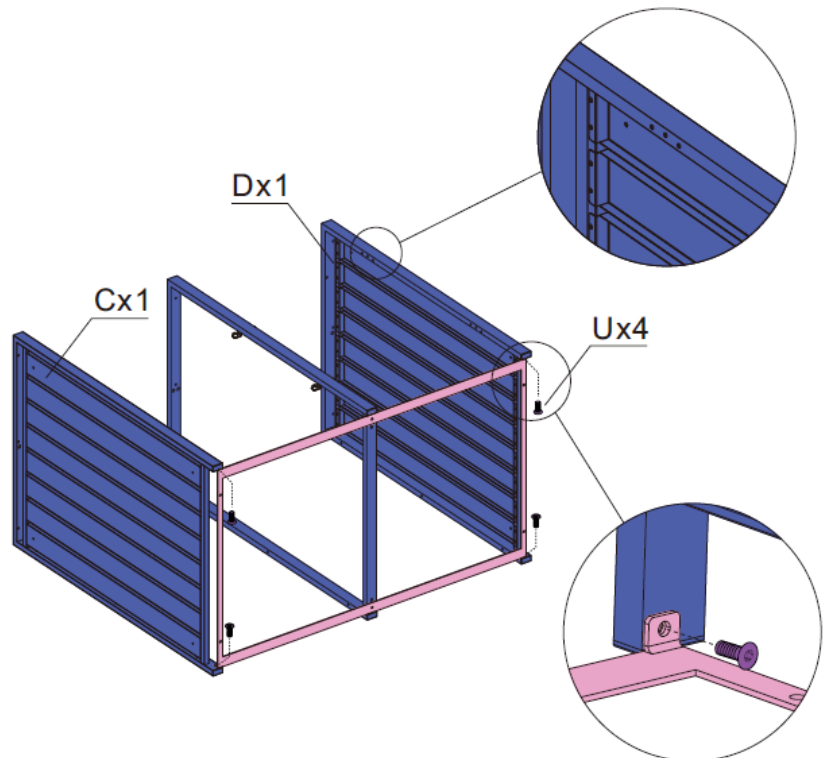


5. STEP5




6. STEP 6

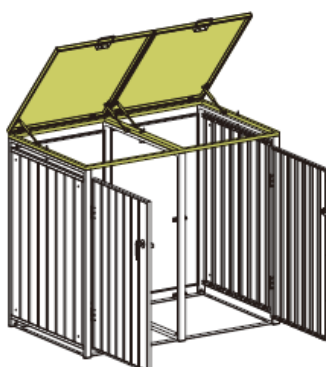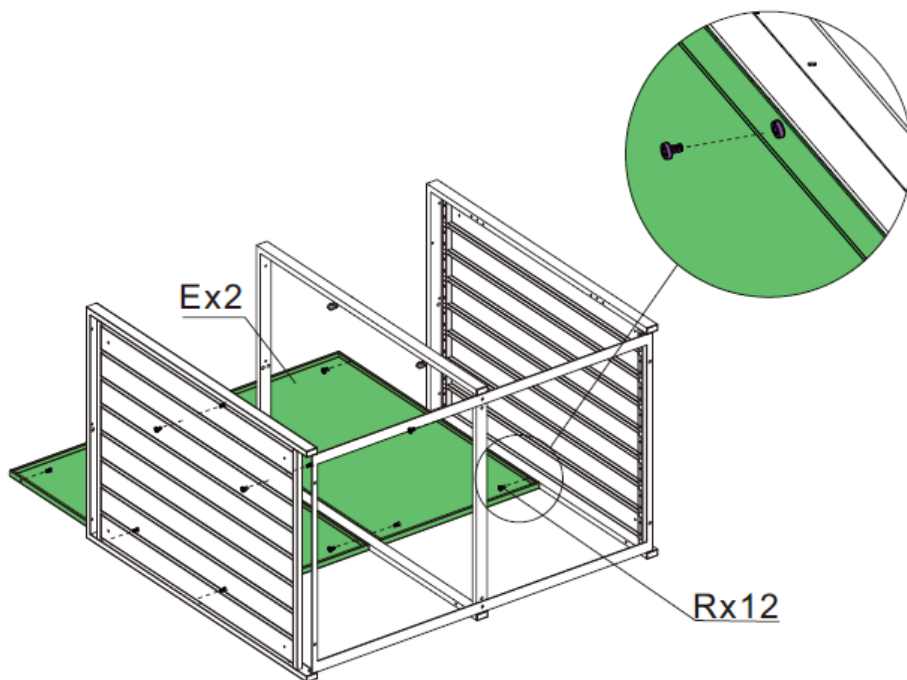



7. STEP 7

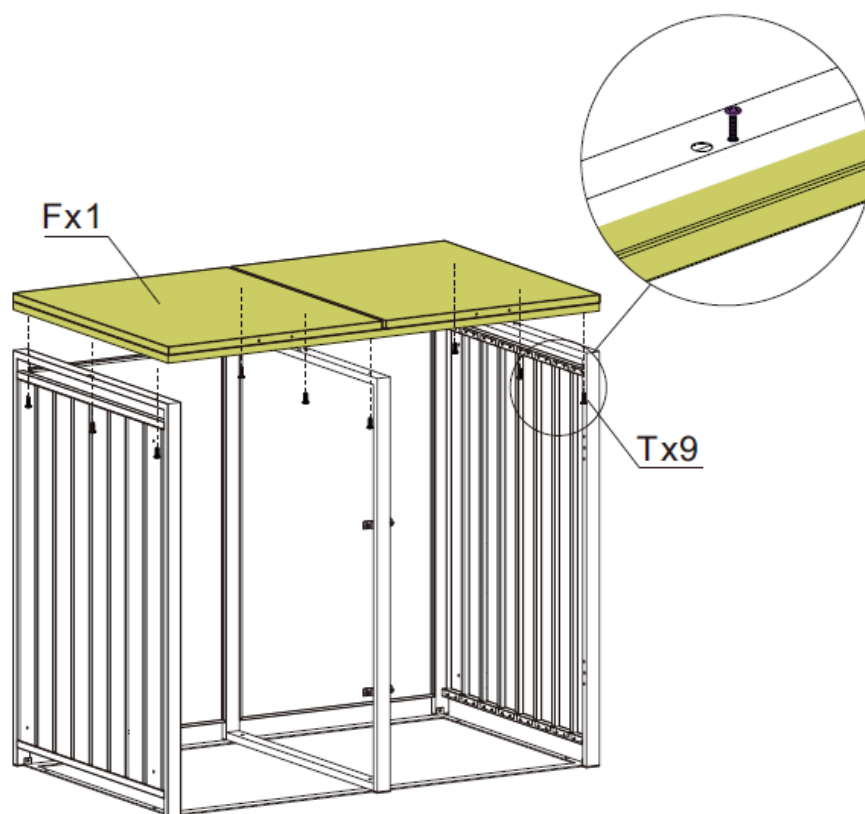




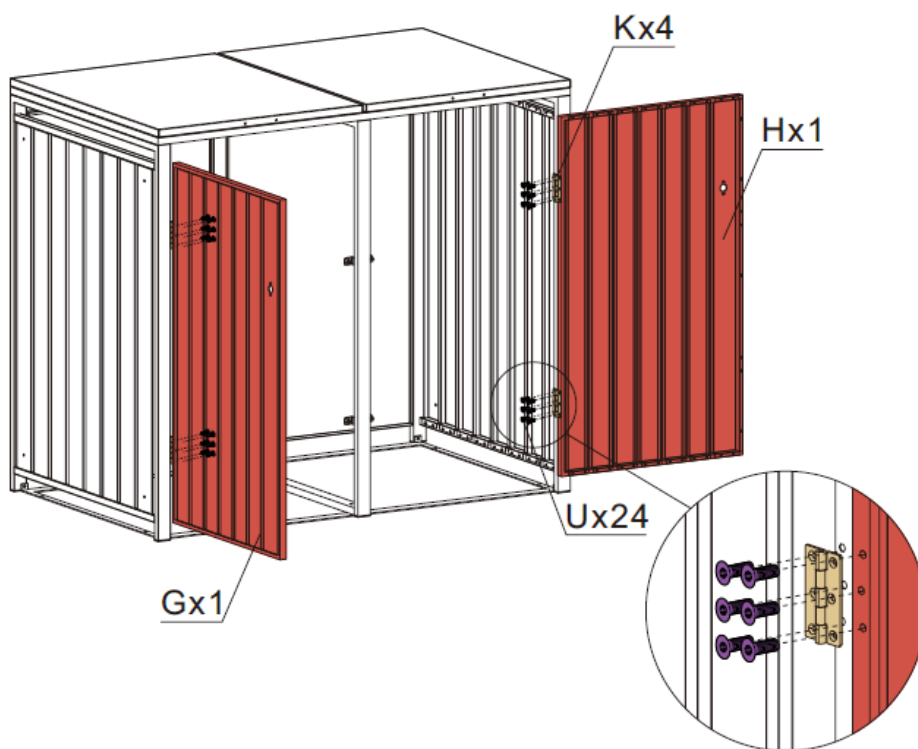


## 8. STEP 8

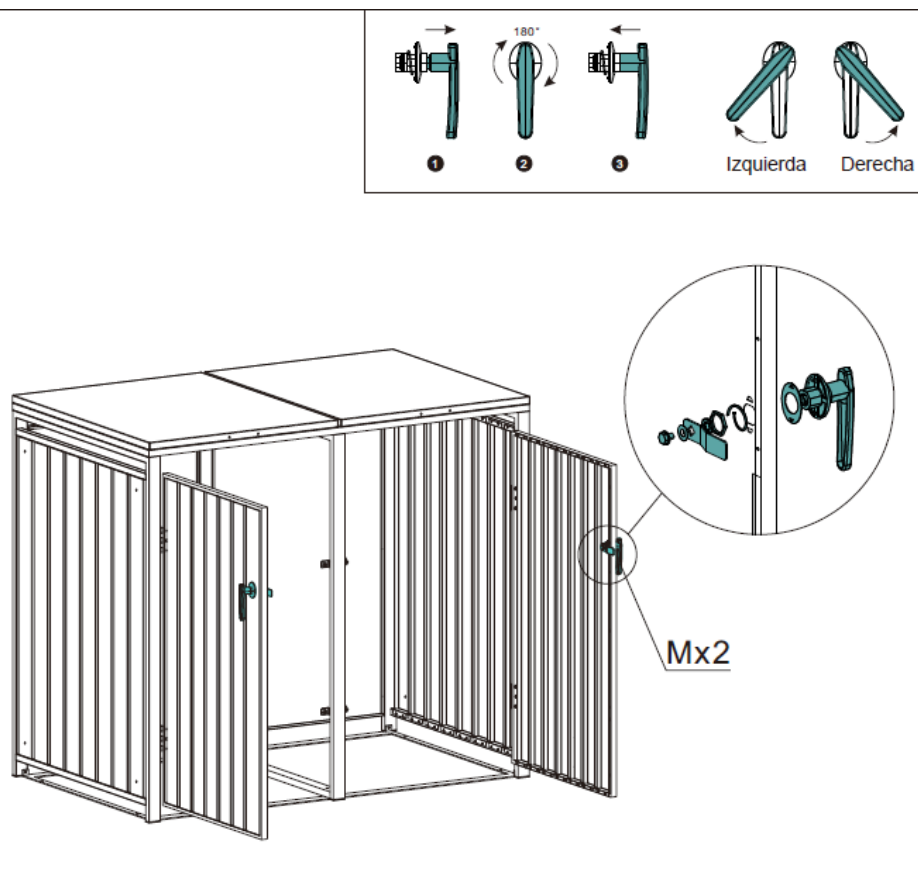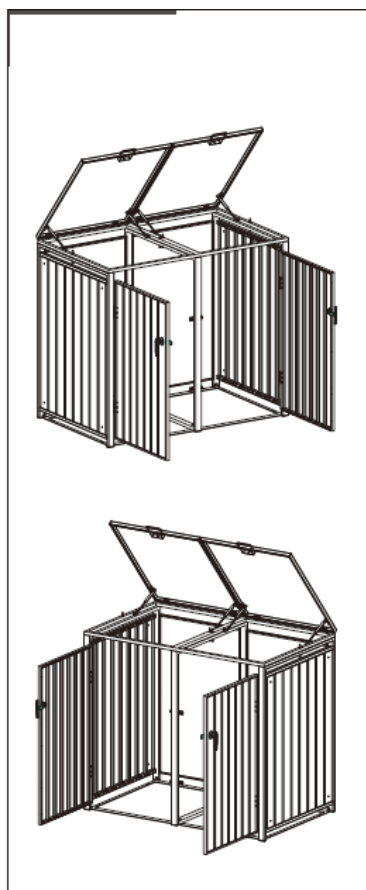


## 9. STEP9

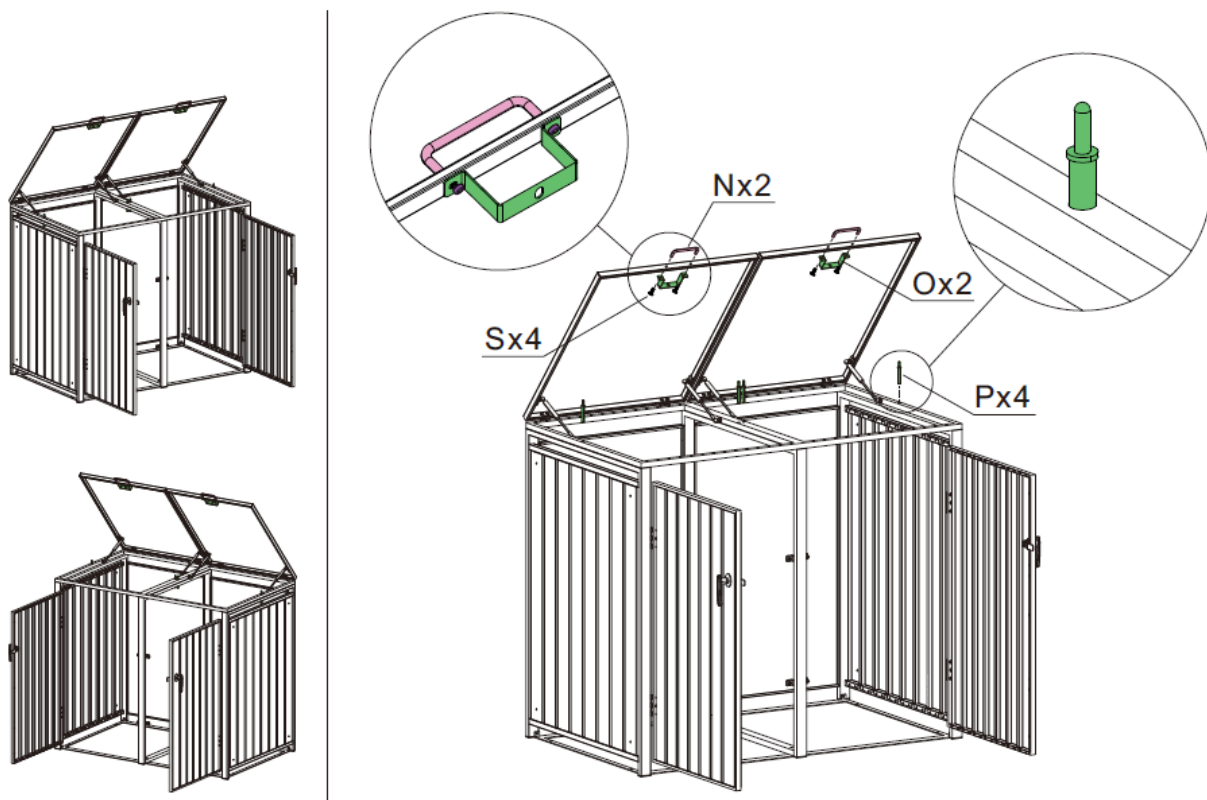

10. STEP10

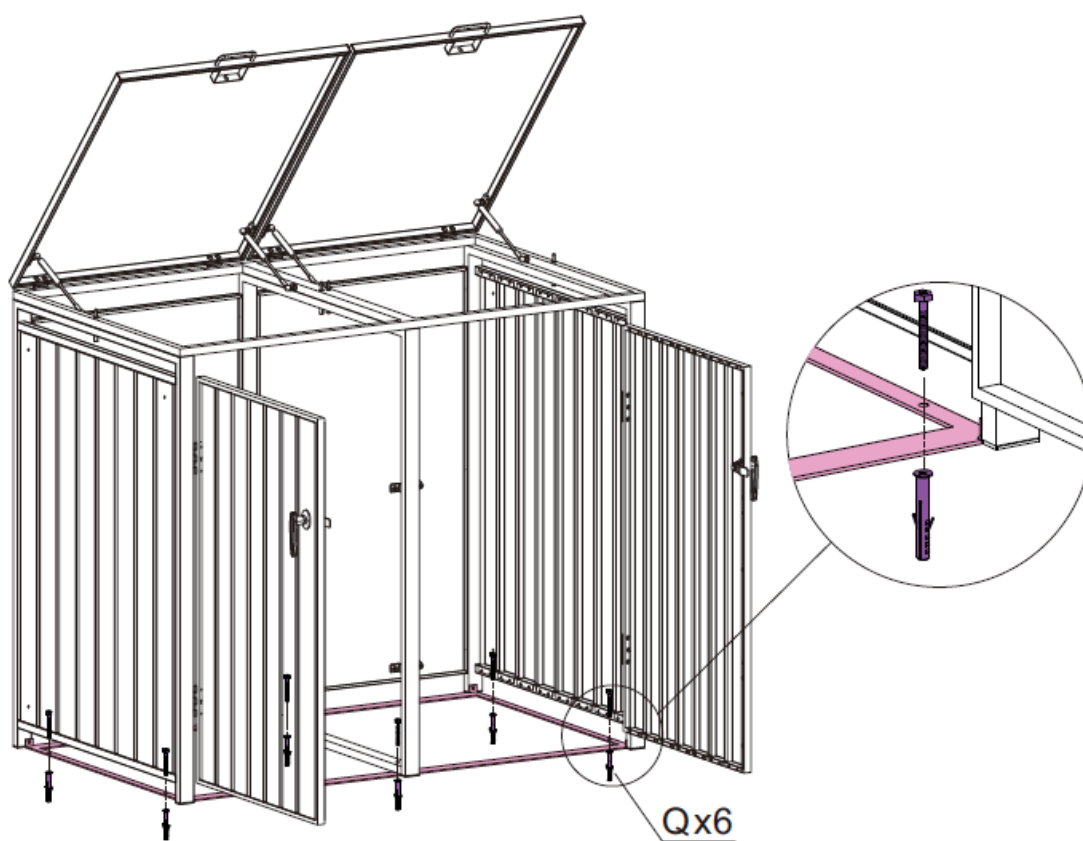

11. STEP11

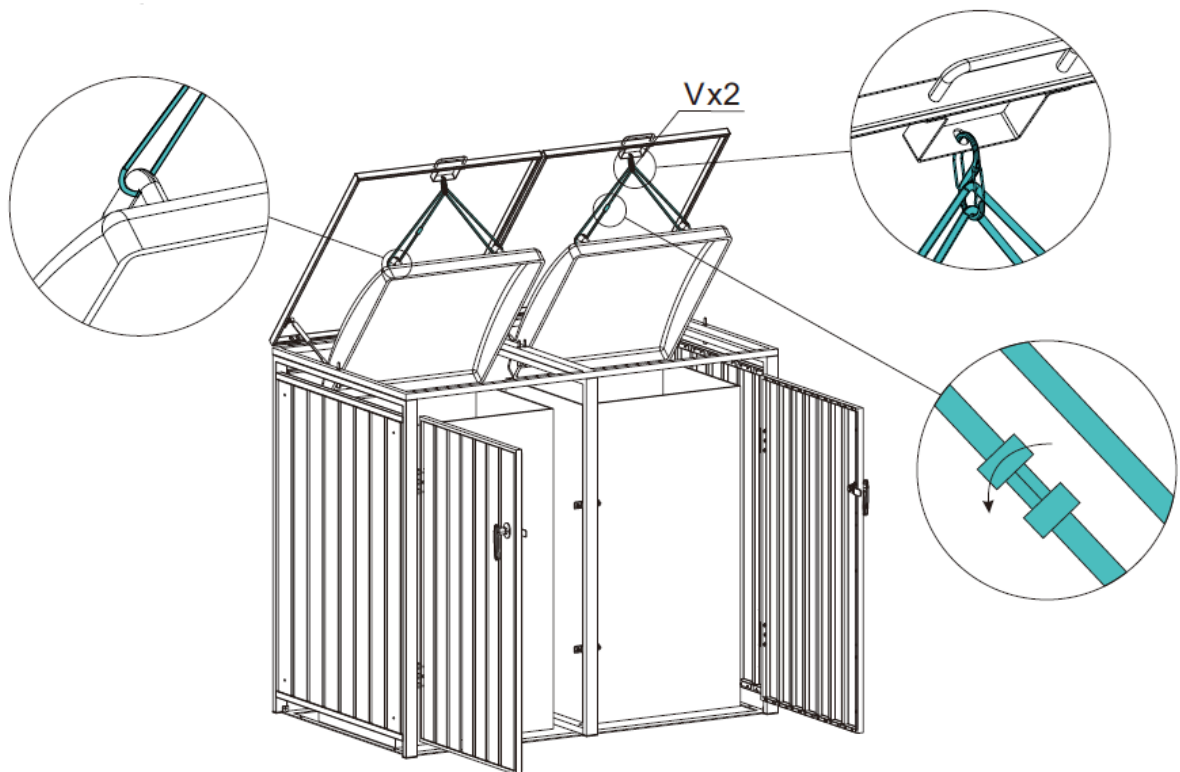

## Documents / Resources



### [DESIGN ML-662 Anthracite Oak Look](#) [pdf] Installation Guide

ML-662, ML-664, ML-666, 1131, ML-662 Anthracite Oak Look, ML-662, Anthracite Oak Look, Oak Look, Look

## References

- [User Manual](#)

[Manuals+](#). [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.