



Digital Watchdog DWC-VFFMW Flush Mount Low Profile Vandal Dome IP Cameras User Guide

[Home](#) » [DIGITAL WATCHDOG](#) » Digital Watchdog DWC-VFFMW Flush Mount Low Profile Vandal Dome IP Cameras User Guide 

Contents

- [1 Digital Watchdog DWC-VFFMW Flush Mount Low Profile Vandal Dome IP Cameras](#)
- [2 Product Information](#)
- [3 Usage Instructions](#)
- [4 WHAT'S IN THE BOX](#)
- [5 INSTALLATION](#)
- [6 CONTACT](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)



Digital Watchdog DWC-VFFMW Flush Mount Low Profile Vandal Dome IP Cameras



Product Information

Flush mount for low-profile vandal dome IP cameras (DWC-VFFMW)

The flush mount for low-profile vandal dome IP cameras is a mounting accessory designed to securely and discreetly mount Digital Watchdog's DWC-M(P)V8 cameras onto a surface. The mount has a low-profile, minimizing the visibility of the camera and reducing the risk of tampering. The mount includes a base, a 3-point in-ceiling wing, and mounting screws. The mount is compatible with specific DWC-M(P)V8 camera models and comes with a mounting template and a quick start guide for easy installation.

Usage Instructions


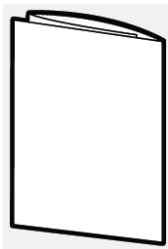

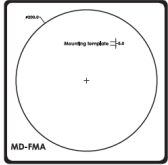
1. Before installation, remove the magnetic cover from the flush mount.
2. Use the mounting template to mark and drill the necessary holes in the mounting surface.
3. Adjust the 3-point in-ceiling wing using a screwdriver. Twist the screws to tighten and expand until the flush mount is secured to the mounting surface.
4. To mount the camera to the mounting accessory, remove the dome from the camera base using the wrench included with the camera.
 - **(Note:** Do not touch the lenses when handling the camera modules.)
5. Pass wires through the flush mount base and make all necessary connections.
6. Secure the camera to the flush mount using the appropriate mounting screws. Refer to the table below for screw size:

Camera part number	Mounting screw size
DWC-MV82DiVT	25mm mounting screws
DWC-MV82WiATW, DWC-MPV82WiATW	16mm mounting screws
	3-point ceiling wings
DWC-MV85WiATW, DWC-MPV85WiATW	16mm mounting screws
	Flush mount base
DWC-MVC8WiATW, DWC-MPVC8WiATW	16mm mounting screws
	Camera module
DWC-MVC8Wi28TW, DWC-MPVC8Wi28TW	25mm mounting screws
	Camera dome cover

- Adjust the camera's position and angle. Secure the dome cover to the camera base using the screws included with the camera. See the camera's quick start guide for more information.
- Complete the installation by reattaching the magnetic cover over the camera dome.

Note: For additional support materials and tools, visit <http://www.digital-watchdog.com/resources> and search for your product by entering the part number in the "Search by Product" search bar. All supported materials, including manuals and quick start guides (QSGs), will appear in the results.

WHAT'S IN THE BOX


Camera Mounting Screws for DW C-M(P)V8 Cameras (25mm)		2	Quick Setup Guide		1
Camera Mounting Screws for DW C-M(P)VC Cameras (16mm)		2	Mounting Template		1


INSTALLATION

1. Before the installation, remove the magnetic cover from the flush mount.
2. Using the mounting template mark and drill the necessary holes in the mounting surface.
3. Adjust the 3-point in-ceiling wing using a screwdriver. Twist the screws to tighten and expand until the flush mount is secured to the mounting surface.
4. To mount the camera to the mounting accessory, remove the dome from the camera base using the wrench included

- **NOTE:** Do not touch the lenses when handling the camera modules.

5. Pass wires through the flush mount base and make all necessary connections.

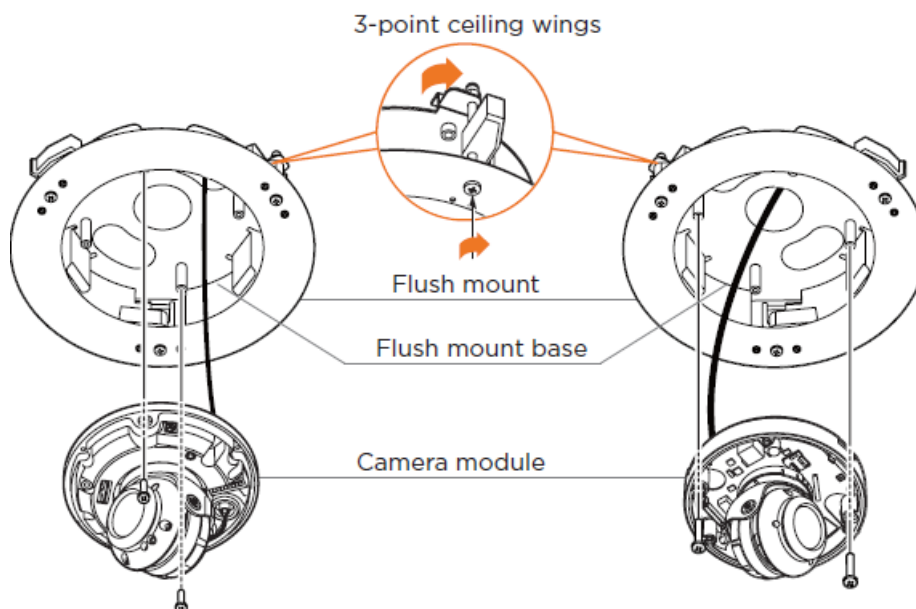

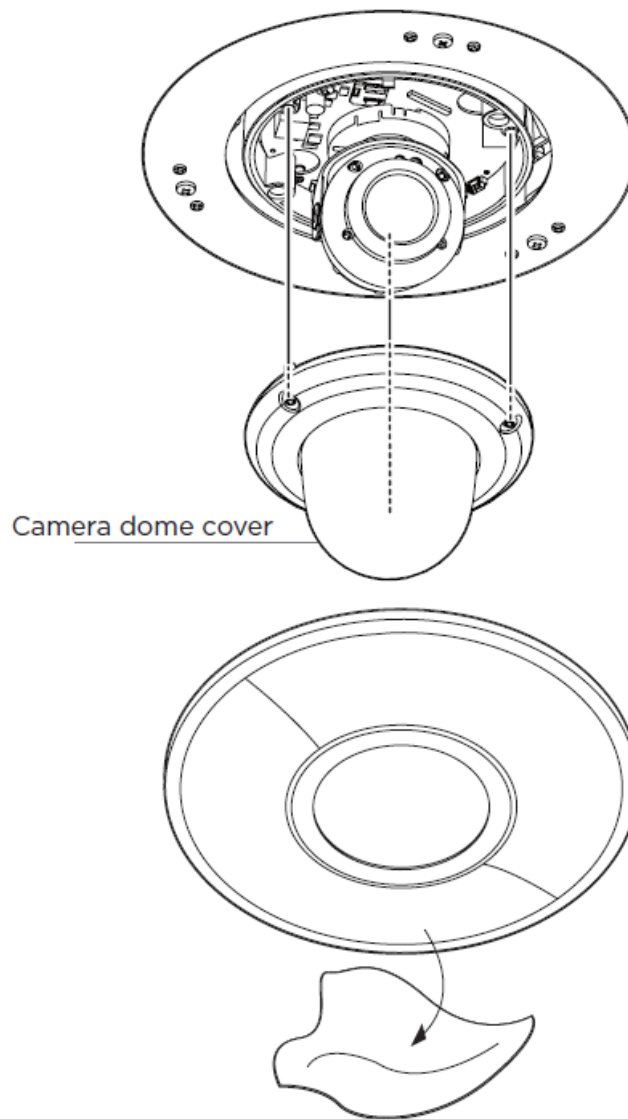

Camera dome cover

6. Secure the camera to the flush mount using the appropriate mounting screws. Refer to the table below:

Camera part number	Mounting screw size
DWC-MV82DiVT DWC-MV82WiATW, DWC-MPV82WiATW DWC-MV85WiATW, D WC-MPV85WiATW	25mm mounting screws
DWC-MVC8WiATW, DWC-MPVC8WiATW DWC-MVC8Wi28TW, DWC-MPVC8Wi28TW	16mm mounting screws

7. Adjust the camera's position and angle. Secure the dome cover to the camera base using the screws included with the camera. See the camera's QSG for more information. Complete the installation by reattaching the

magnetic cover over the camera dome.

CONTACT


- **Tel:** +1 (866) 446-3595
 - (813) 888-9555
- **Technical Support Hours:** 9:00AM – 8:00PM EST, Monday through Friday



digital-watchdog.com

Copyright © Digital Watchdog. All rights reserved.
Specifications and pricing are subject to change without notice.

Documents / Resources

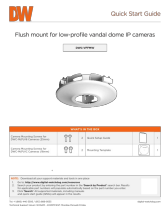	<p>Digital Watchdog DWC-VFFMW Flush Mount Low Profile Vandal Dome IP Cameras [pdf] User Guide</p> <p>DWC-VFFMW Flush Mount Low Profile Vandal Dome IP Cameras, DWC-VFFMW, Flush Mount Low Profile Vandal Dome IP Cameras, Vandal Dome IP Cameras, Dome IP Cameras</p>
---	---

References

- [DW Digital Watchdog I Welcome](#)
- [DW Resources](#)