



EMTEK Keyed Sideplates Installation Guide

[Home](#) » [Emtek](#) » EMTEK Keyed Sideplates Installation Guide 

Contents

- [1 EMTEK Keyed Sideplates](#)
- [2 Installation Guide](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)


EMTEK[®]

EMTEK Keyed Sideplates



Installation Guide

1. Door Prep	2. Door Jamb Prep	Dummy Function
1" Dia. Edge Bores 2-1/4" 2-1/4" 1" 2-3/8" or 2-3/4" 3-5/8" or 5-1/2" 2-1/8" Dia. Bores 1/8" Deep 3/16" Deep	1-1/8" 2-3/4"	
3. Install Bolt and Latch	4. Install Outside Trim Plate Single Cylinder Inside Lever Shown Outside Tailpiece Horizontal Knob Shown Plates and Lever/Knob vary depending on style	
5. Install Inside Trim Plate Double Cylinder Inside Tailpiece Vertical	6. Secure Lever/Knob After lock is installed, tighten set screw with hex wrench provided.	Optional Thru Bolts Thru bolts (provided) may be used on hollow doors instead of wood screws (also provided).

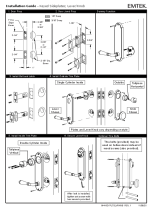

[EMTEK Keyed Sideplates](#) [pdf] Installation Guide

Keyed Sideplates, Sideplates, Keyed

[Manuals+](#)