



EMTEK Non-Keyed Sideplates Installation Guide

[Home](#) » [Emtek](#) » EMTEK Non-Keyed Sideplates Installation Guide 

Contents

- [1 EMTEK Non-Keyed Sideplates](#)
- [2 Installation Guide](#)
- [3 Dummy plate](#)
- [4 Privacy Function](#)
- [5 Optional Thru Bolts](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

EMTEK®


EMTEK Non-Keyed Sideplates




Installation Guide

IMPORTANT!: Lever/Knob location on the sideplate (Top, middle, bottom) varies depending on style. Determine proper orientation **BEFORE** drilling holes.


1. Determine Lever/Knob location & plate orientation

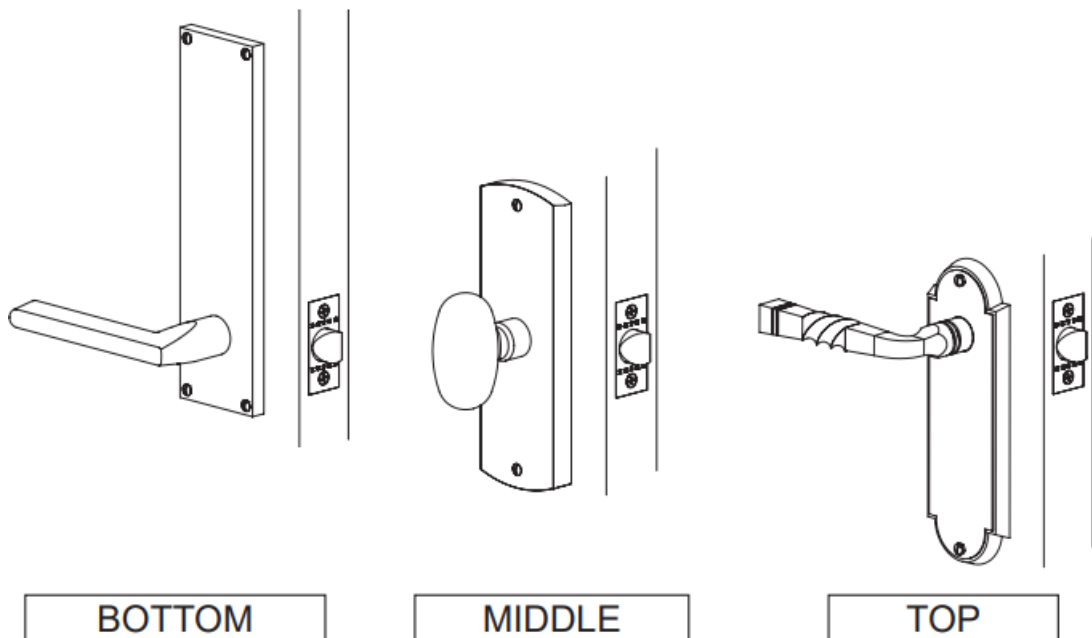

2. Door Prep

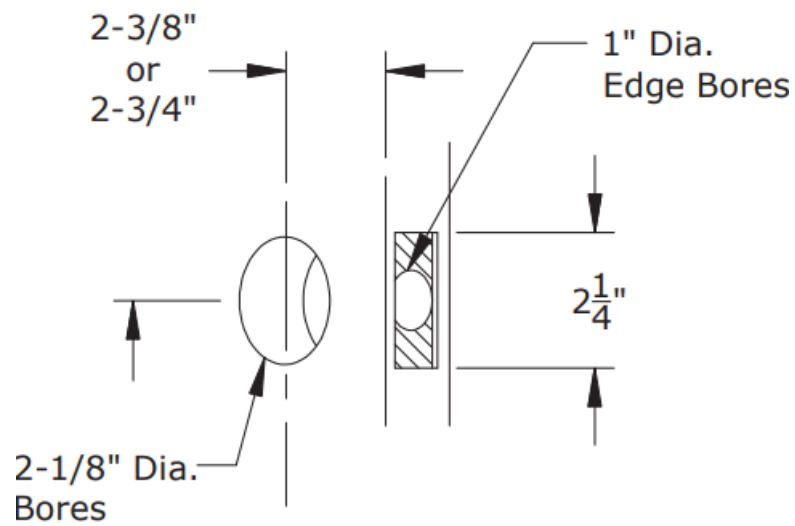


3. Install latch

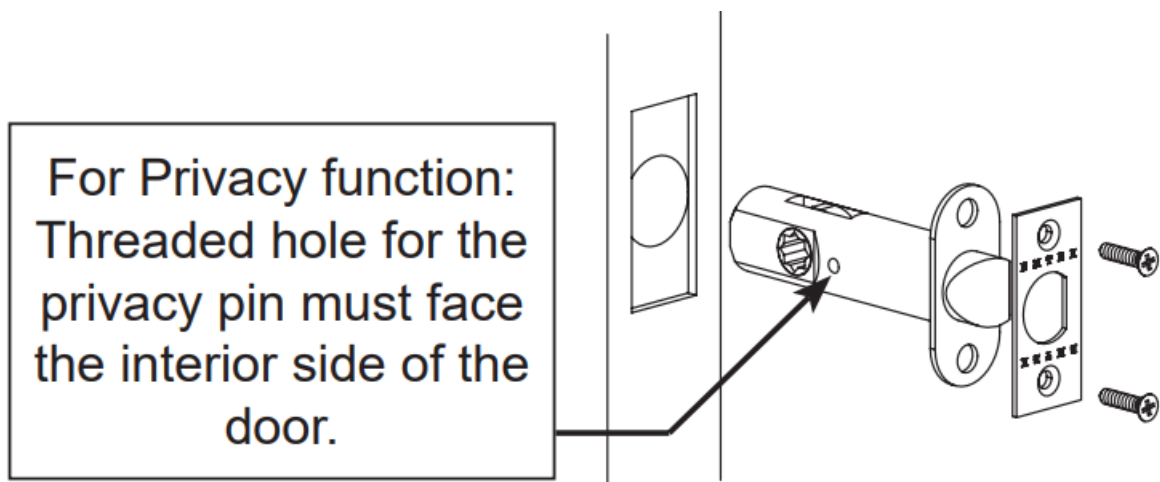


4. Install Inside Trim Plate

Prior to drilling holes, align side plate using Edge Guide (provided)

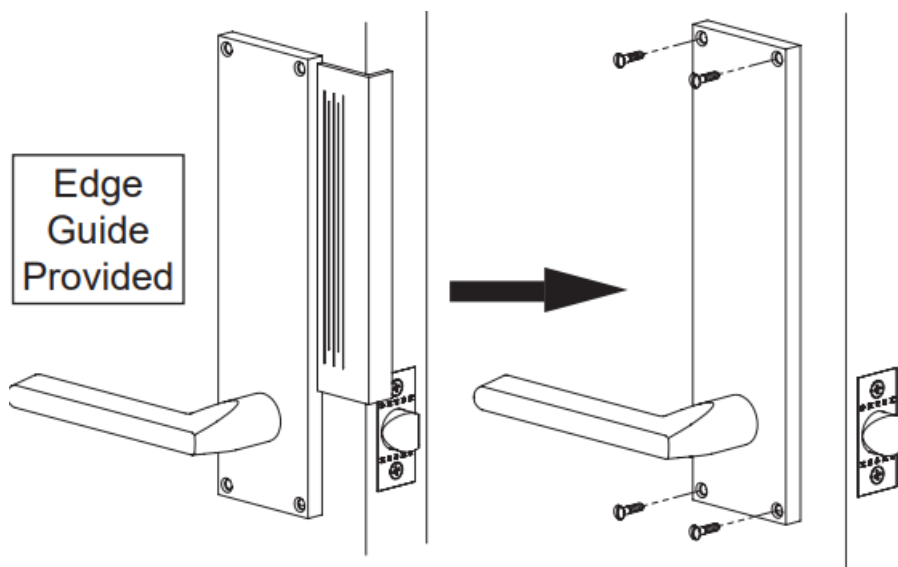


Plates and Lever/Knob vary depending on style

5. Install Outside Trim Plate

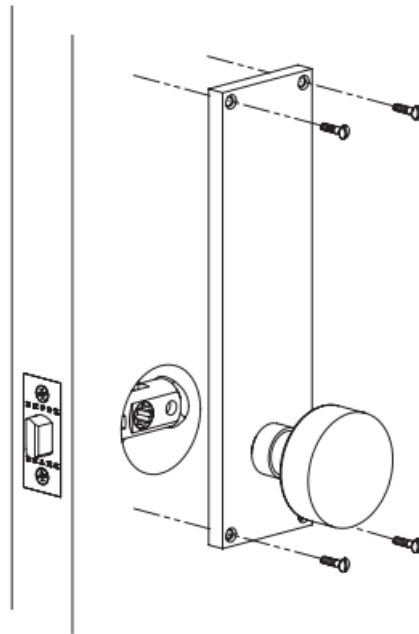


6. Tighten Lever/Knob

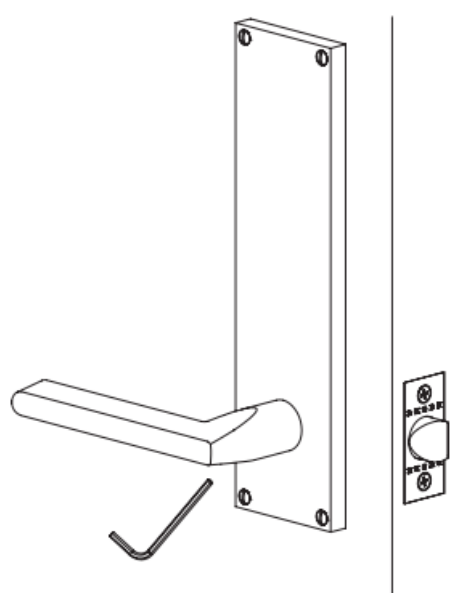


After lock has been installed tighten set screw with Allen Wrench.

Dummy plate


Align Mounting
plate (sideplate not
shown for clarity)

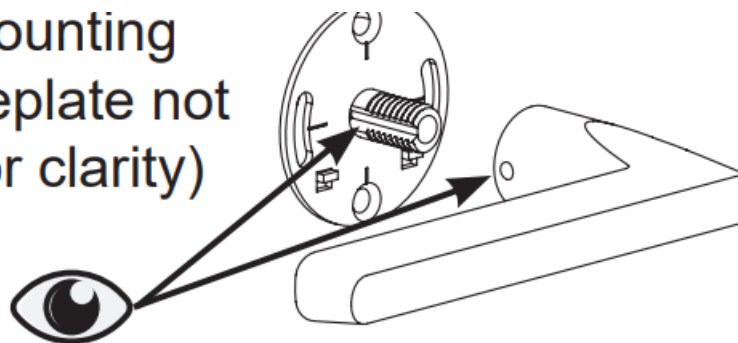


Install Mounting Plate & Adjust for level

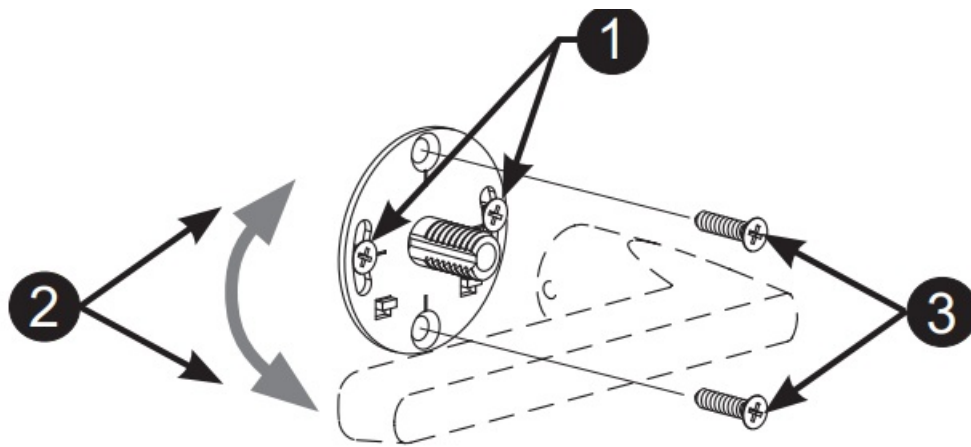

Install Sideplate

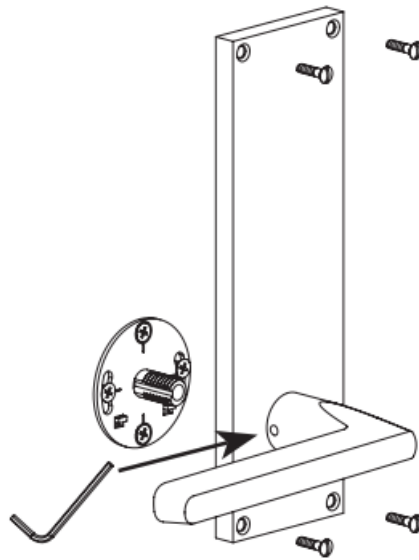


Privacy Function

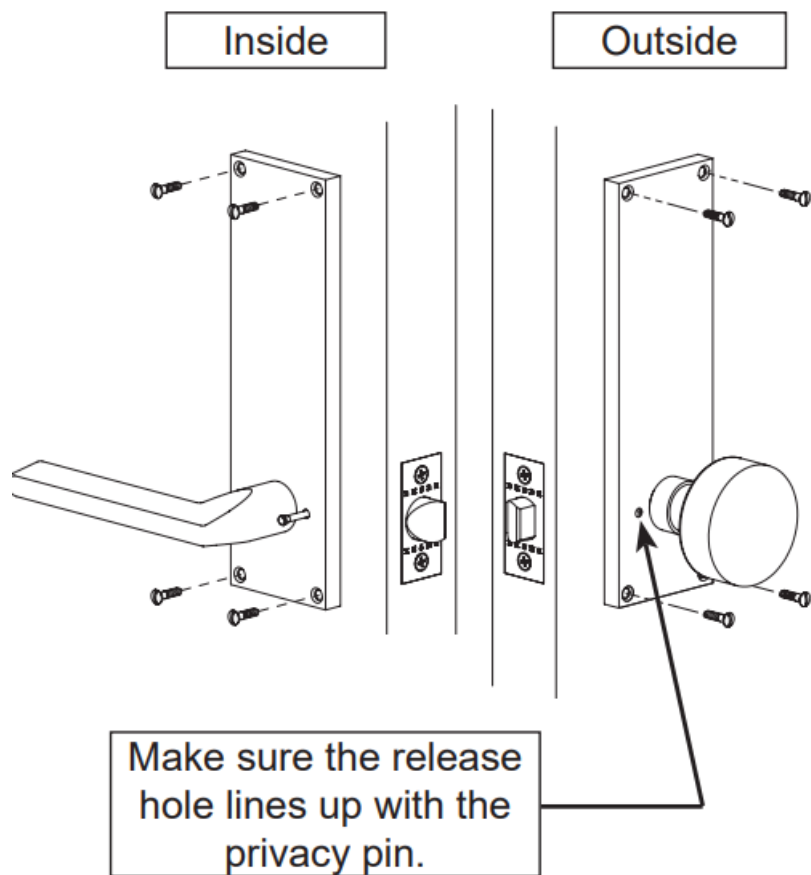


Optional Thru Bolts

Thru bolts (provided) may be used on hollow doors instead of wood screws (also provided).

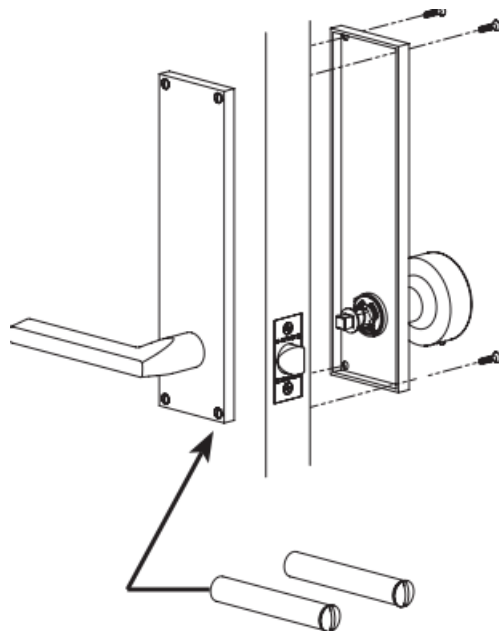

Documents / Resources

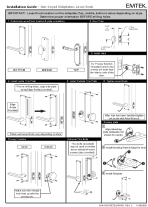

[EMTEK Non-Keyed Sideplates](#) [pdf] Installation Guide Non-Keyed Sideplates, Keyed Sideplates, Sideplates

[Manuals+](#).