




EPIC OFFICE Boost Static Single Sided Fixed Height Workstation Instruction Manual

[Home](#) » [EPIC OFFICE](#) » EPIC OFFICE Boost Static Single Sided Fixed Height Workstation Instruction Manual 



EPIC OFFICE
furniture.com.au


**Boost Static Single Sided Fixed Height Workstation
Frame Instruction Manual**

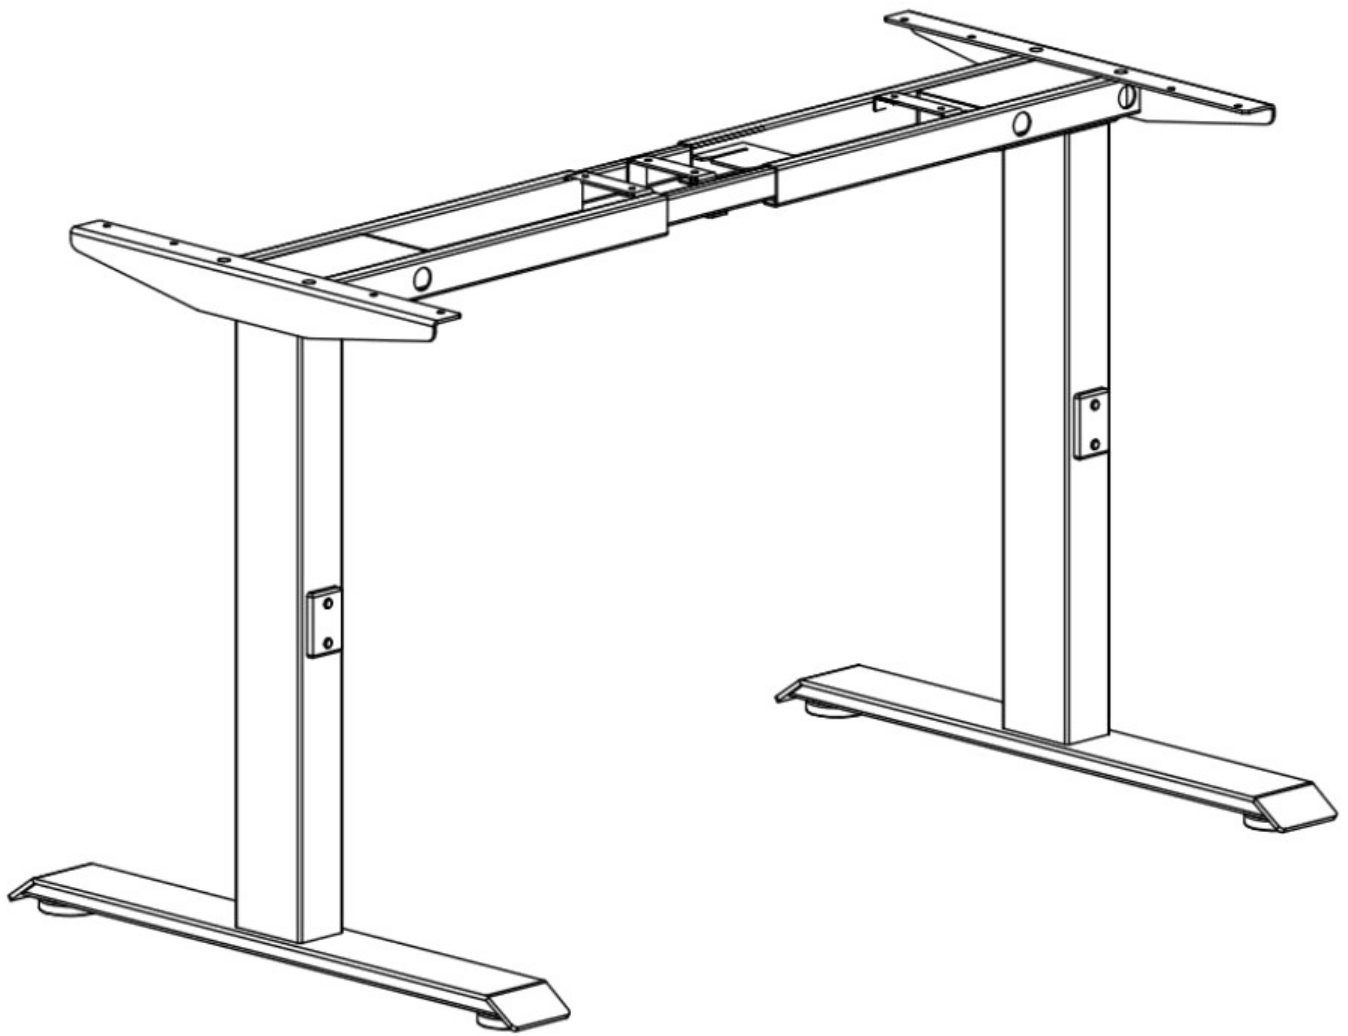

Contents

- [1 Component parts](#)
- [2 Assembly Instructions](#)
- [3 Cable tray installation](#)
- [4 Screen panel installation](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

Component parts

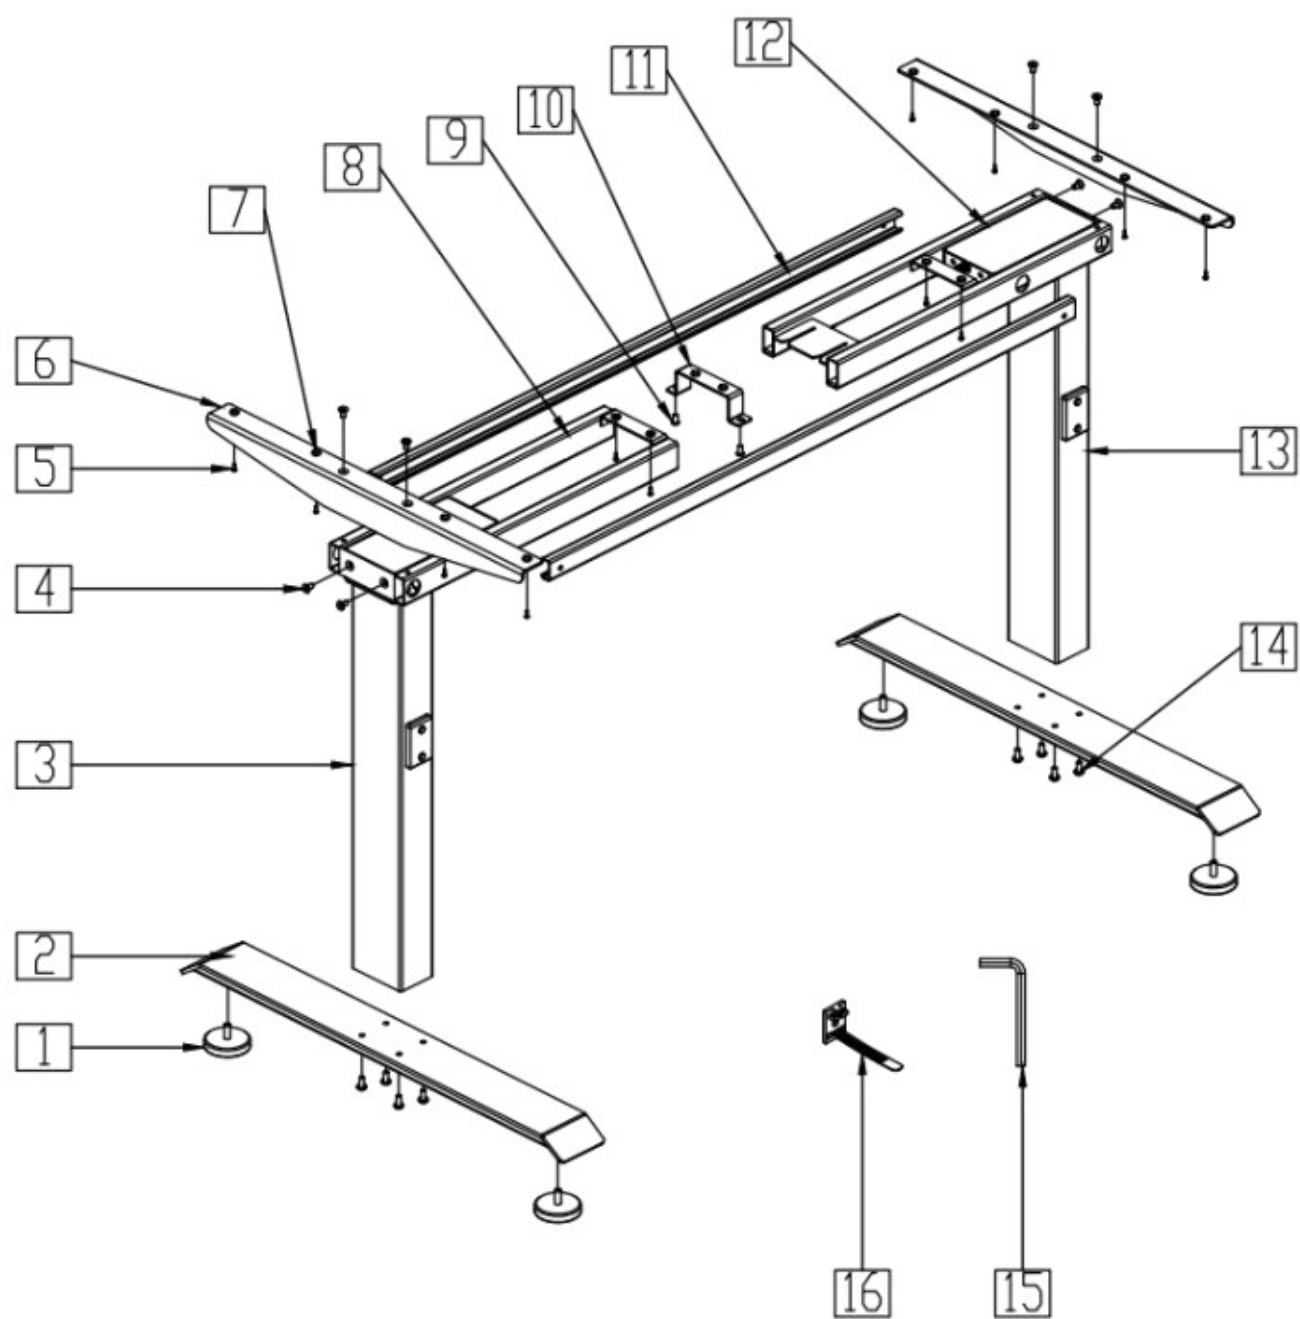


NO	Component Name	PCS
1	Leveling pads	4
2	Table feet	2
3	Column(right)	1
4	Bolt: M6x12	9
5	Screw:ST4x20	22
6	Side brackets	2
7	Rubber pad	14
8	Top frame-1	1
9	Bolt: M6x10	3
10	Centre bracket	1
11	Center rails	2
12	Top frame-2	1
13	Column(left)	1
14	Bolt: M6x16	9
15	Allen Wrench(4mm)	1
16	Cable Tie	5

Assembly Instructions

Step 1


Loosen the pre-installed bolts and Adjust the length of the top frame to match the size of the table top.

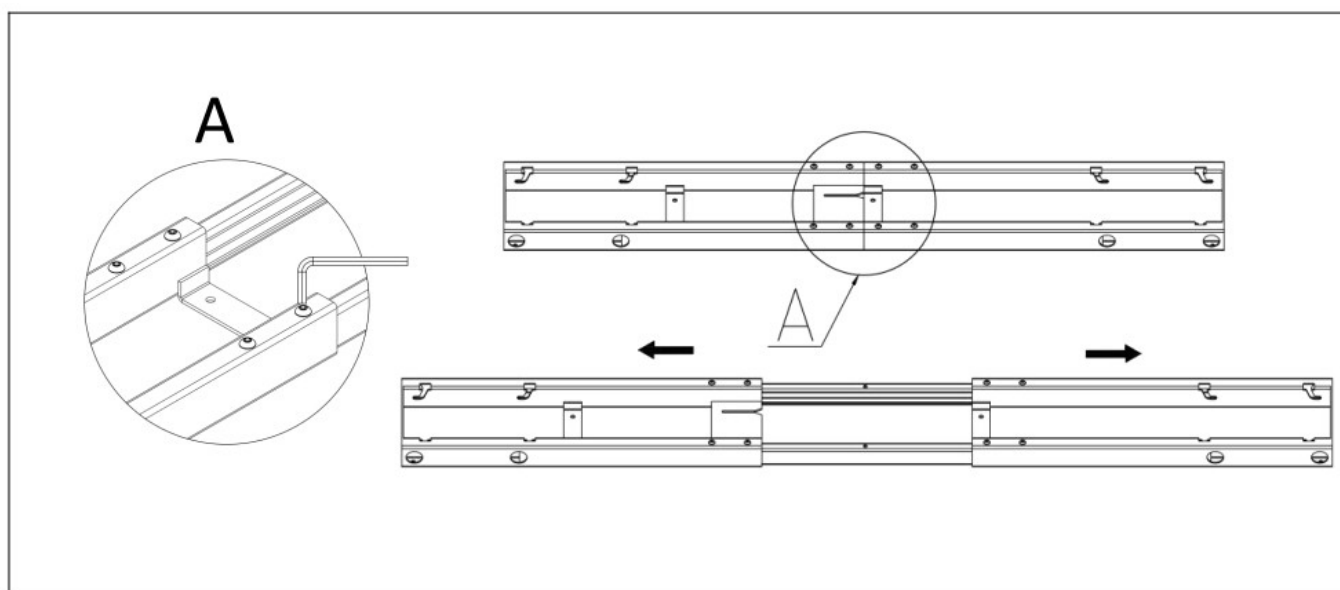

Step 2


Inset the column to the top frame.

- First fix lifting column with 4pcs screws M6x12 like B displayed
- And then tighten the pre-installed bolts like C displayed

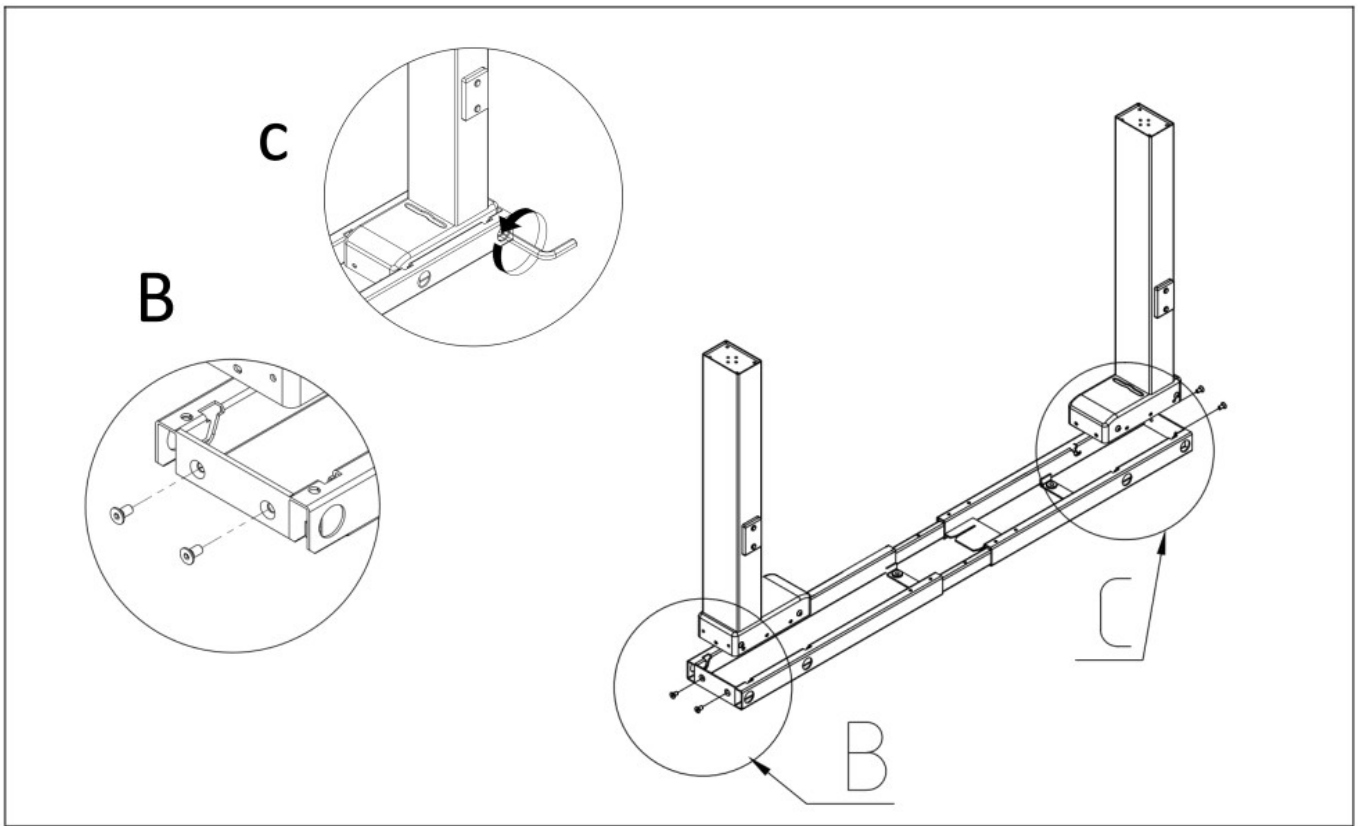


Step 3

Install the two table feet with Screws 8 pcs M6x16, Install the 4 pcs leveling pads

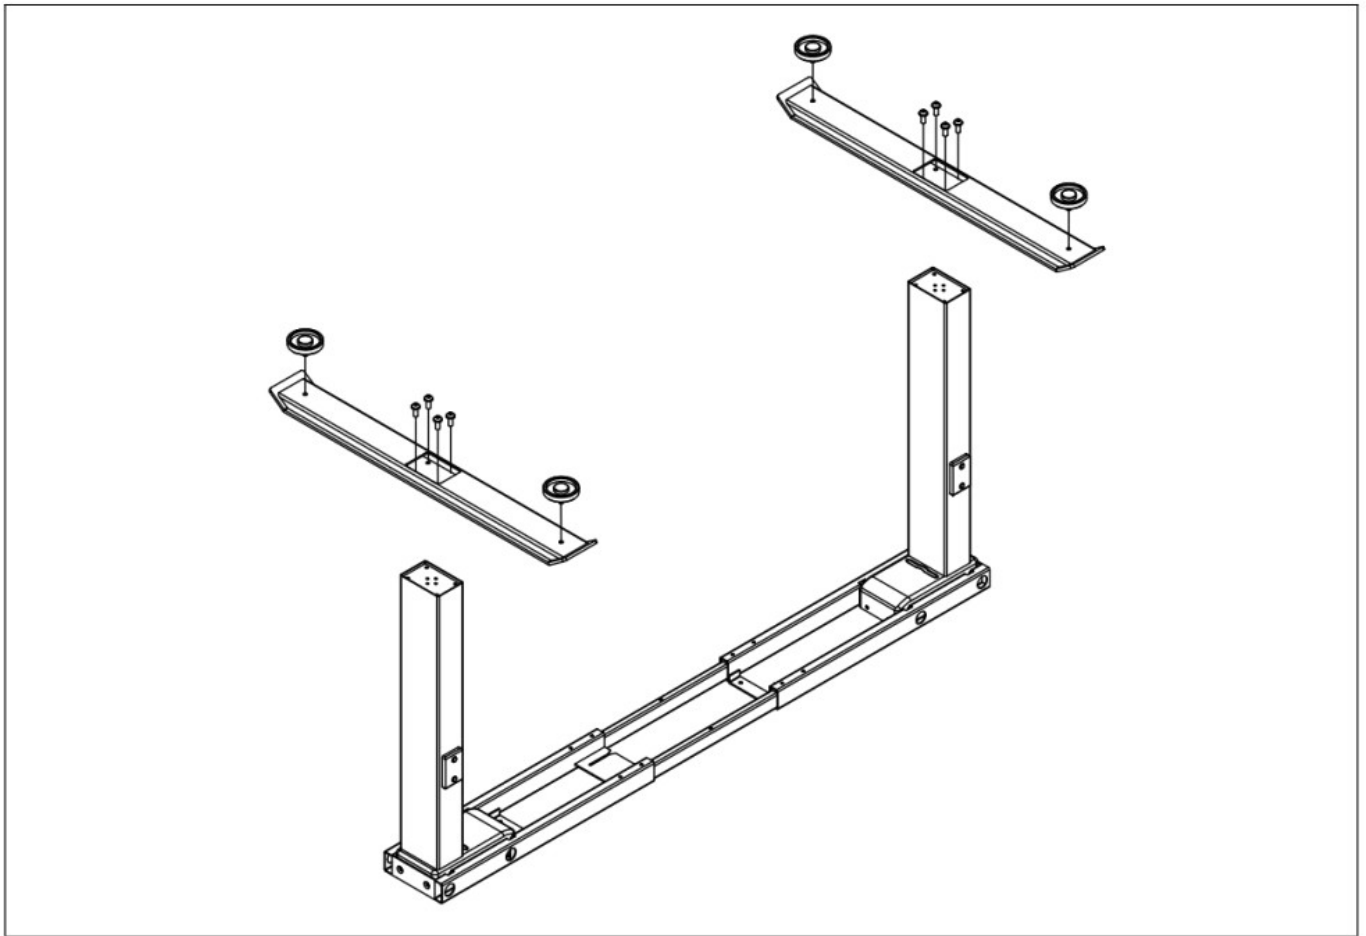


Step 4

Install the two side brackets with Screws 4 pcs M6x12,

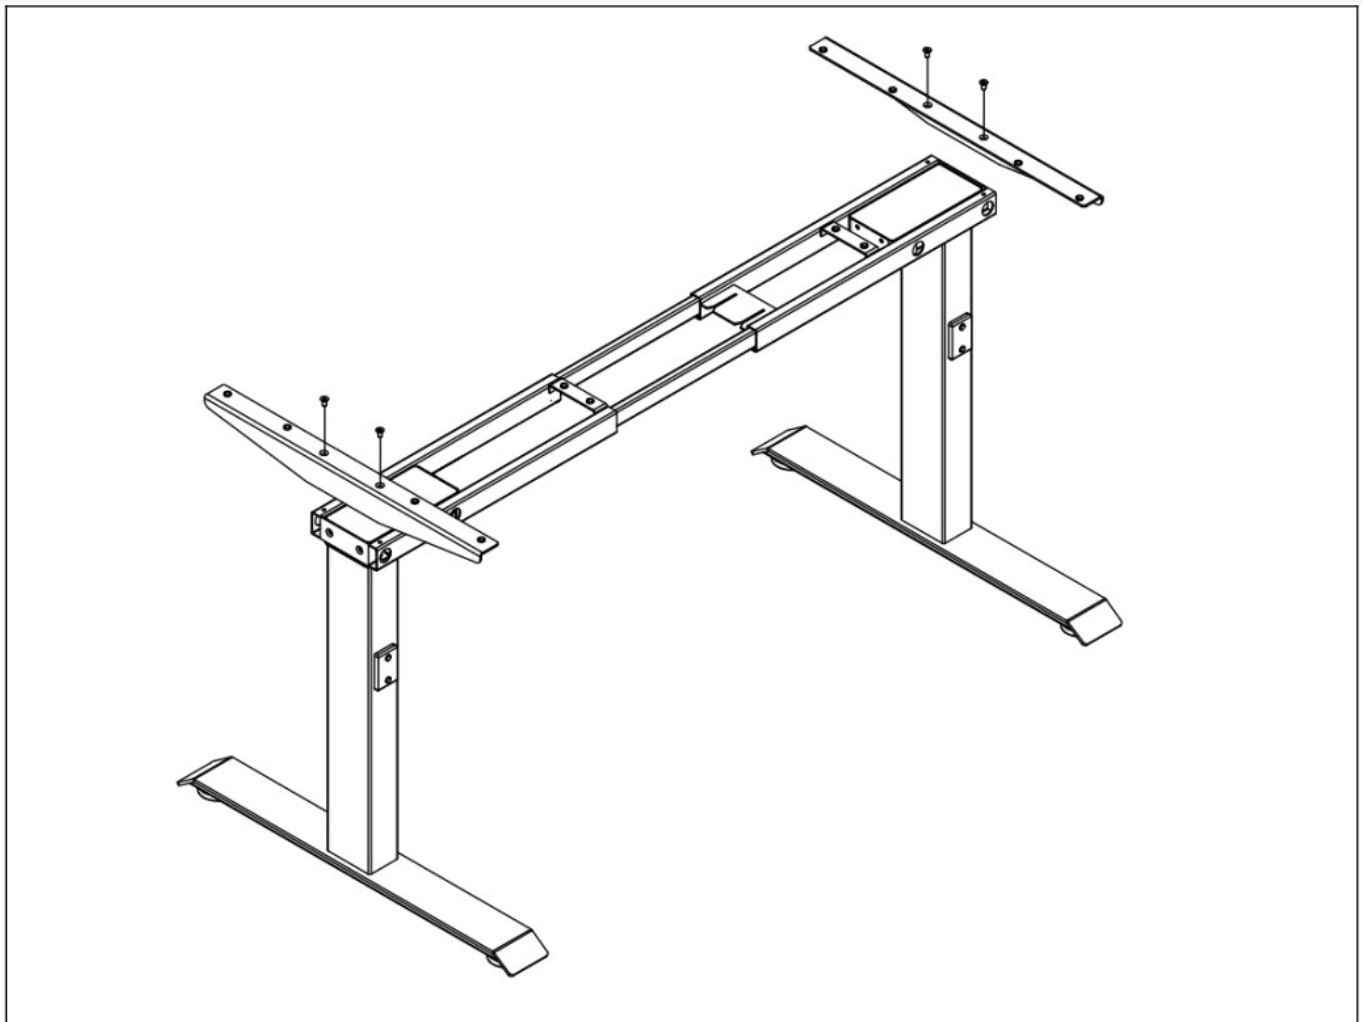**Step 5**


Mount the tabletop and fix it with 14 pcs screws ST4x20; Tighten the screws like D display to fix the top frame. Fix the centre bracket with 2 pcs screws M6x10

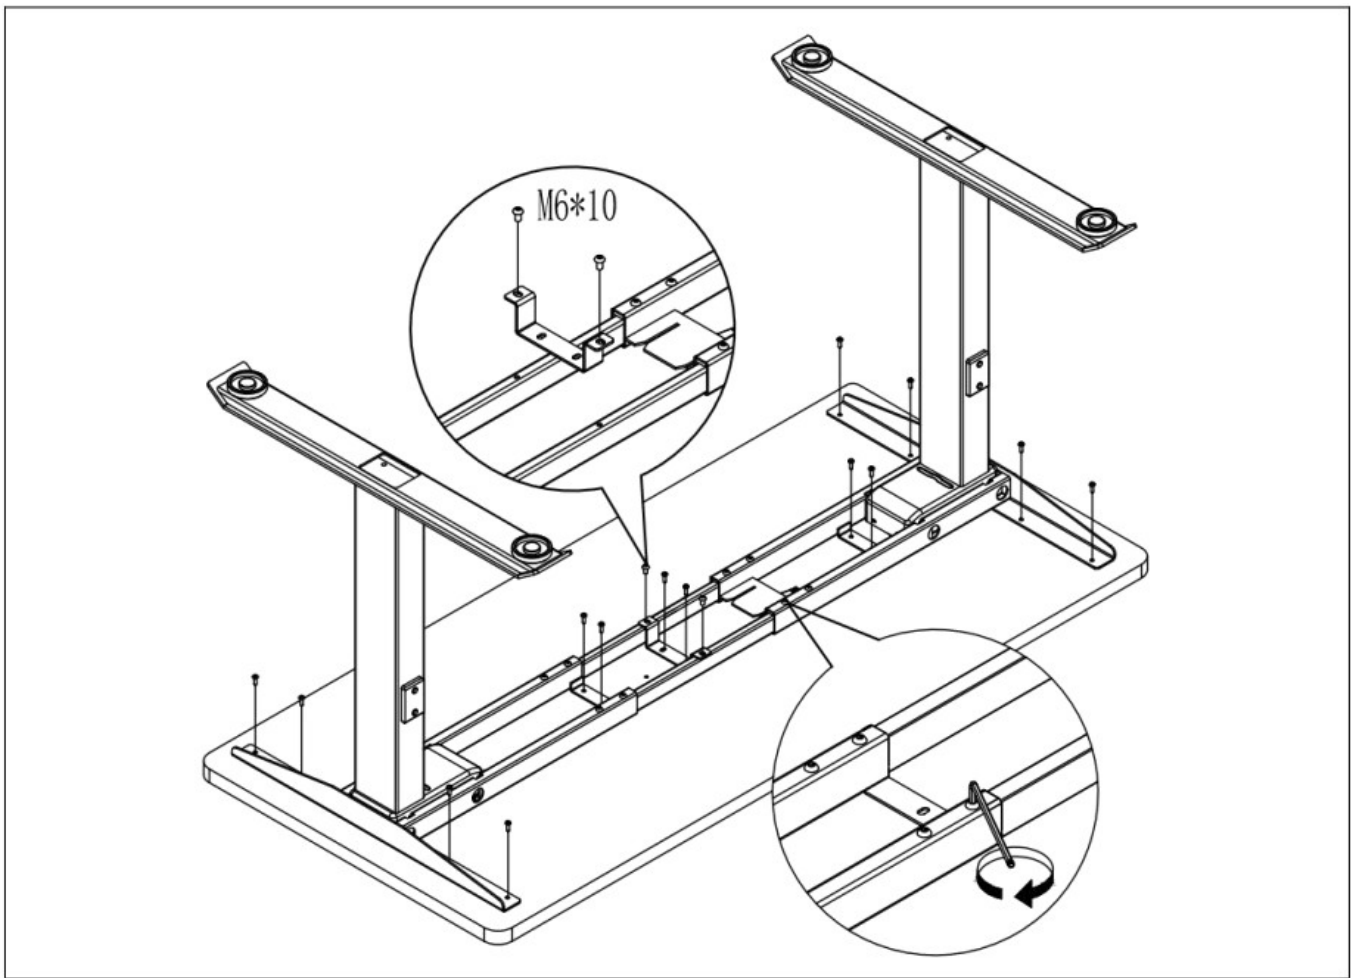

Cable tray installation

Step 1


- Fix the cable tray to the cable tray arms with 8 pcs M6x10 screws.

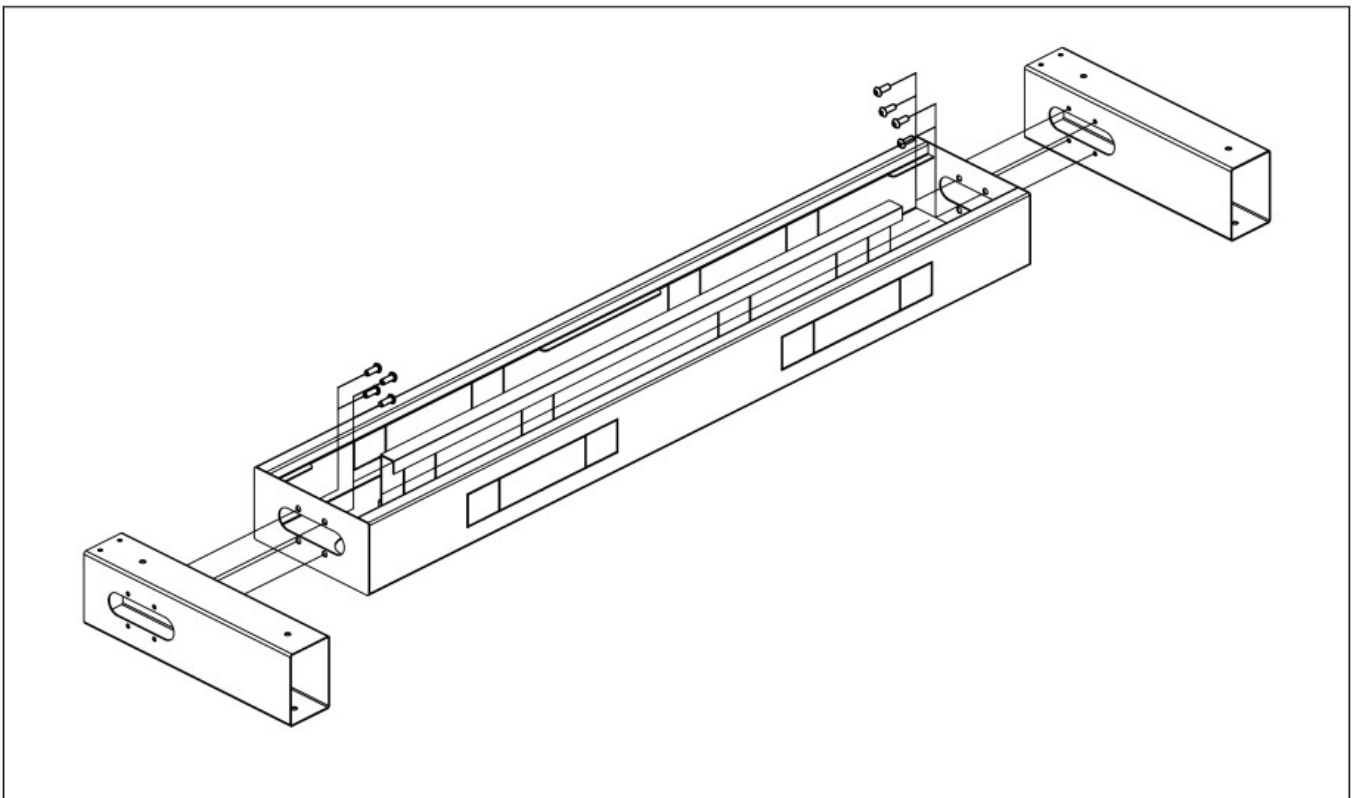

Step 1

- Install the U brackets to the desk frame with 4 pcs M8x10 screws.


– Mount the cable tray to the desk frame and fix it with 6 pcs M6x10 screws

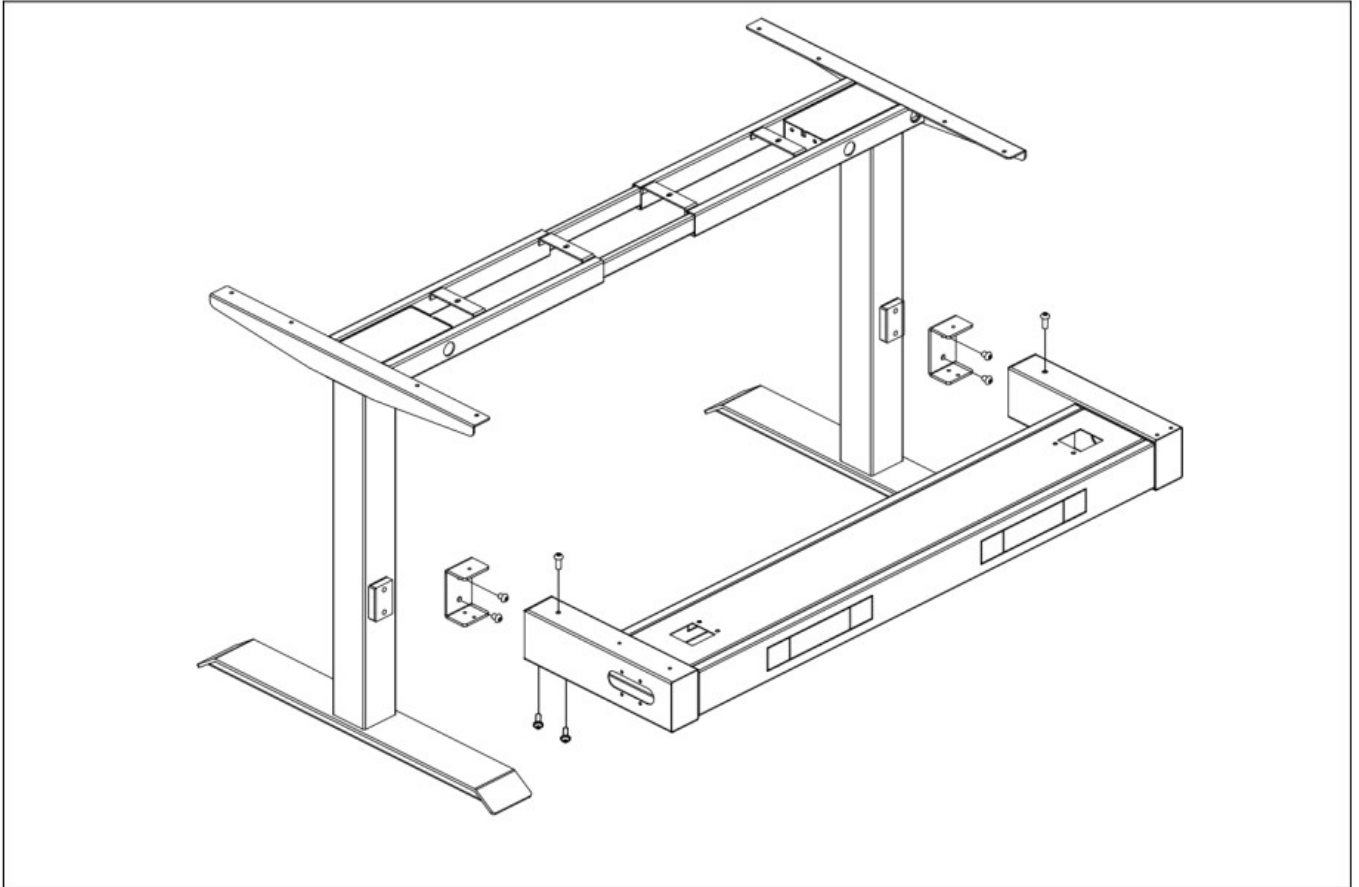

Screen panel installation


Step 1

– Insert the tapped plates to the screen panel

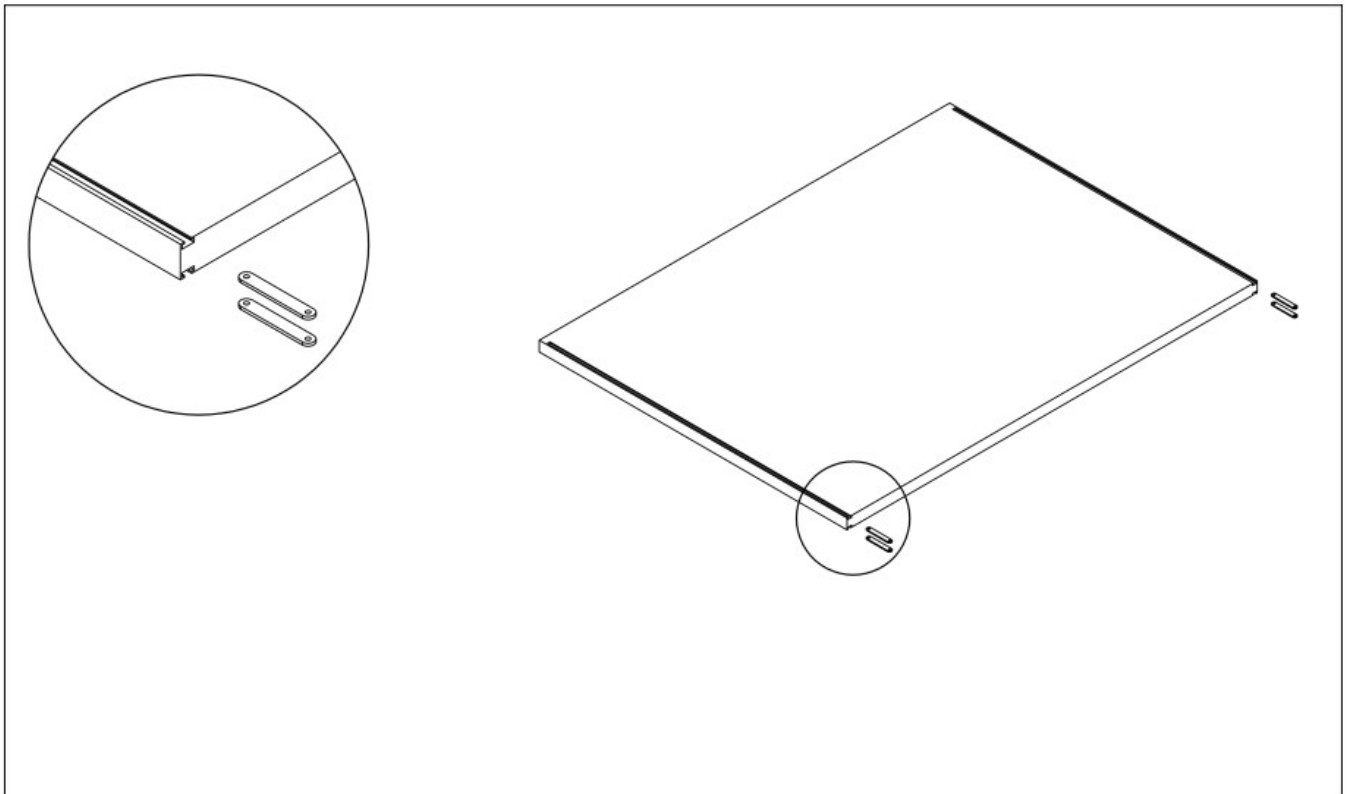


Step 2

– Install the brackets to the panel with 8 pcs M5x6 screws.

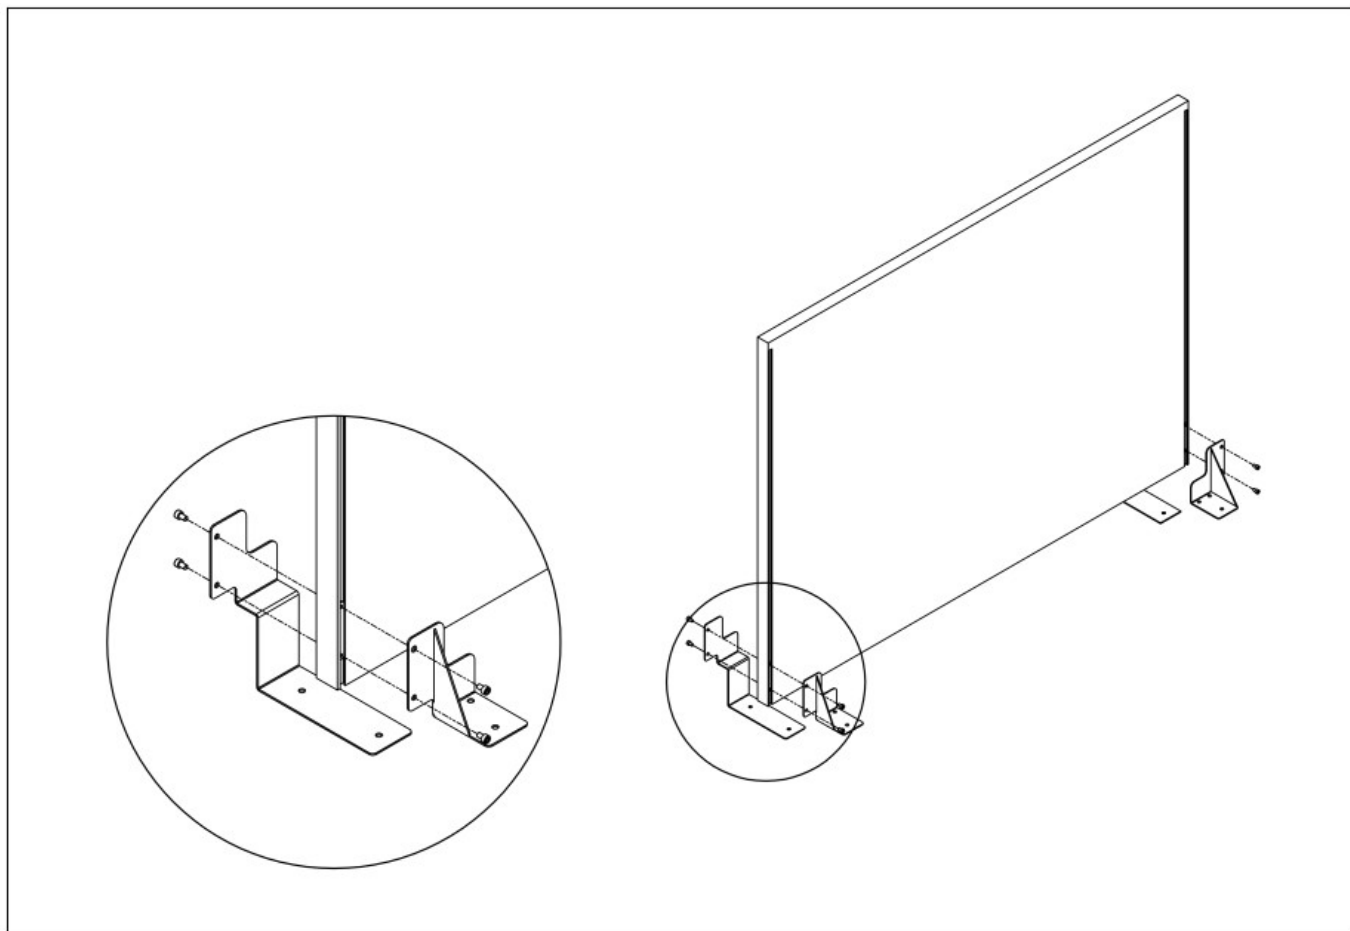

Step 3


– Fix the panel to the desk frame with 10 pcs M6x10 screws.

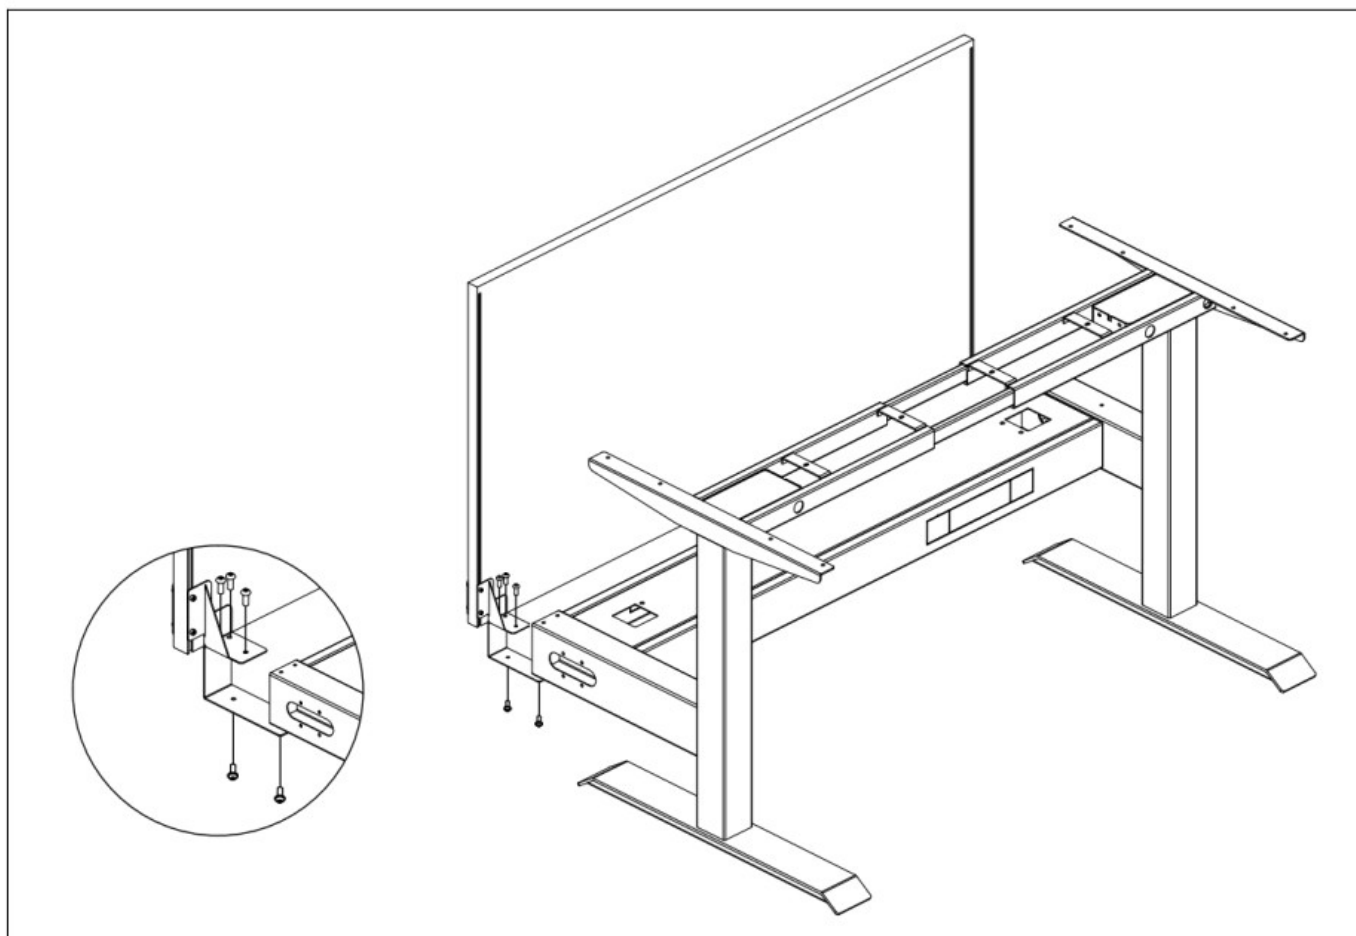



EPIC OFFICE
furniture.com.au

Documents / Resources

	<p>EPIC OFFICE Boost Static Single Sided Fixed Height Workstation [pdf] Instruction Manual Boost Static Single Sided Fixed Height Workstation, Single Sided Fixed Height Workstation, Si ded Fixed Height Workstation, Fixed Height Workstation, Height Workstation, Workstation</p>
---	--

Manuals+