



eurowise Q7 Rock Slider Performance Installation Guide

[Home](#) » [eurowise](#) » eurowise Q7 Rock Slider Performance Installation Guide 

Contents

- [1 eurowise Q7 Rock Slider Performance Installation Guide](#)
- [2 VAG OFFROAD Rock slider install \(Cayenne / touareg / Q7\)](#)
- [3 So 12 mounting points total](#)
- [4 T3 Touareg / Cayenne 2011+](#)
- [5 Read More About This Manual & Download PDF:](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)

eurowise Q7 Rock Slider Performance Installation Guide



VAG OFFROAD Rock slider install (Cayenne / touareg / Q7)

This installation is a guide to help install your rock sliders on gen 1 (2002-2010). Photo comparisons may vary as this installation guide is on a 2010 cayenne / touareg

NON Air suspension setup

The hardware kit is assembled is built for multiple applications so you may have leftover hardware. Nothing to be alarmed about



1. remove left and right lower plastic under these are held on with torx screws. You will no longer need the hardware or covers.



2. with the covers removed you will see all the body plugs that will need to be removed in order to install the rock sliders. They are just snapped in so you can pop out by hand or with a flat head. there is 6 total, the other 2 arrows point to the mounting points that are already threaded in the body, and the other 2 smaller blind holes are for the smaller locking hardware.

So 12 mounting points total

3. This is what the mounting hardware looks like. The larger bolt of the two go vertical in the side of the body (QTY 3 per side) and the last two go inside the lower frame rail parallel with the car. They will have plastic holding sleeves threaded onto them. don't remove these. they will make your life easier when it comes to installing them. We have paper in these photos but you will have plastic in place. slip the large end into the blind hole and then feed the opposite end in so the bolt now is flush.

When installing the rock sliders the bolt sandwiches between the rock slider on the frame for a secure mounting finish.



Heres the steps for the mounting hardware in order. Make sure to leave plastic washer on! (NOT SHOWN HERE)
The next photos below show how the Special L bolts we included are installed in the frame rails. (photos may not reflect your car.







Next with the hand of a friend install the rock slider into One person guiding the holes to line up with the hardware you have installed. With the rock slider lined up and thread of the hardware sticking into the rock slider install the supplied nuts and washers onto the rock slider. At this point just install everything hand tight because you can make adjustments later and then torque them down.
(photos below do not show the bars welded to the bracket for ease of installation photos)









1. next you can now push up on the entire assembly so the rock sliders are flush with the bottom of the now torque all the bolts to about 50ft lbs. (Very hand tight) no impact guns.
2. Now tighten the last 2 bolts that go into the frame where its been pre-threaded from the

Location for the custom hardware inserts on the body and frame rails.

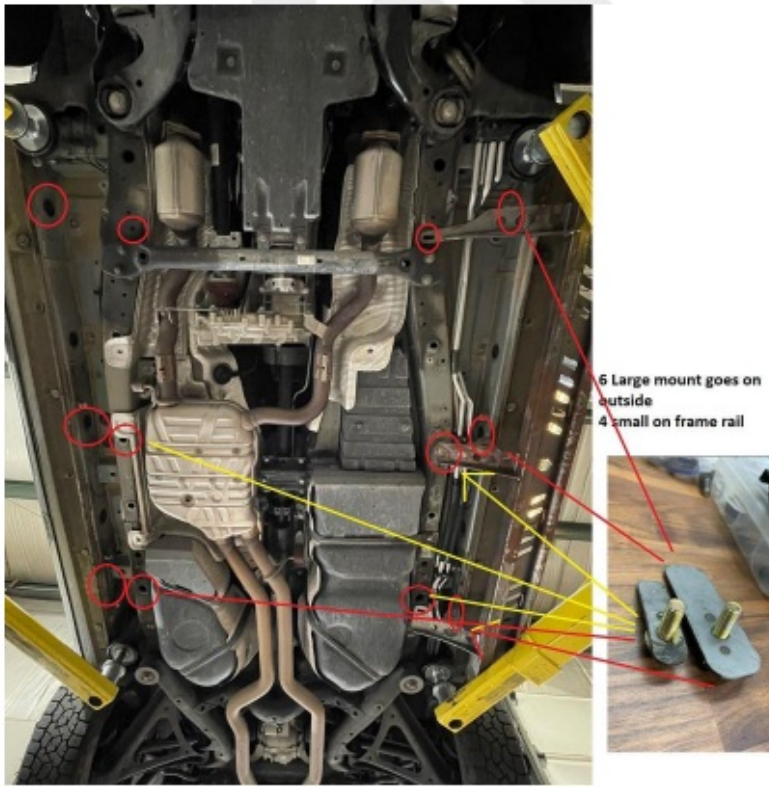

Guys with Air suspension follow these steps on the front brackets on both sides.
Remove 13MM bolt on the factory frame and install longer supplied bolt on both sides. The air suspension rock sliders front mounting bracket is the only difference between setups.

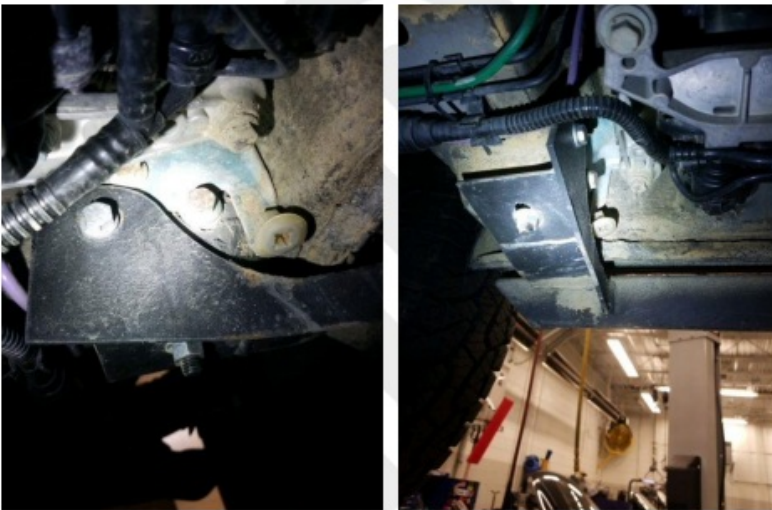



T3 Touareg / Cayenne 2011+

These tabs need to be bend up to slide the sliders back into proper position on each side. The tab is located in the middle of the rocker area.





IF YOU HAVE ANY QUESTIONS, COMMENTS, OR CONCERNS RELATED TO YOUR PRODUCT PLEASE CONTACT US!

Read More About This Manual & Download PDF:

Documents / Resources



[eurowise Q7 Rock Slider Performance](#) [pdf] Installation Guide

Q7 Rock Slider Performance, Q7, Rock Slider Performance, Slider Performance, Performance

References

- [Specializing in European Service, Performance and Fabrication – Eurowise Performance](#)
- [Eurowise Audi, BMW, Volkswagen, Mercedes, & Porsche Service](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.