



EVERBILT 90683 Vertical Rail Joiner Add On Instruction Manual

[Home](#) » [Everbilt](#) » EVERBILT 90683 Vertical Rail Joiner Add On Instruction Manual 

Contents

- [1 EVERBILT 90683 Vertical Rail Joiner Add On](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Installation](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)

EVERBILT

EVERBILT 90683 Vertical Rail Joiner Add On



The Vertical Rail Joiner-Add-On is a product that helps to connect two vertical rails. The package contains one Vertical Rail Joiner and a Drilling Template Box with model number 90683 and item number 1007-782-473. It can be installed in two scenarios, concrete, and drywall. The product comes with a 2-year warranty against defects in materials and workmanship.

Product Usage Instructions

Before installing the Vertical Rail Joiner, ensure that you have all the necessary tools and equipment. The package comes with a Drilling Template Box that includes instructions for both scenarios. Follow the appropriate scenario instructions to install the Vertical Rail Joiner.

Scenario 2 Concrete


1. Place the Drilling Template Box on the concrete surface where you want to install the Vertical Rail Joiner.
2. Mark the holes on the concrete using a marker or pen.
3. Drill the holes using a hammer drill and masonry bit.
4. Insert the anchors provided in the package into the holes.
5. Attach the Vertical Rail Joiner to the anchors using the screws provided.

Scenario 3 Drywall

1. Place the Drilling Template Box on the drywall surface where you want to install the Vertical Rail Joiner.
2. Mark the holes on the drywall using a marker or pen.
3. Drill the holes using a drill and the appropriate bit for drywall.
4. Insert the anchors provided in the package into the holes.
5. Attach the Vertical Rail Joiner to the anchors using the screws provided.

If you encounter any issues during installation or have questions about the product, please contact 1-800-305-1726 for further assistance. **Note** This product contains chemicals, including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, visit www.P65Warnings.ca.gov.

Use and Care Guide Vertical Rail Joiner-Add-On

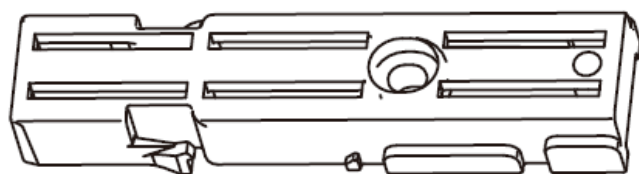

A

Vertical Rail Joiner x 1



H

Drilling Template Box x 1

(See Scenario 2 Fig. 3 or Scenario 3 Fig. 8)



Installation

SCENARIO 1 STUD

- Push vertical rail joiner (A) up into the top vertical rail as shown, and secure the vertical rail joiner (A) on hole B






with Panhead screw (#12 x 2 in.) (see Fig. 1).

- Put the lower vertical rail as shown and secure the lower vertical rail on hole C and D with a Panhead screw (#12 x 2 in.) (see Fig. 2).

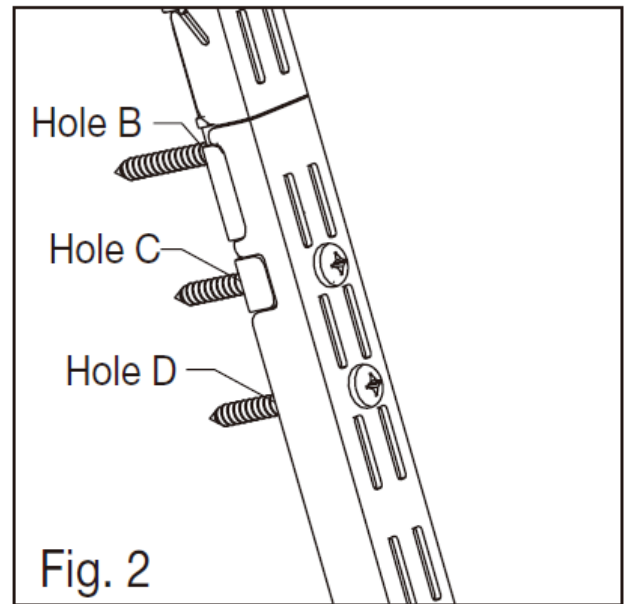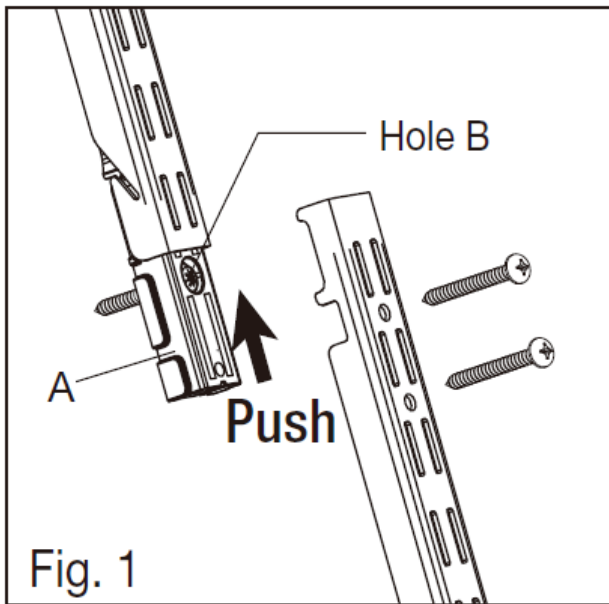






SCENARIO 2 CONCRETE

- Tear the drilling template box (H) according to the dashed line (see Fig. 3).
- Align the drilling template box (H) as a locator as shown and mark the holes on the wall (see Fig. 4).
- Drill 1/4 in. holes and insert wall anchors (1/4 in.) into holes B, C, and D (see Fig. 5).
- Push vertical rail jointer (A) up into the top vertical rail as shown, and secure the vertical rail jointer (A) on hole B with a Panhead screw (#12 x 2 in.) (see Fig. 6).
- Put the lower vertical rail as shown and secure it on holes C and D with a Panhead screw (#12 x 2 in.) (see Fig. 7).

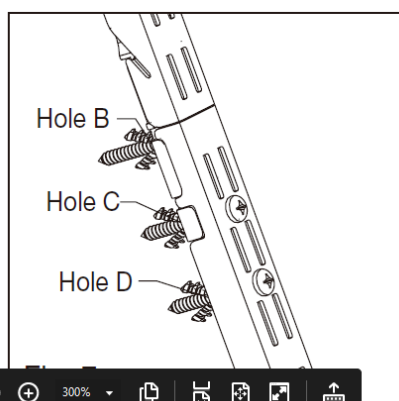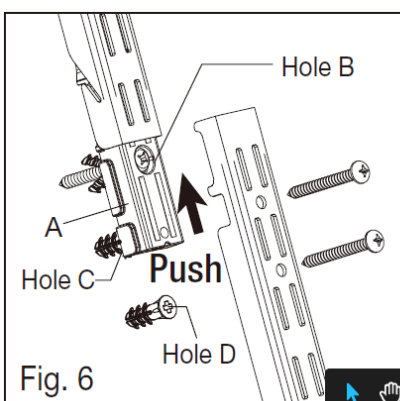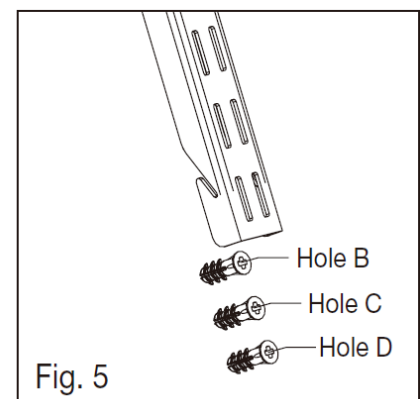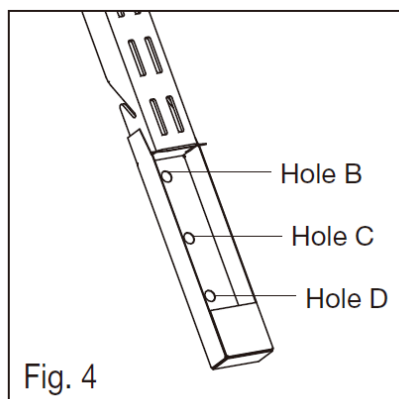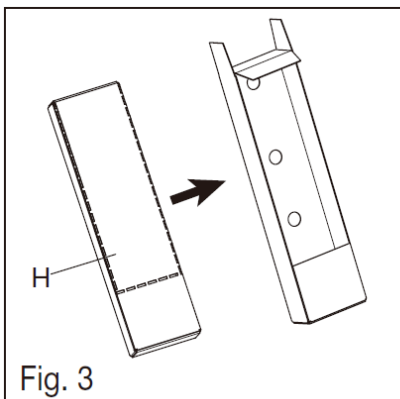

SCENARIO 3 DRYWALL

- Tear the drilling template box (H) according to the dashed line (see Fig. 8).
- Align the drilling template box (H) as a locator as shown and mark the holes on the wall (see Fig. 9).
- Drill 1/4 in. holes for holes B and C, and drill 1/2 in. hole for hole D. Insert wall anchors (1/4 in.) into holes B and C (see Fig. 10).
- Push vertical rail joiner (A) up into the top vertical rail as shown, secure the vertical rail joiner (A) on hole B with a Panhead screw (#12 x 2 in.) (see Fig. 11). Put the lower vertical rail as shown and secure it on hole C with a Panhead screw (#12 x 2 in.) and on hole D with toggle (3/16 in.) and bolt (3 in.) (see Fig. 12). Make sure the toggle (3/16 in.) and the bolt (3 in.) are installed on the lower vertical rail before secure.

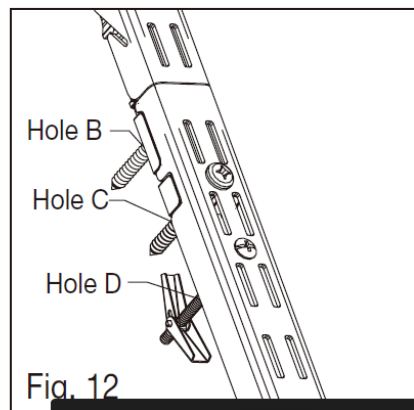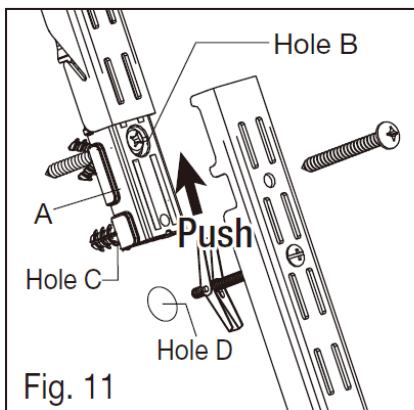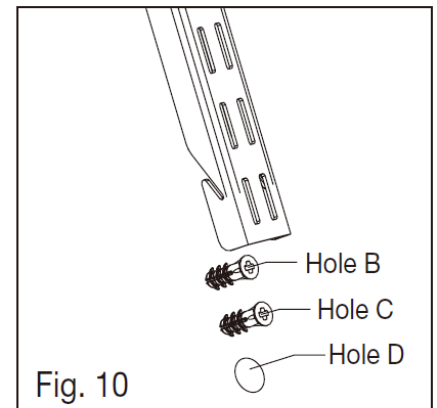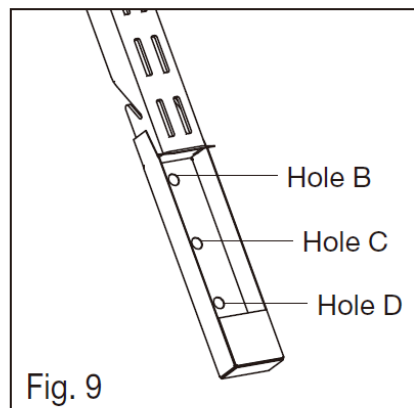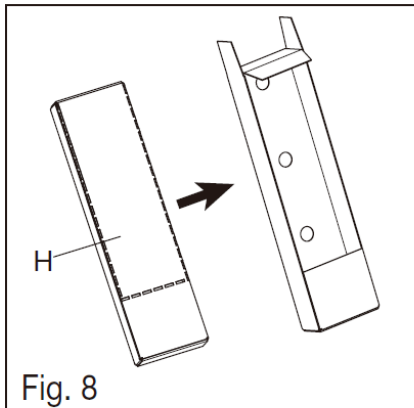


Warranty

This product is guaranteed to be free of defects in materials and workmanship for 2 years from the date of purchase. If this product is defective, call 1-800-305-1726 or return the product to the store from which it was purchased for a replacement. The guarantee does not include normal wear and tear.HOMEDEPOT.com. Please contact 1-800-305-1726 for further assistance.



WARNING This product can expose you to chemicals, including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

Documents / Resources

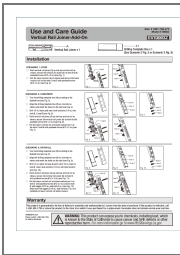

[EVERBILT 90683 Vertical Rail Joiner Add On](#) [pdf] Instruction Manual
90683 Vertical Rail Joiner Add On, 90683, Vertical Rail Joiner Add On, Rail Joiner Add On, Joiner Add On, Add On

References

-  [The Home Depot](#)