

EXXENTRIC kBox4 Active Starter System Installation Guide

Home » EXXENTRIC » EXXENTRIC kBox4 Active Starter System Installation Guide The Company of the C



EXXENTRIC kBox4 Active Starter System Installation Guide



Contents

- 1 Installation Guide
- 2 Documents /

Resources


- 2.1 References
- 3 Related Posts

Installation Guide

Step 1

Flip the kBox over and remove the Snap-on Shaft Cover by hand.

Snap off the Battery Cover with a flat screwdriver

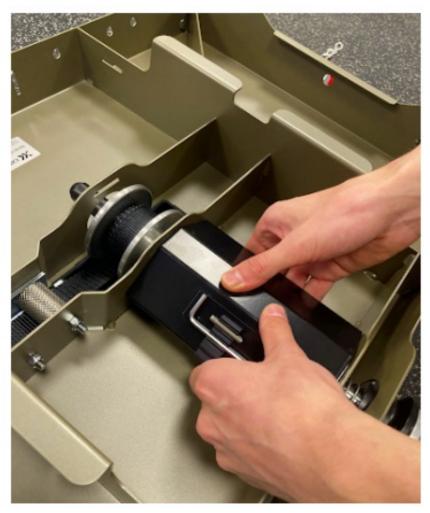


Step 3
Slide in your new kMeter II so that the screws of the Chassis fit into the openings on the kMeter II's plastic base.

Note! Make sure the Sensor Disk is centered and as deep down as possible into the Reading Fork without touching the Reading Fork or the Circuit Board.



Step 4
Secure the kMeter II in place by carefully tightening the M6 nuts with a 10mm wrench
Step 5
Snap the Battery Cover back on after installing the kMeter II

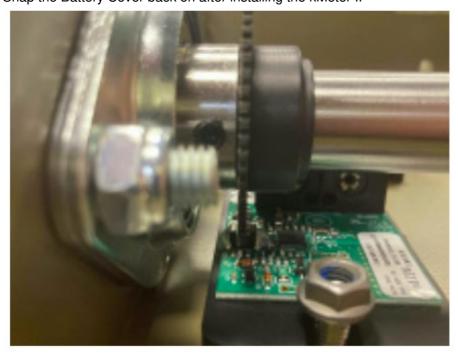

If you need further assistance, please contact us through https://exxentric.com/support/



Documents / Resources



EXXENTRIC kBox4 Active Starter System [pdf] Installation Guide kBox4, kBox4 Active Starter System, Active Starter System, Starter System, System

References

- Help | Exxentric | Flywheel Training
- User Manual

Manuals+, Privacy Policy