



FERRO CONCEPTS 3AC Side Soft Armor User Manual

[Home](#) » [Ferro Concepts](#) » FERRO CONCEPTS 3AC Side Soft Armor User Manual 

FERRO CONCEPTS 3AC Side Soft Armor User Manual



Contents

- [1 Instructions](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

Instructions

1. FIND THE TOP OF THE ARMOR AS WELL AS THE TOP OF THE POUCH. THE TOP OF THE ARMOR IS MARKED WITH A BLACK DOT/TOP MARKING. THE TOP OF THE POUCH CAN BE IDENTIFIED BY THE STITCHED RECTANGLE ON THE HOOK SECTION OF VELCRO.



2. THE BODY SIDE, AS MARKED ON THE LABEL, SHOULD FACE THE BODY. THE BODY SIDE NEEDS TO FACE OPPOSITE OF THE OPENING.



3. OPEN UP THE POUCH AND PUSH ONE END OF THE ARMOR IN. YOU MAY NEED TO STRAIGHTEN THE BAG TO LINE THE CORNERS UP.



4. BEND THE ARMOR INTO AN S-SHAPE AND BEGIN GUIDING IT INTO THE OTHER END. PUSH ON THE MIDDLE OF THE S-SHAPE TO FULLY INSERT THE ARMOR.




5. LINE THE BLACK VELCRO UP WITH THE INNER HOOK VELCRO.



6. CLOSE THE VELCRO FLAP. TO GET IT LINED UP, FOLD AT THE CENTER OF THE ARMOR TO AID IN CLOSING THE VELCRO OPENING ENSURING A PROPER, TIGHT FIT.



7. ADJUST FABRIC ALONG THE EDGES AND ALIGN THE SEAMS WITH THE EDGES OF THE ARMOR.

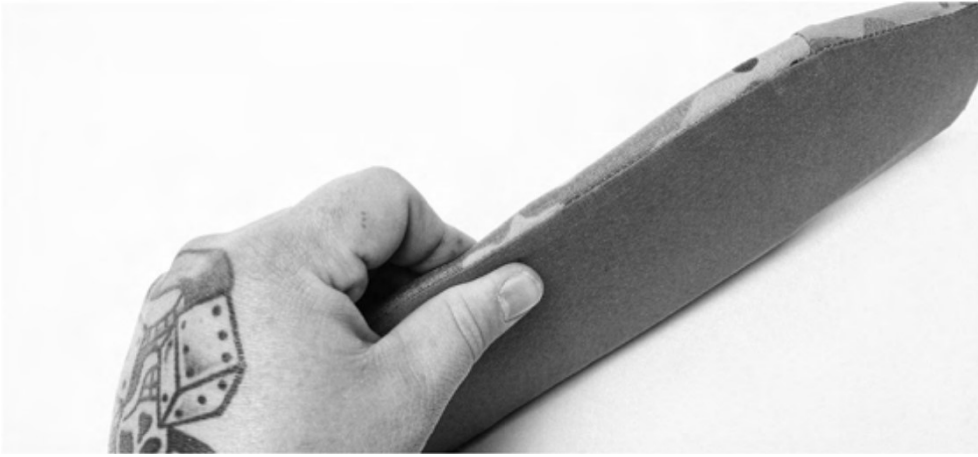

8. CONNECT THE HOOK AND LOOP BETWEEN THE CUMMERBUND AND 3AC SIDE SOFT ARMOR. THE VELCRO PATCH SHOULD LINE UP PERFECTLY WITH THE 3" ASSAULT CUMMERBUND.



WANT VIDEO INSTRUCTIONS?

<https://www.youtube.com/watch?v=ogPKL9GsH8Y>

Documents / Resources



[FERRO CONCEPTS 3AC Side Soft Armor](#) [pdf] User Manual
3AC Side Soft Armor, 3AC, Side Soft Armor, Soft Armor, Armor