

## FORMD T1

FORMD T1  
Reference V2.0  
Want Some More  
Photos



# FORMD T1 Reference V2.0 Want Some More Photos Instruction Manual

[Home](#) » [FORMD](#) » FORMD T1 Reference V2.0 Want Some More Photos Instruction Manual 

### Contents

- [1 FORMD T1 Reference V2.0 Want Some More Photos](#)
- [2 Product Usage Instructions](#)
- [3 Assembly Manual](#)
- [4 TOOLS](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)
- [6 Related Posts](#)

# FORMD T1

FORMD T1 Reference V2.0 Want Some More Photos



## Product Specifications

- Model: T1 REF V2.0
- Manufacturer: [FormDT1.com](https://formdt1.com)
- Fasteners Included: M3 Thumbscrew, M3 Flat Head Screw, M3 Countersunk Screw, M3 Standoff, M3 Female Standoff, CSM3-5, CSM3-8

## Product Usage Instructions

### Assembly

1. Lay out all the components included in the package on a clean, flat surface.
2. Identify the various panels and fasteners according to the manual.
3. Assemble the side panels, top/bottom panels, rear panel, and front panel according to the provided instructions.
4. Use the appropriate fasteners for each component and ensure not to overtighten the screws.

### Installation of Components

1. Install the SFX PSU Bracket using the provided screws.
2. Attach the Case Feet to the bottom panel of the case.
3. Secure the C13-C14 Inlet Cable to the side panels.
4. Install the Fan Bracket and Lock Bar as per the manual.

### Power Button and Fan Installation

1. Mount the Power Button on the front panel of the case.
2. Attach the Fan Bracket to the designated area inside the case.
3. Ensure all components are securely fastened but not over tightened.

## Frequently Asked Questions (FAQ)


**Q: What should I do if I encounter resistance while tightening the screws?**

A: Do not tighten more than one-quarter turn once resistance is encountered. Each fastener is different, so be cautious not to over tighten.

**Reference V2.0**

**Assembly Manual**

T1 REF V2.0

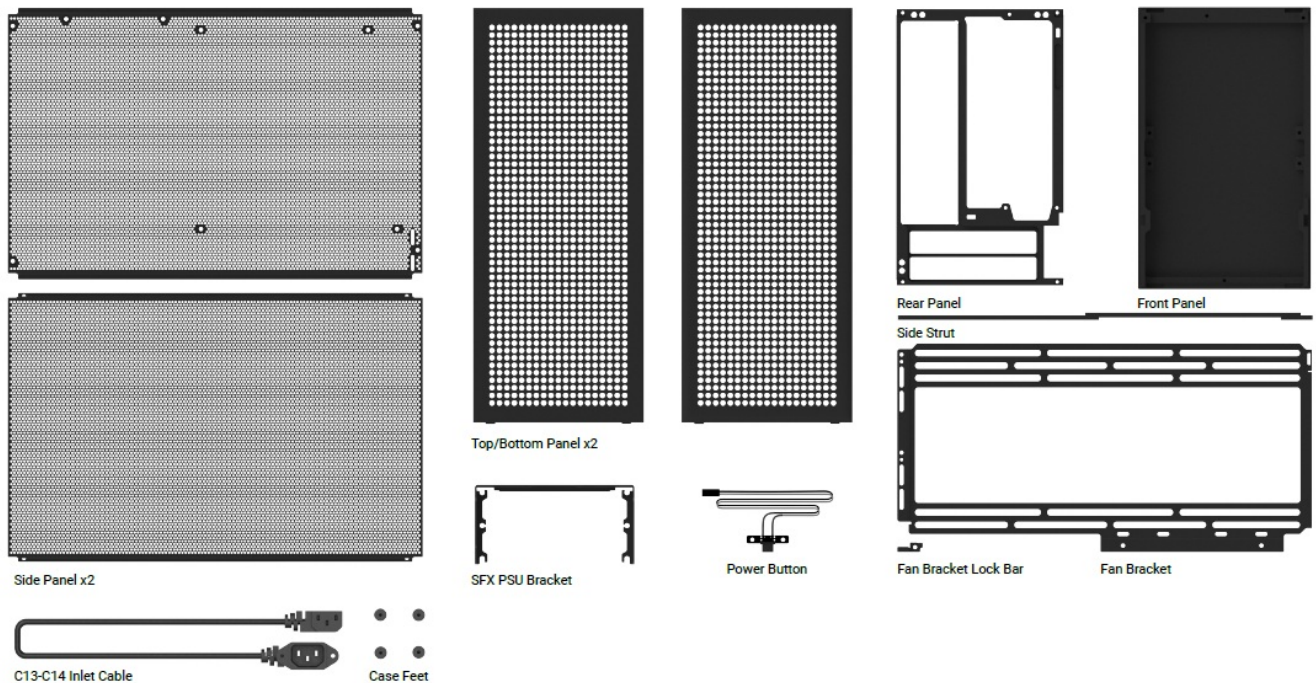

T1 REF V2.0

**CAUTION:** do NOT overtighten the screws. Once resistance is encountered, do not tighten more than one-quarter turn. Each fastener is different in length or head shape, and putting them to each other is an excellent way to identify them.

\* The screw pack is intended for standard T1 (Sandwich).

[FormDT1.com](http://FormDT1.com)

**TOOLS**



M3 Thumbscrew  
(THUMB-6)



M3 Flat Head Screw  
(M3-4)



M3 Countersunk Screw  
(CSM3-5)



M3 Countersunk Screw  
(CSM3-8)




M3 Standoff  
(STANDOFF-5)




M3 Female Standoff  
(STANDOFF-F6, for motherboard only)

## Fasteners

M3-4 x6 STANDOFF-F6 x4

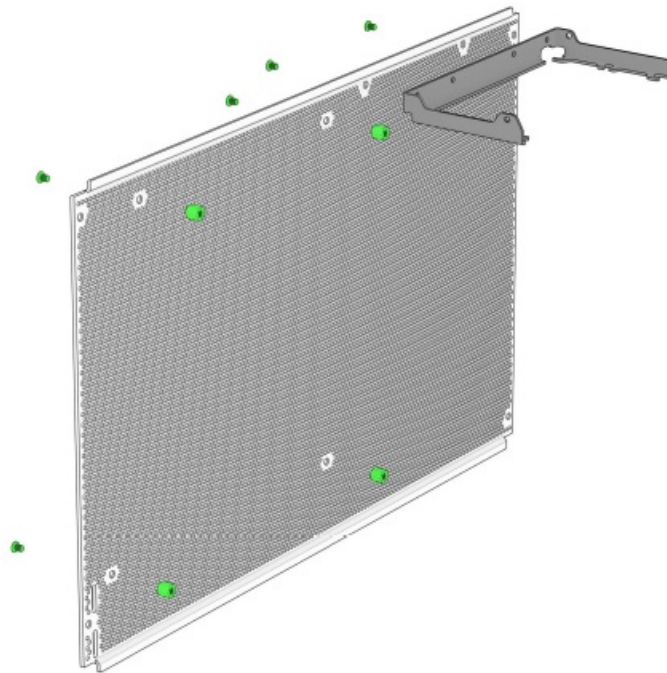

**Fasteners:** M3-4 x4

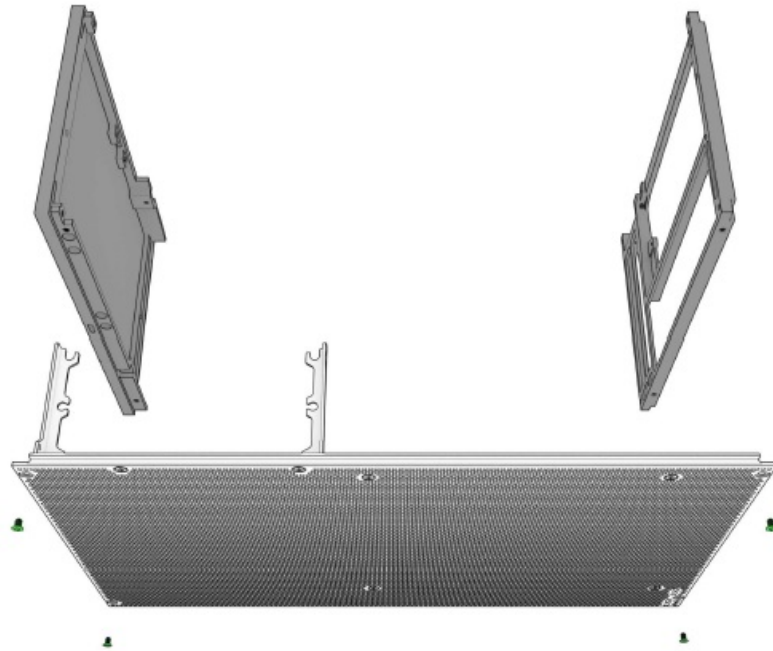

**Fasteners:** CSM3-5 x2




**Fasteners:**

M3-4 x4

#6-32 x4

\* #6-32 used for the power supply installation is not included

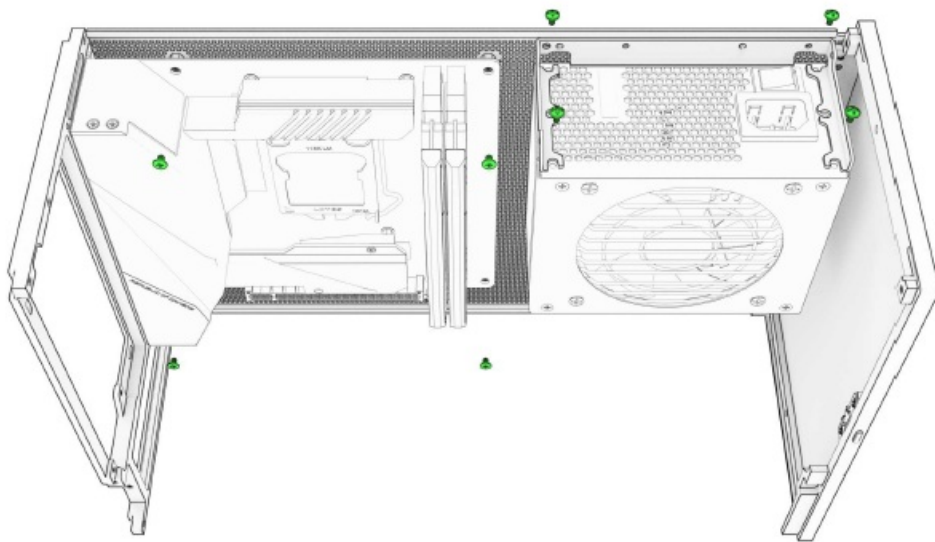


**Fasteners:** CSM3-8 x2




**Fasteners:** M3-4 x2




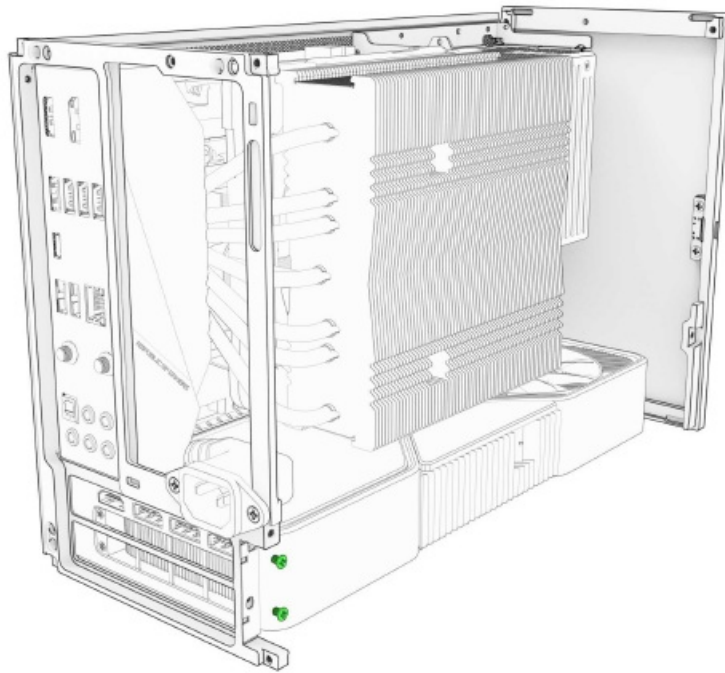


**Fasteners:**


- M3-4 x1
- CSM3-5 x3
- CSM3-8 x3

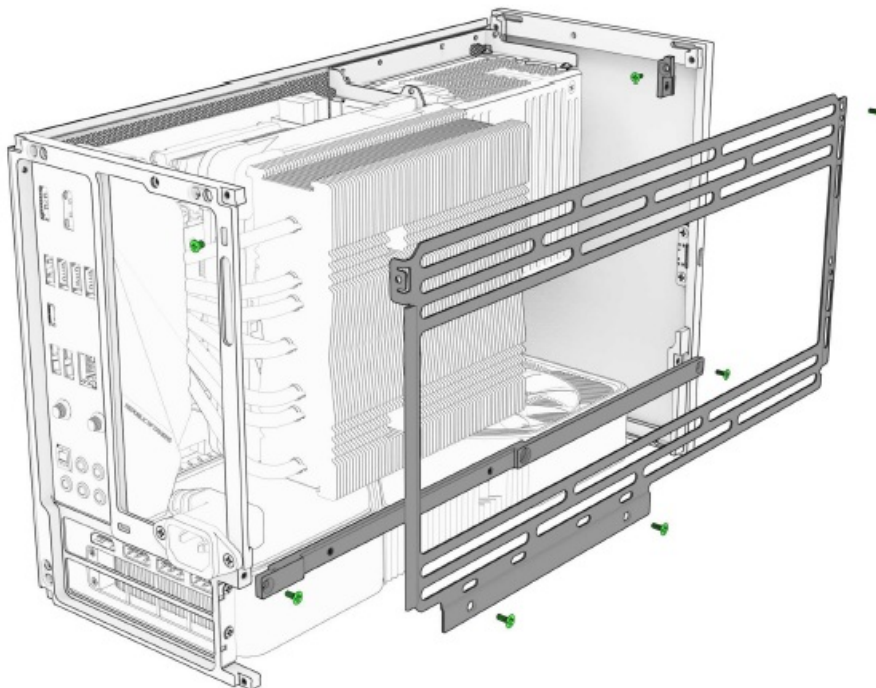

**Fasteners:** CSM3-5 x4

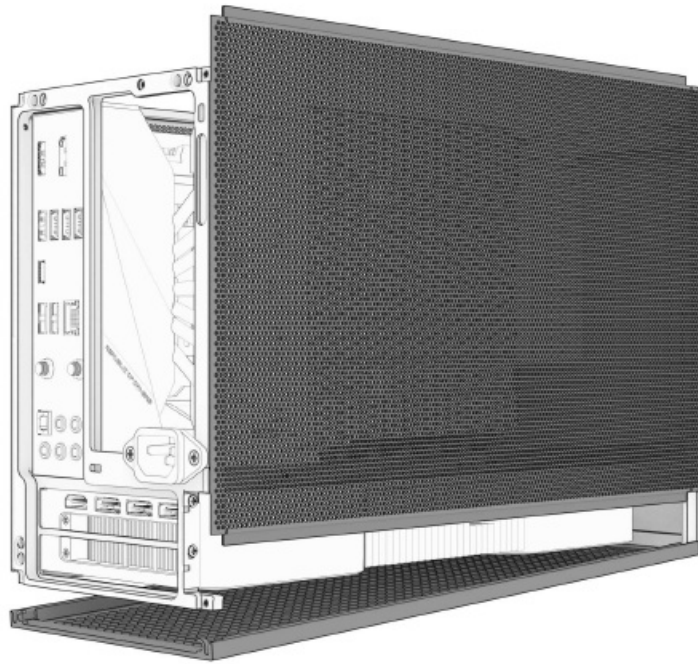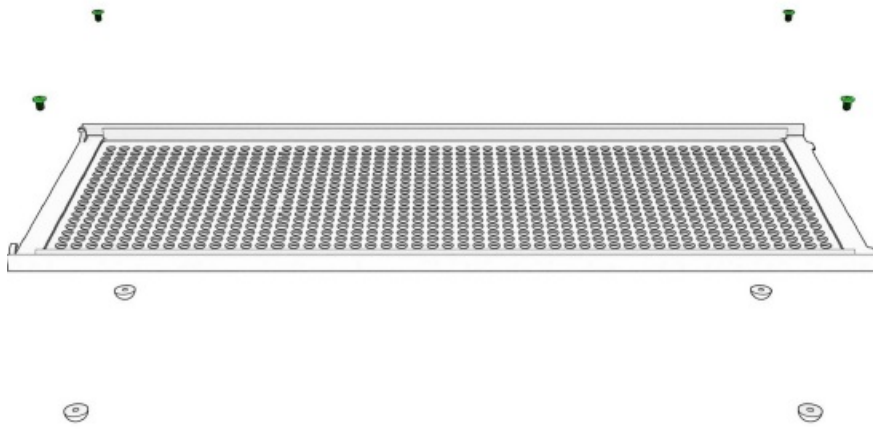


**Fasteners: THUMB-6 x4**

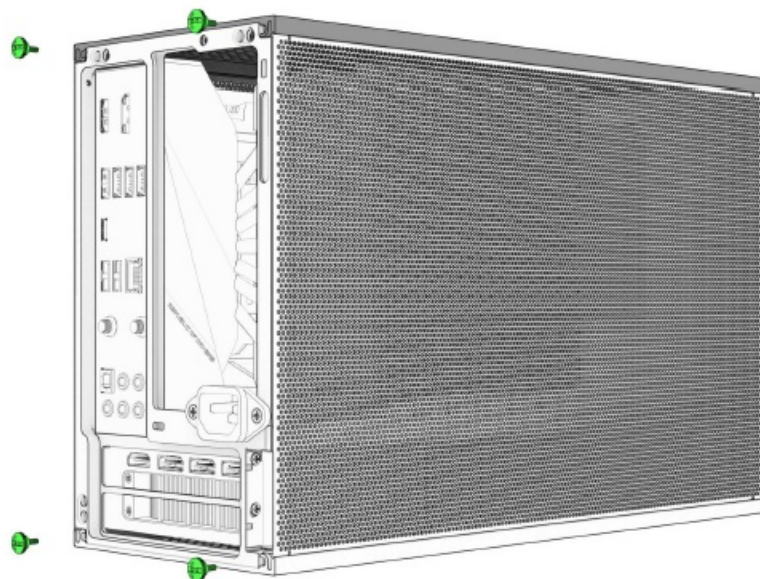

Brought to you by the FORMD Team.



## Documents / Resources

	<a href="#">FORMD T1 Reference V2.0 Want Some More Photos</a> [pdf] Instruction Manual T1 Reference V2.0 Want Some More Photos, T1 Reference, V2.0 Want Some More Photos, So me More Photos, More Photos, Photos
---	---

## References

- [F FormD T1 - 9.95L Premium SFF Solution](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.